




8. Pack the inboard joint with molybdenum disulfide grease.

**Grease Quantity:** 120~130g


9. Fit the inboard joint onto the driveshaft.

**CAUTION:** Hold the driveshaft assembly so the inboard joint points up, to prevent it from falling off.

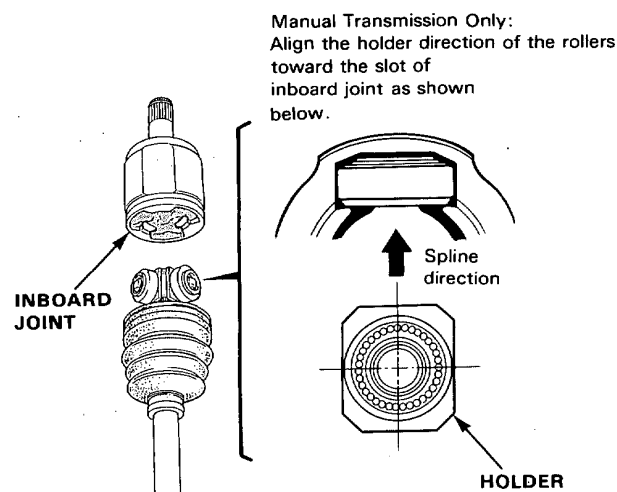


10. Adjust the length of the driveshafts to the figure below, then adjust the boots to halfway between full compression and extension.

**NOTE:** The ends of boots seat in the groove of the driveshaft and joint.

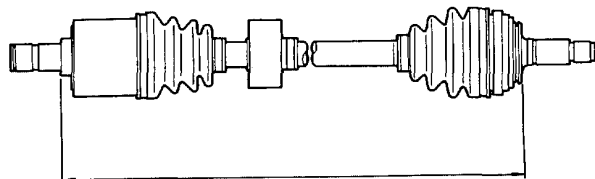

**Manual Transmission:**  
L. R. 478.7—483.7 mm (18.85—19.04 in)  
**Automatic Transmission:**  
L. 836.7—841.7 mm (32.94—33.14 in)  
R. 478.7—483.7 mm (18.85—19.04 in)


11. Install new boot bands on the boot and bend both sets of locking tabs.
12. Lightly tap on the doubled-over portions to reduce their height.

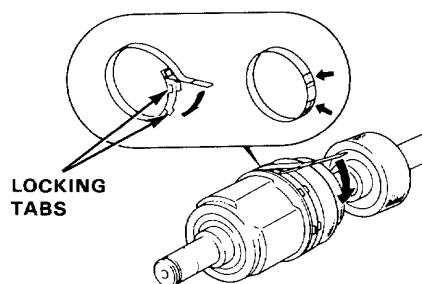

13. Position the dynamic damper as shown below.

**DYNAMIC DAMPER**

Automatic Transmission left driveshaft only.

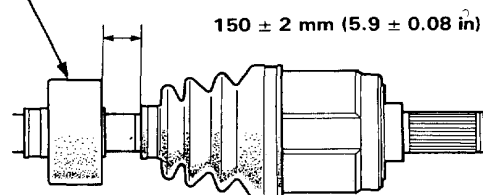

14. Lightly tap on the doubled-over portion to reduce its height.
15. Install a new dynamic damper band and bend down both sets of locking tabs.

(cont'd)


## Driveshafts

### Reassembly (cont'd)

16. Install a new set ring in the driveshaft groove.
17. Install the inboard end of the driveshaft into differential or intermediate shaft.

#### CAUTION:

- Always use a new set ring whenever the driveshaft is being installed.
- Make sure the driveshaft locks in the differential side gear groove, and the CV joint subaxle bottoms in the differential or intermediate shaft.

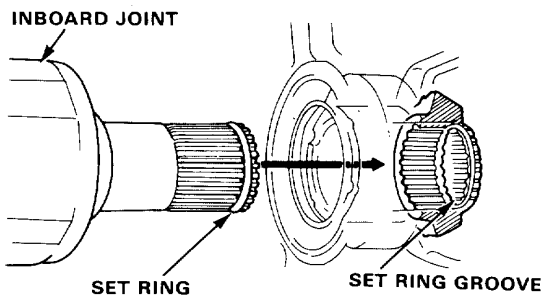


18. Refill the transmission.

## Intermediate Shaft

### Replacement


1. Drain oil from the transmission.
2. Remove the three 10 mm flange bolts.

**FLANGE BOLT**  
10 x 1.25 mm  
39 N·m (3.9 kg-m, 28 lb-ft)

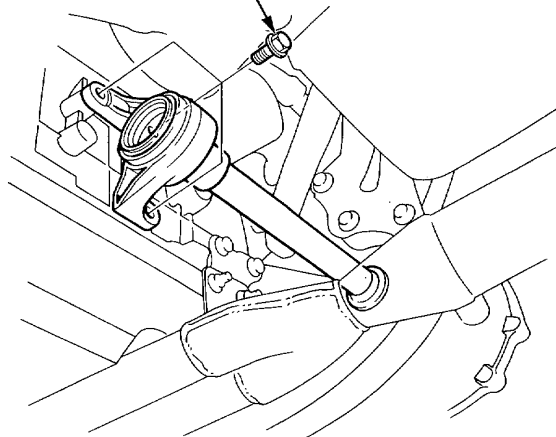

3. Lower the bearing support close to the steering gear-box and remove the intermediate shaft from the differential.

**CAUTION:** To prevent damage to the differential oil seal, hold the intermediate shaft horizontal until it is clear of the differential.

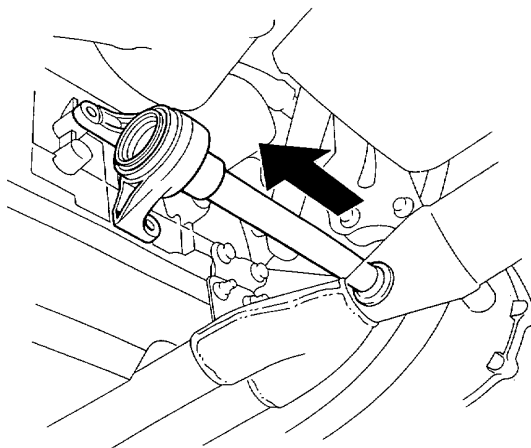

Installation is the reverse order of removal.