





Disassembly


1. Remove the intermediate shaft outer seal.
2. Remove the external circlip.

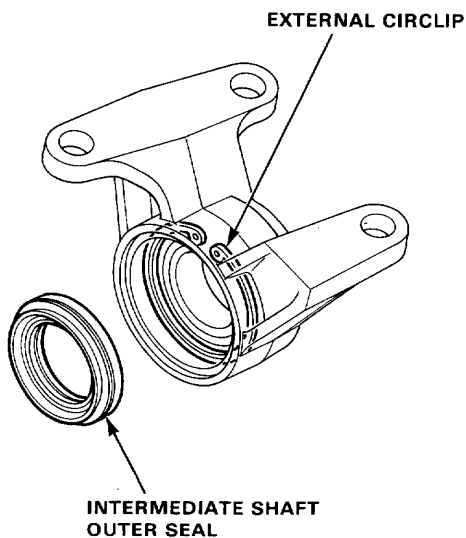

3. Press the intermediate shaft out of the shaft bearing using the special tool.

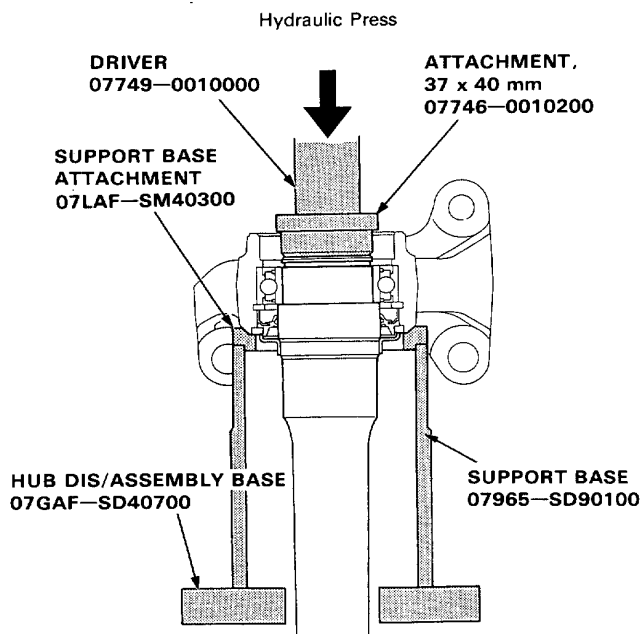

4. Remove the intermediate shaft inner seal.
5. Remove the internal circlip.

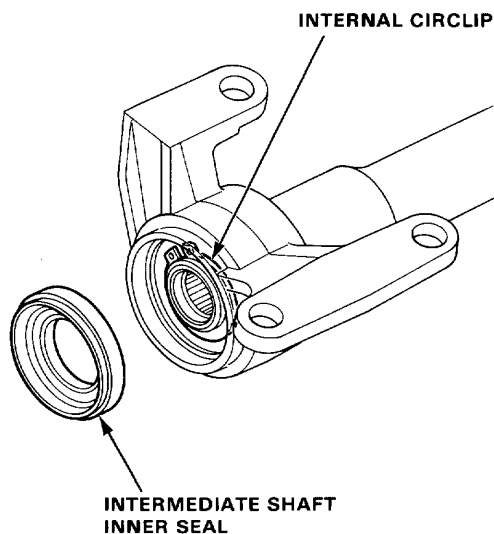

6. Press the intermediate shaft bearing out of the bearing support.

