


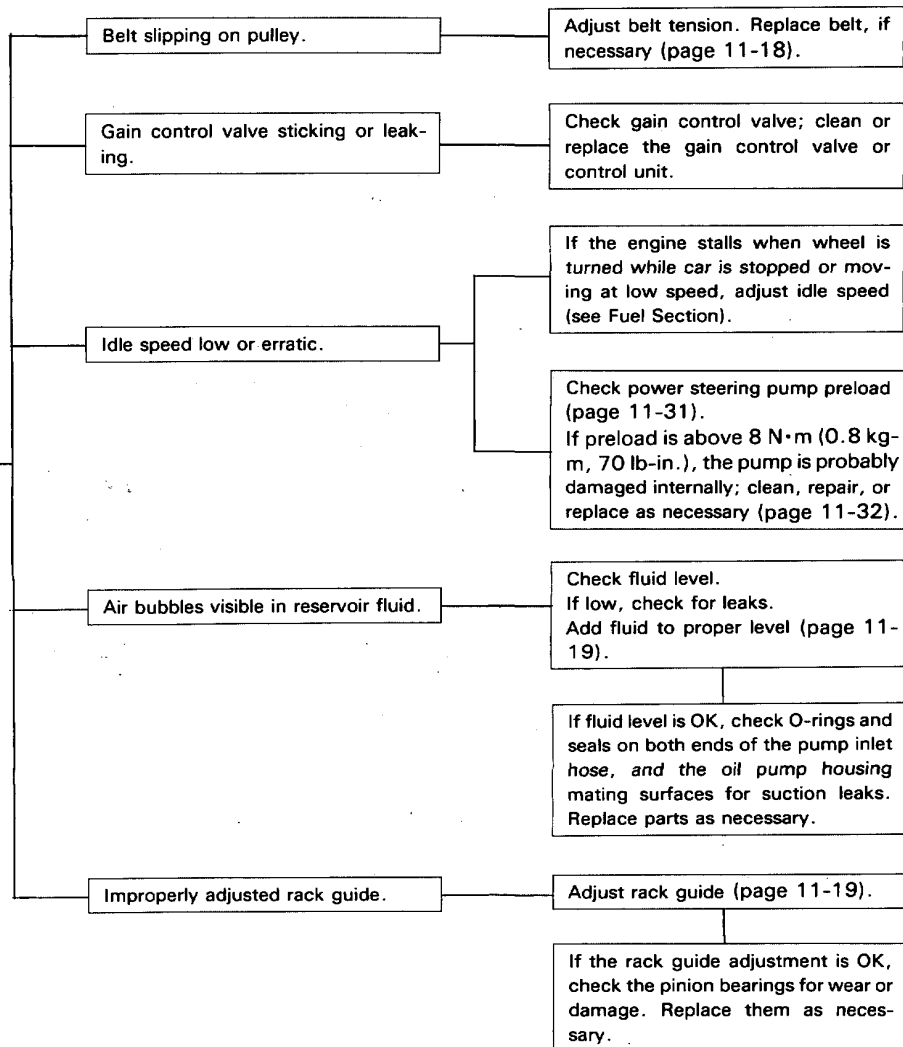


Uneven or rough steering.



(cont'd)

Troubleshooting (2WS)

General Troubleshooting (cont'd)

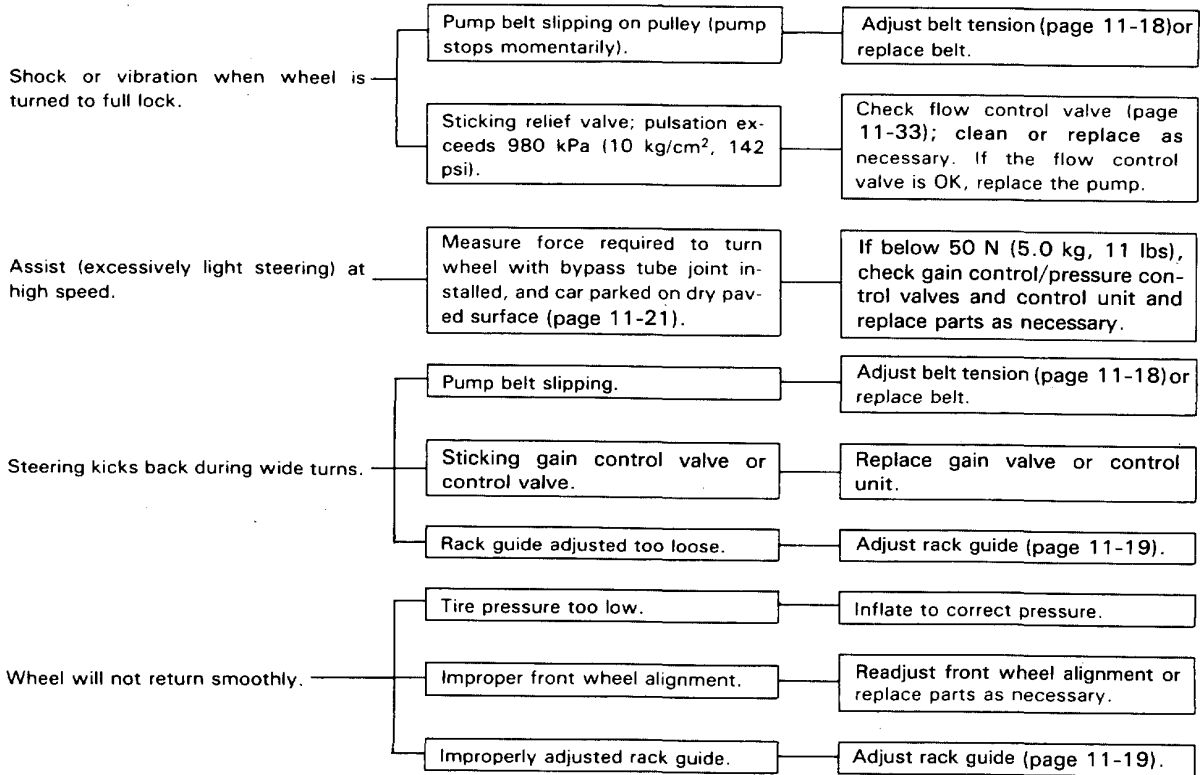



Noise and Vibration

NOTE: Pump noise in first 2–3 minutes after starting in cold weather (-20°C , -4°F or colder) is normal.

