



## Upper Arm Ball Joint Inspection

1. Loosen the front wheel lug nuts.
2. Raise the front end of the car and place safety stands in the proper locations.
3. Remove the front wheels.
4. Rock the upper ball joint front-to-back.
5. Replace the upper arm assembly as follows if there is any play.

