

# Upper Arm/Stabilizer/Trailing Arm/Lower Arm

## Index/Inspection-2WS

### Overall Suspension

#### NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal.
- Torque specifications, see page 12-28.

#### CAUTION:

- Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.
- Lower arms A and B are interchangeable from side to side. Make sure their left and right side marks (⇨L. UP, ⇨R. UP) are facing up for assembly.

