


Electronic Components

Control Unit Replacement

Remove the control unit attaching bolts, then remove the control unit.

CAUTION:

- If the control unit attaching bolts are removed, the control unit's memory is cleared.
- Handle the control unit with care.

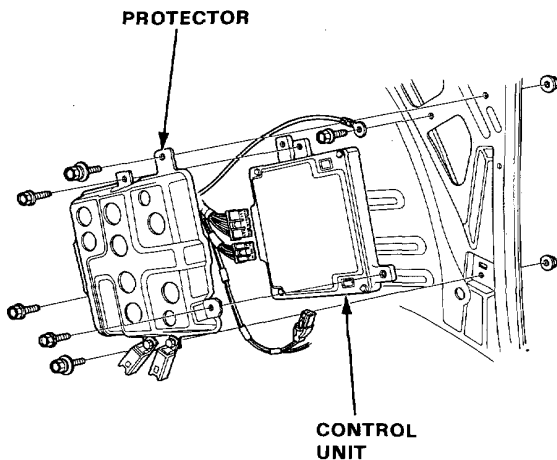

Installation is the reverse order of removal.

NOTE: Check the dash warning light function by turning the ignition switch ON.

Fail Safe Relays/Motor Relay Inspection


1. Check for continuity between terminals ③ and ④.

There should be no continuity.


2. Connect a 12V battery across terminals ① and ②.

There should be continuity between terminals ③ and ④.

Fail Safe Relays

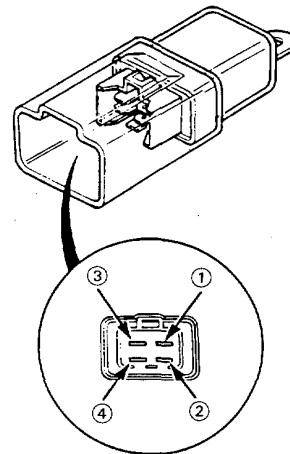

Motor Relay

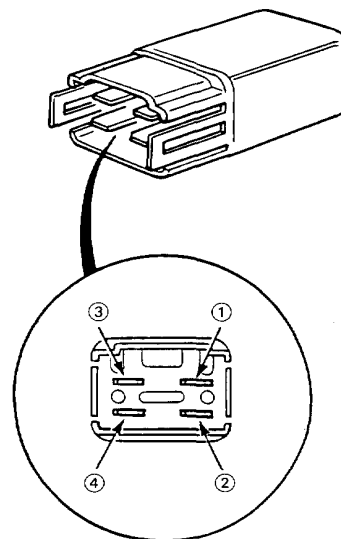

Wiring Diagrams

Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		