


Interior Trim

Replacement

Disassemble in numbered sequence.

⊙: Clip locations

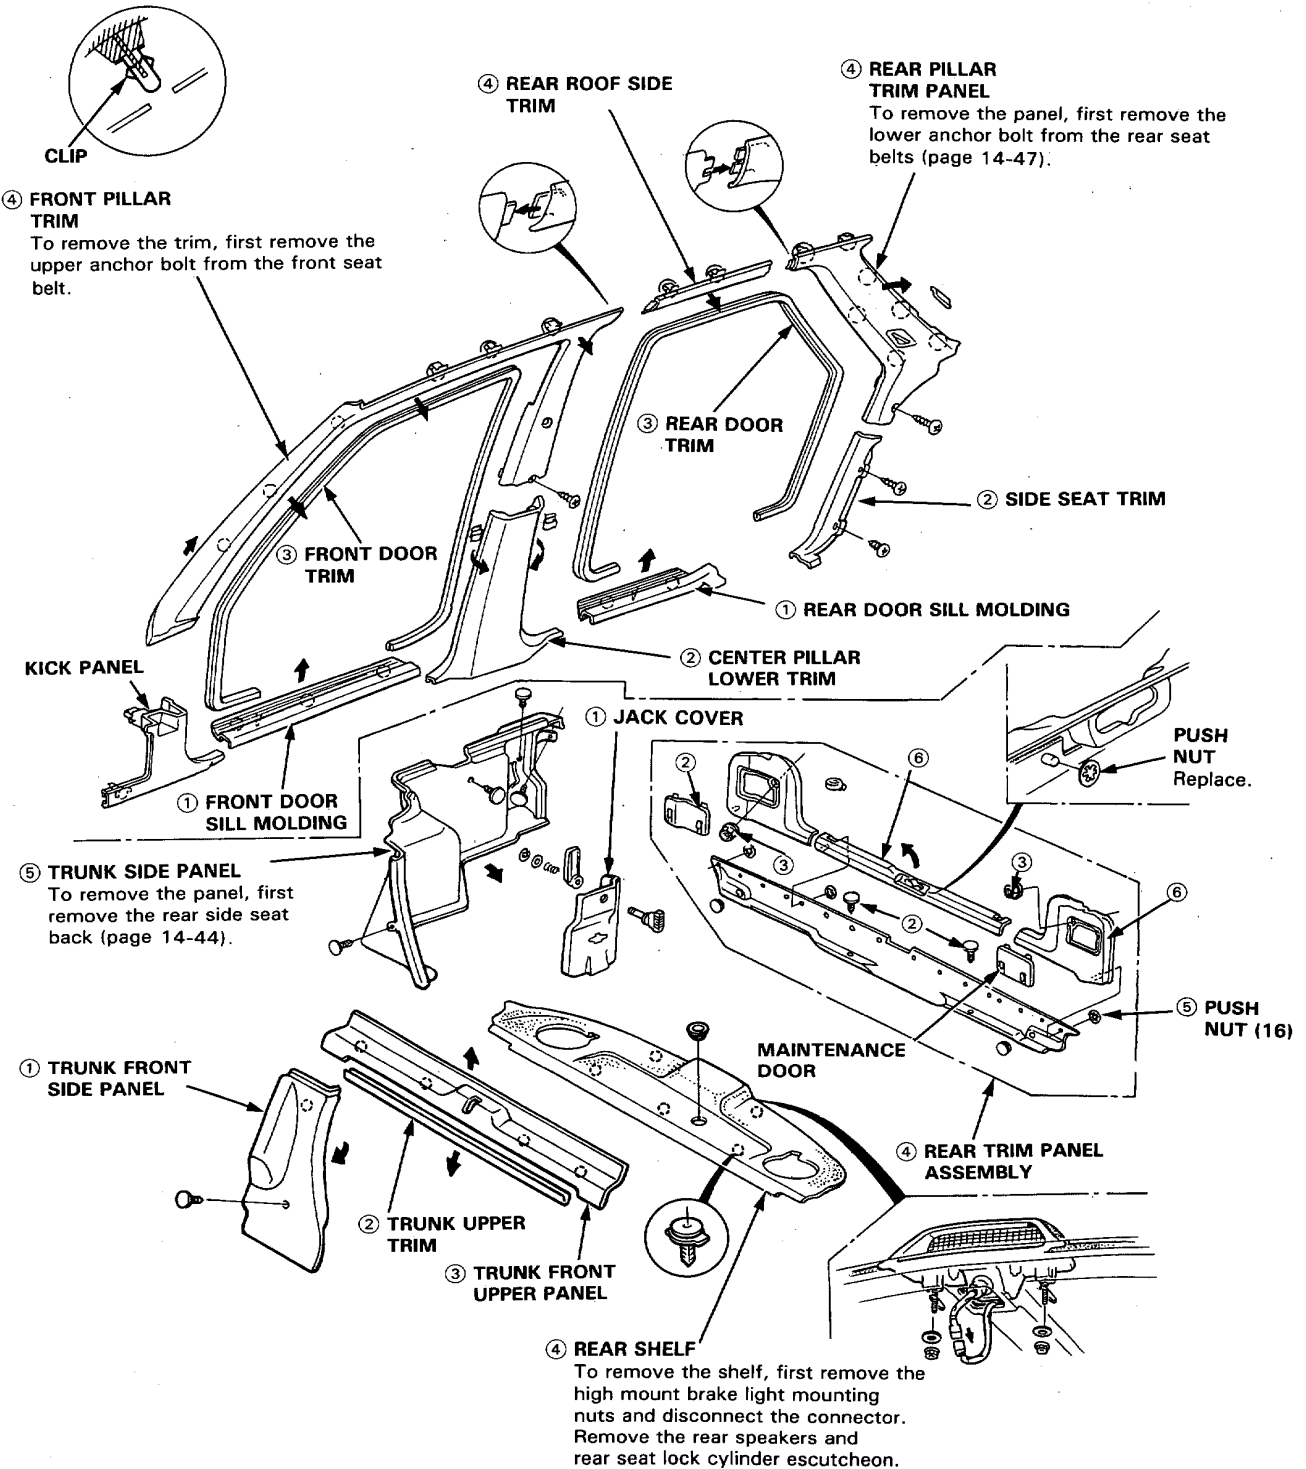

Headliner




Replacement

1. Remove:

- Sun visors and holders.
- Dome light.
- Rearview mirror assembly (page 14-49).
- Front pillar trims (page 14-38).
- Rear pillar trim panels (page 14-38).
- Roof trim (Sunroof model).
- Grab handles.
- Rear roof side trim (page 14-38).
- Rear seat (pages 14-44, 45).
- Front seat (Passenger's).
- Recline down the front seat back rearward (Driver's).

2. Remove the 2 mounting screws.

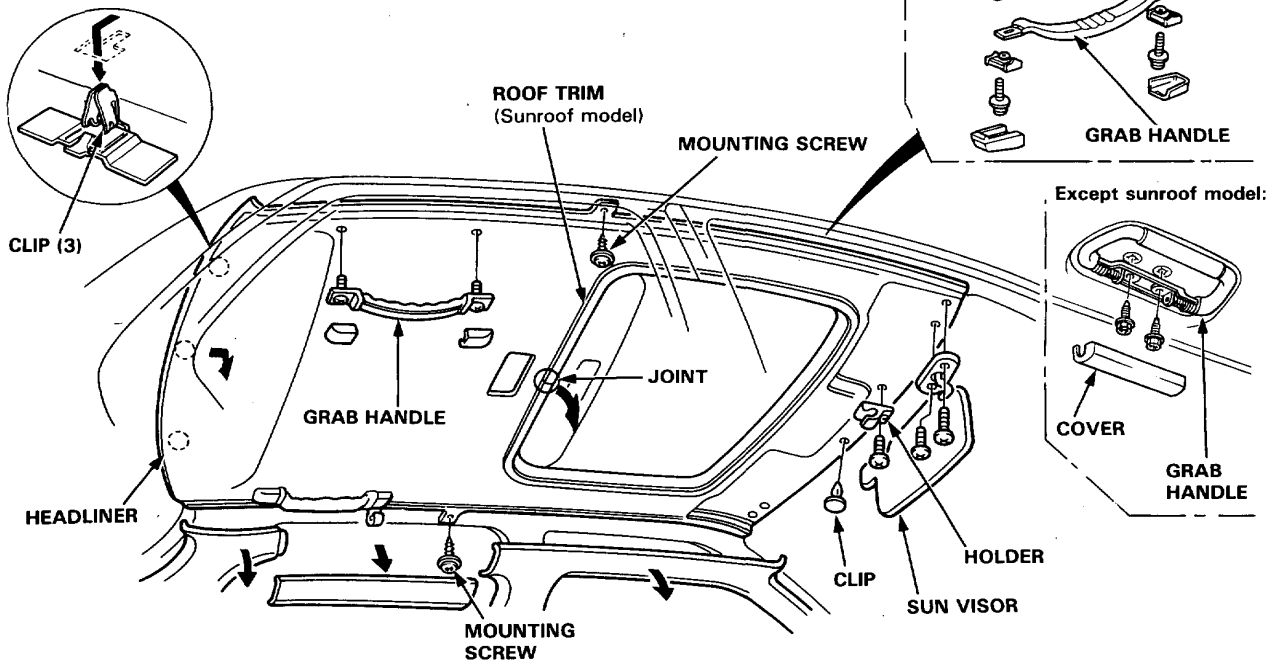

3. Remove the front and rear clips, then remove the headliner.

4. Remove the headliner from behind the front passenger's seat door opening.

NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the seats, dashboard and other interior trim.

5. Install the headliner in the reverse order of removal.

NOTE:

- When installing the headliner inside the passenger cabin, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear (Sunroof model).

