


Front Seat


Replacement

NOTE: Take care not to scratch or score the seat covers and body.


1. Remove the seat track end covers as shown.
2. Remove the mounting bolts and disconnect the connectors, then remove the seat assembly.

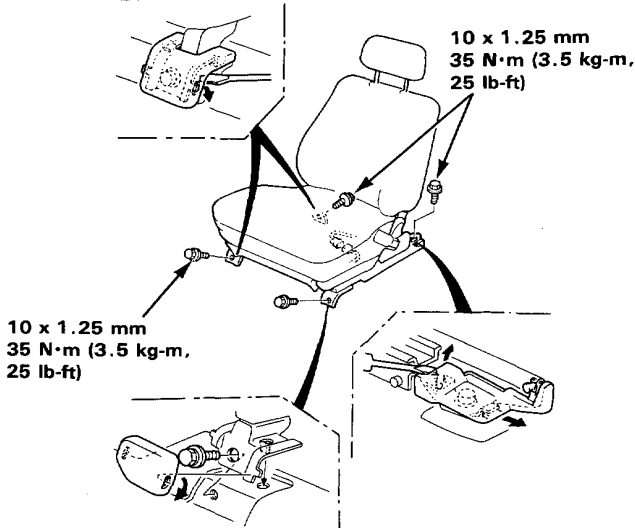


3. Remove the bracket cover and center cover.

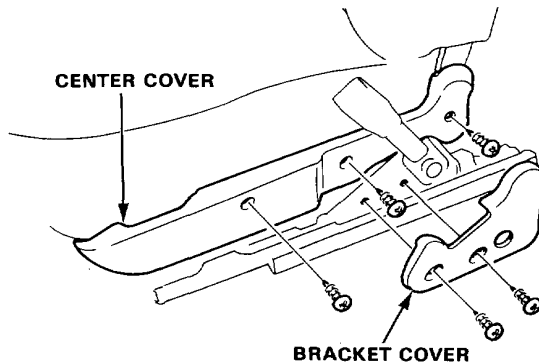

4. Remove the reclining adjuster cover and power seat switch.

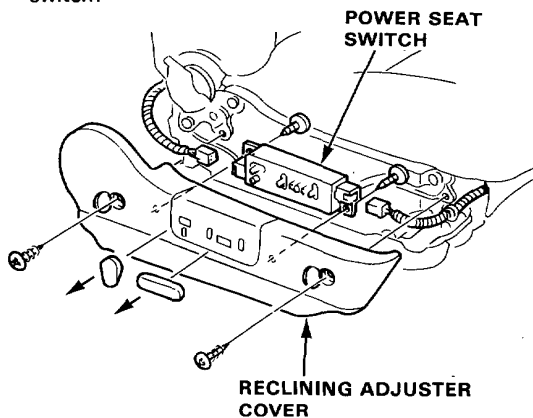

5. Remove the mounting bolts, then remove the seat cushion.

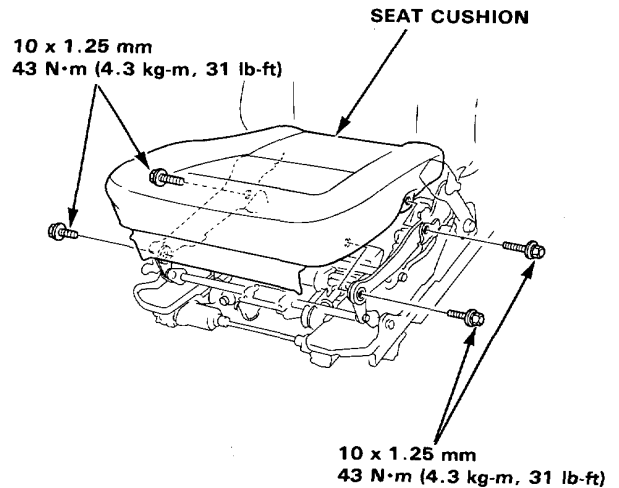

6. Remove the seat back cover.
7. Turn over the seat cover and remove the 2 mounting bolts.
8. Remove the pivot nut, then remove the seat back.

PIVOT NUT
8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

