




Disassemble in numbered sequence.
Standard/Armrest through type:

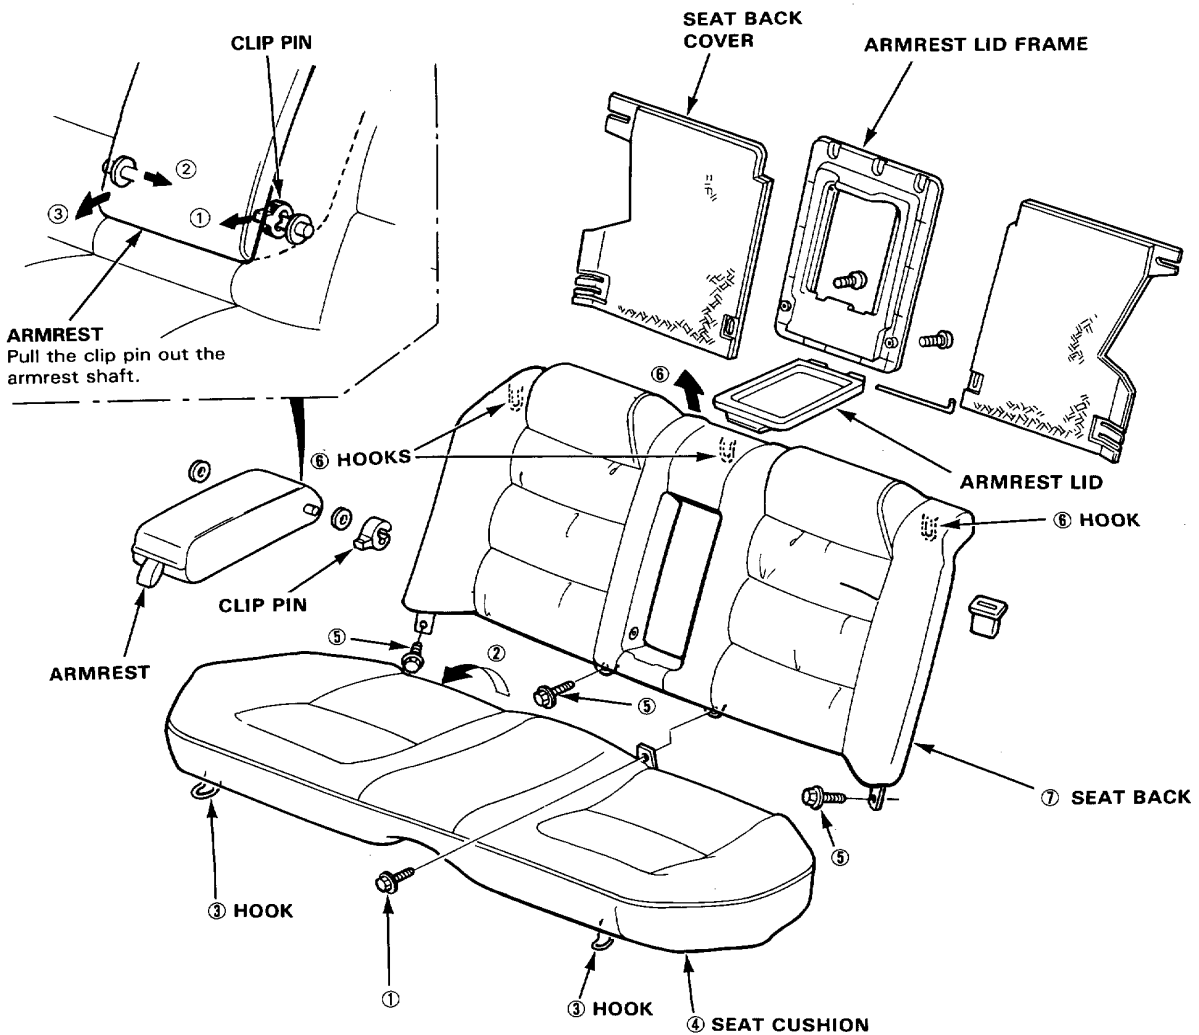

Front Seat Belts


Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the center pillar lower trim.
2. Remove the upper anchor bolt, lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.
3. Remove the front seat, then remove the bolt and the center anchor.

SHOULDER ANCHOR ADJUSTER

Remove the front pillar trim.

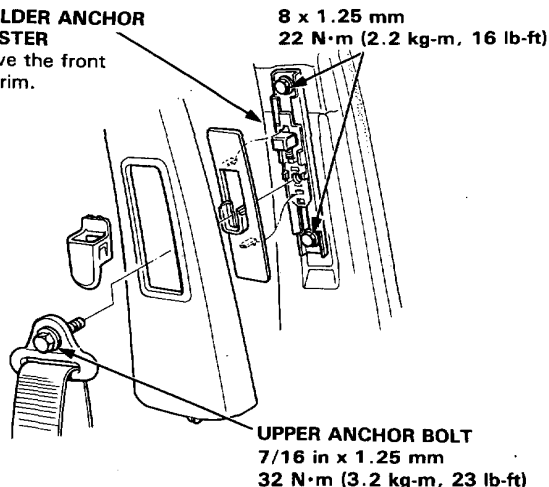

PLAIN WASHERS

COLLAR

BEARING

LOCK-WASHER


TOOTHED LOCK WASHER

LOWER ANCHOR BOLT
7/16 in x 1.25 mm
32 N·m (3.2 kg-m, 23 lb-ft)

4. Check that the retractor locking mechanism functions as described on page 14-48.
5. Install the front seat belts in the reverse order of removal.

NOTE:

- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before attaching the center pillar lower trim, make sure there are no twists or kinks in the belts.

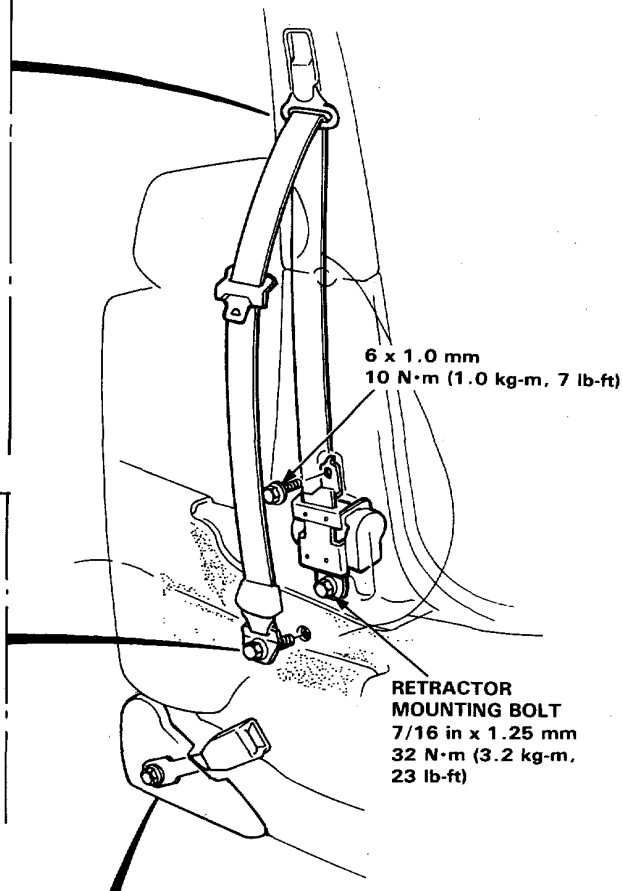

BUSHING

WAVE WASHER

LOCKWASHER

CENTER ANCHOR BOLT
7/16 in x 1.25 mm
32 N·m (3.2 kg-m, 23 lb-ft)