


Doors

Index (cont'd)

Rear:

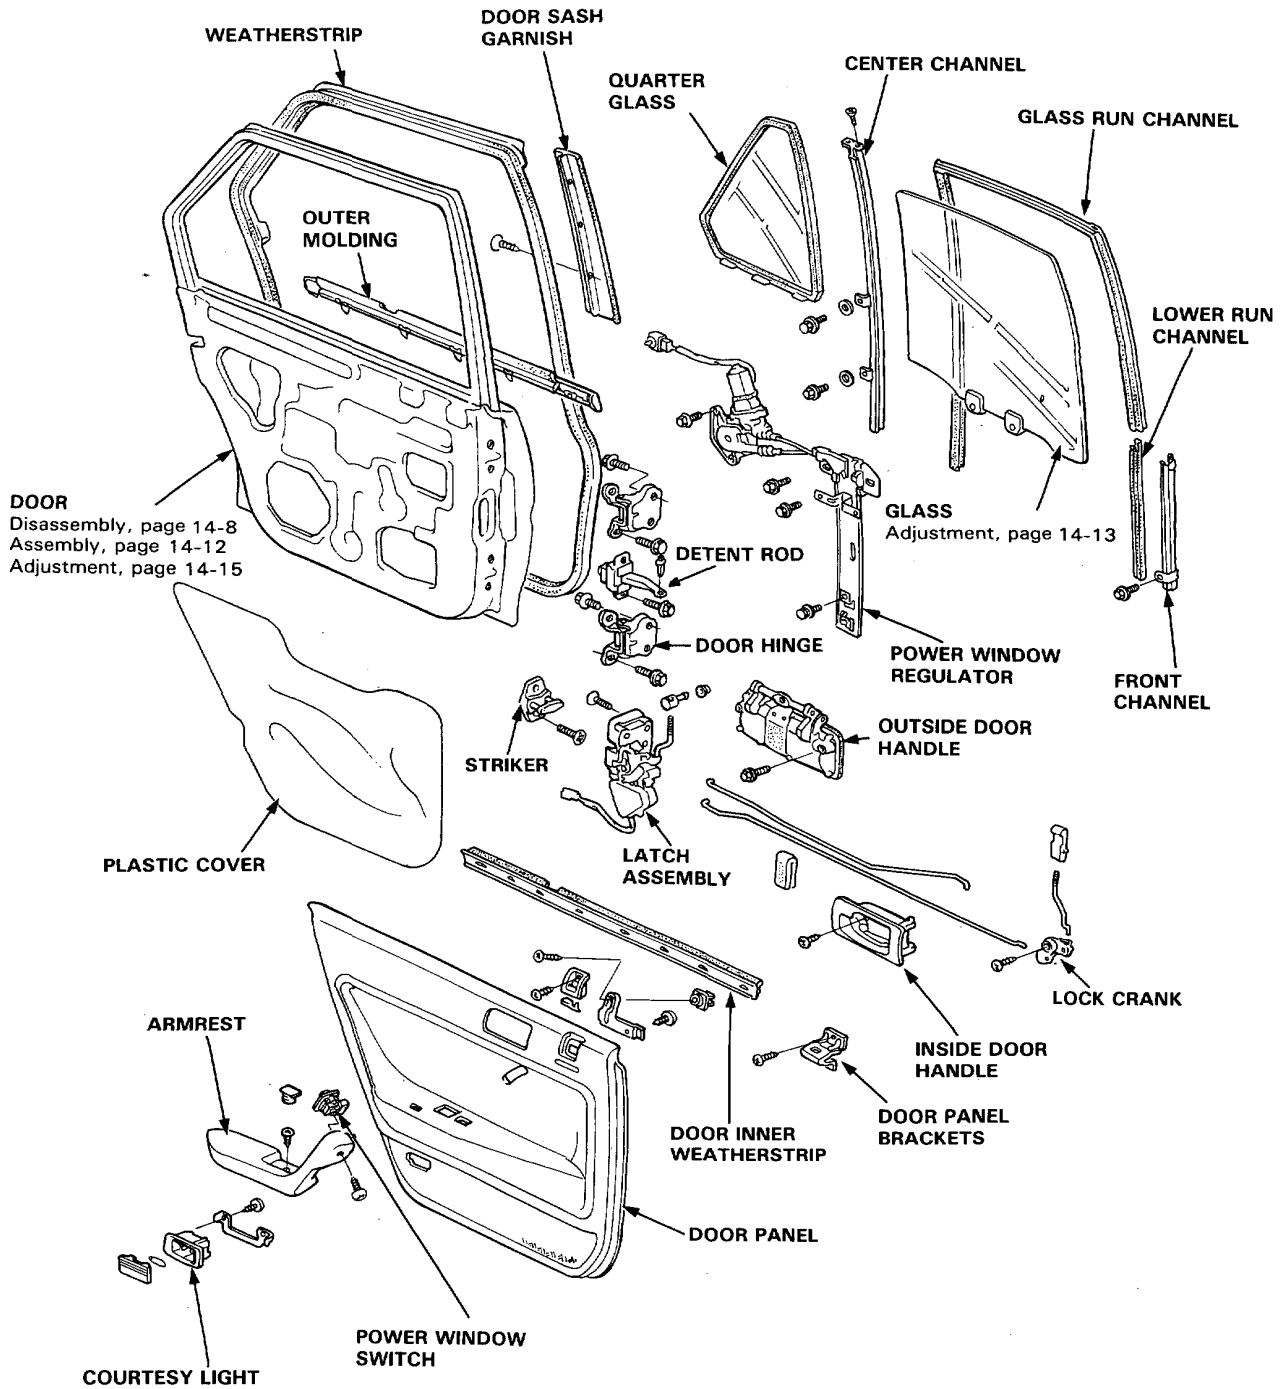





Disassembly

Front:


1. If applicable, remove the regulator handle by pulling the clip out with a wire hook.

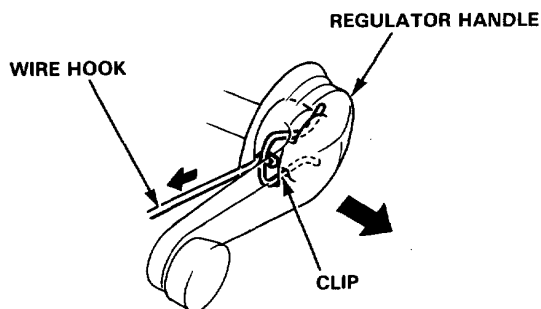


2. Remove the mounting screw, then pull the inside door handle out half-way and disconnect the latch rod and power door lock connector.

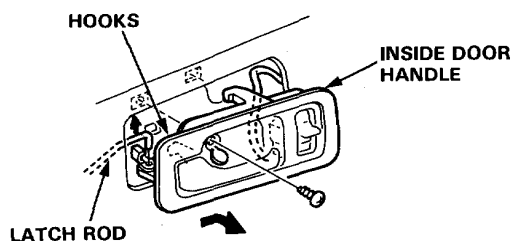


3. Remove the power door mirror switch and disconnect the connector.

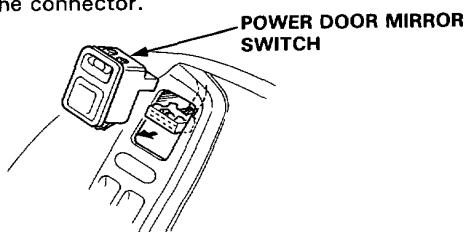


NOTE: Remove the panel with as little bending as possible to avoid creasing or breaking it.

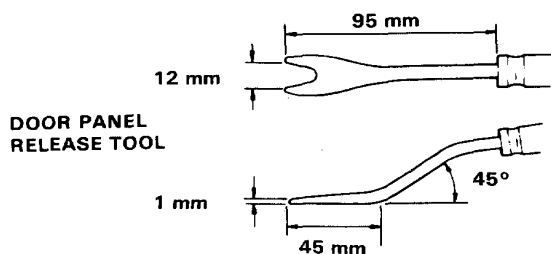

4. Remove the 2 door panel screws, then pry apart the door panel clips. Lift the door panel straight up off the sill, and disconnect the power window and courtesy light wires.

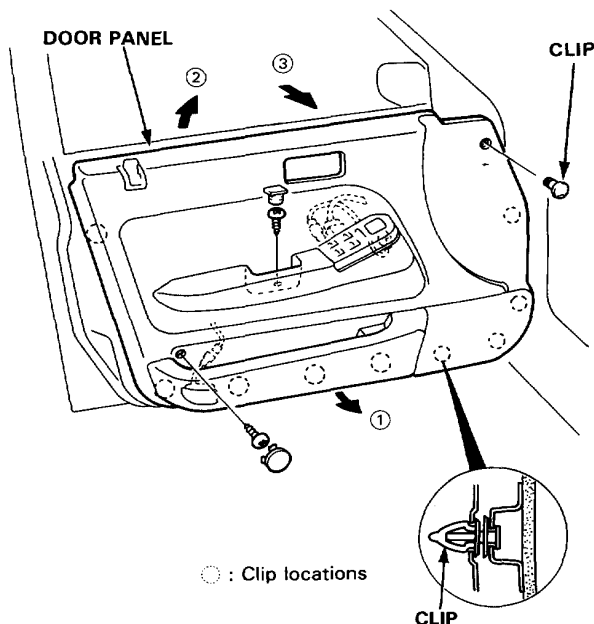

5. Remove the power window control unit, door panel bracket, speaker and cover panel.
6. Carefully remove the plastic cover.

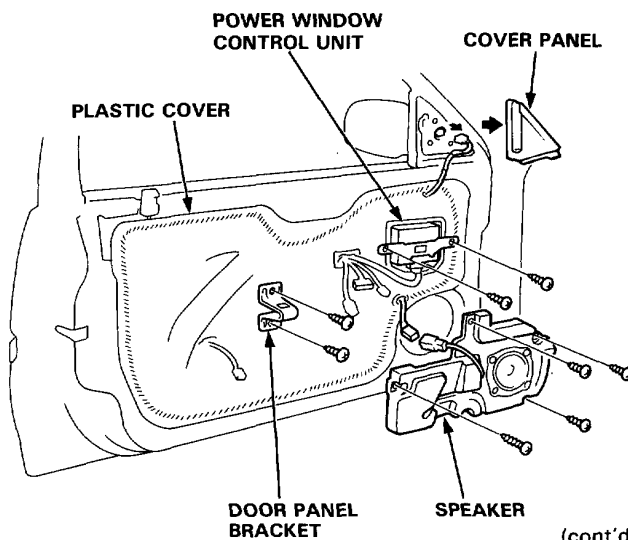

(cont'd)