





## Air Mix Rod, Air Mix Cable Adjustment

(LH)

1. Set the temperature control dial (lever) on COOL.
2. Turn the rod arm to the engine compartment side, then connect the rod to clip.

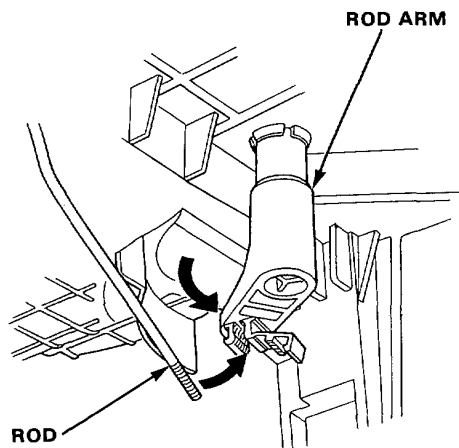

3. Turn the cable arm to the stopper A and connect the end of the cable to the arm.
4. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

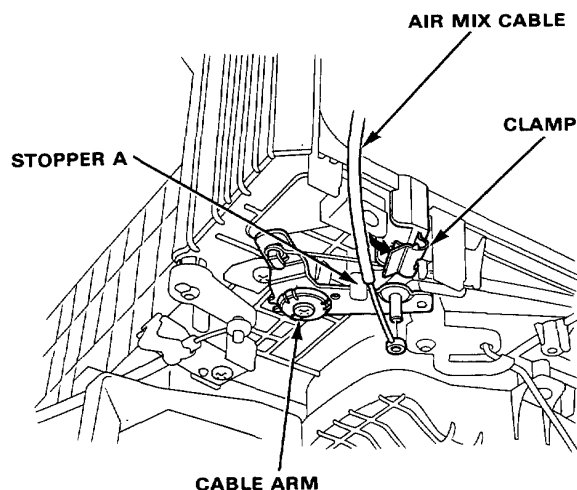


5. After adjusting of air mix rod and cable, set the temperature control dial (lever) on HOT, blow warm air from the heater unit, then set it on COOL and blow cool air from it.


NOTE: Air mix cable should be adjusted if the heater valve cable has been disconnected.

(RH)

1. Set the temperature control dial (lever) on COOL.
2. Remove the heater control cable.
3. Turn the rod arm to the engine compartment side, then connect the rod to clip.

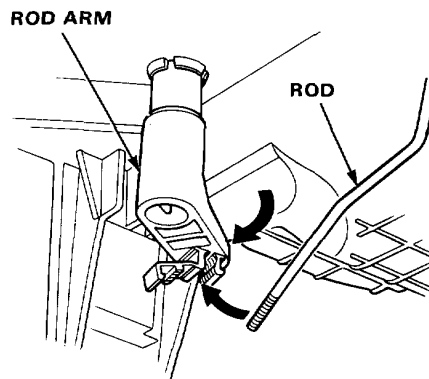

4. Turn the cable arm to the stopper and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

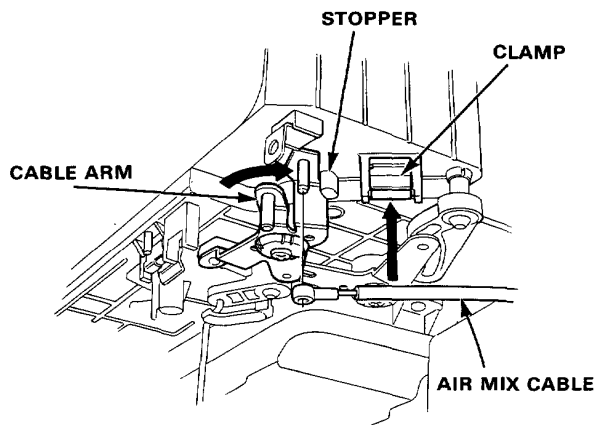

6. Install the heater control cable and adjust it.