
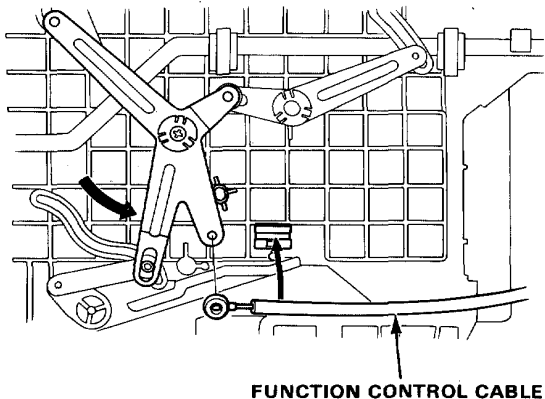


# Heater Control Cables

## Function Control Cable Adjustment

(Lever type only)


1. Slide the function control lever to .
2. Turn the function control arm to the front and connect the end of the cable to the arm.
3. Gently slide the cable housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control lever move, then hold the cable housing and snap it in the clamp.



## Cool Vent Adjustment

1. Set the cool vent lever on SHUT.
2. Turn the cable arm to the stopper and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control lever move, then snap the cable housing into the clamp.

(LH)

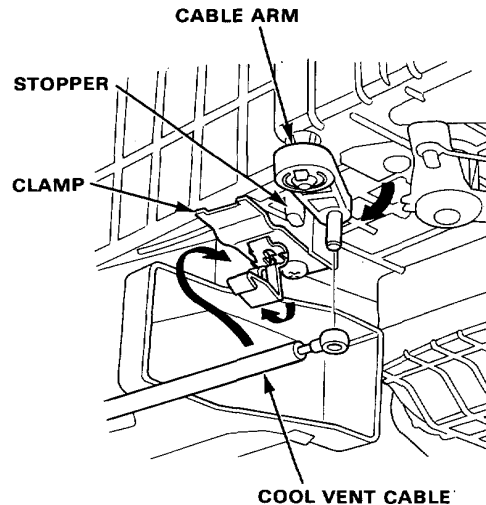

(RH)

