



## Cable Replacement


1. Remove the self-tapping screw.
2. Remove the cable.
3. Install the new cable.

### NOTE:


- Hold the end of the cable to the stopper.
- After installing and adjusting the cable, make sure that the dial or lever move smoothly without binding.

### (AIR MIX CABLE, FUNCTION CONTROL CABLE)

#### (Button type)

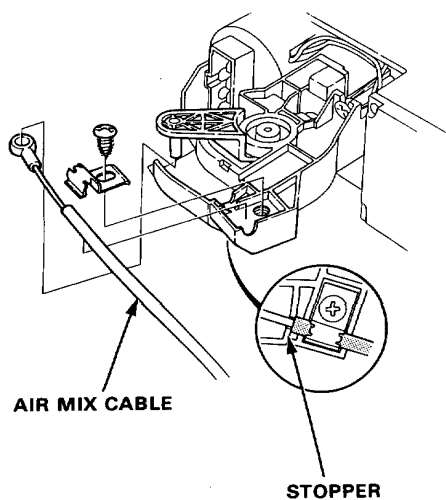

#### (Lever type)

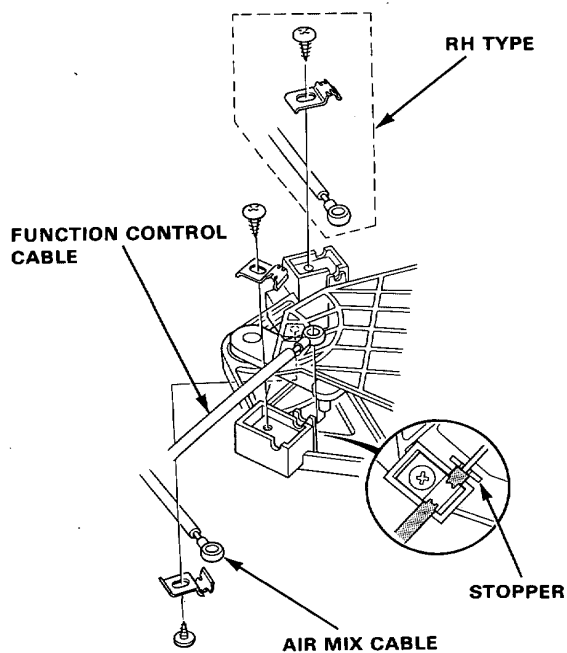

### (COOL VENT CABLE)

