


Test

Fan Switch

1. Disconnect the 8-P connector from the fan switch.
2. Check for continuity between the terminals of the fan switch according to the table below.

SWITCH CONNECTION

Terminal Position	①	②	③	④	⑤	⑥	⑦
OFF							
A	○	○	○				
B	○	○		○			
C	○	○			○		
D	○	○				○	
E	○	○					○

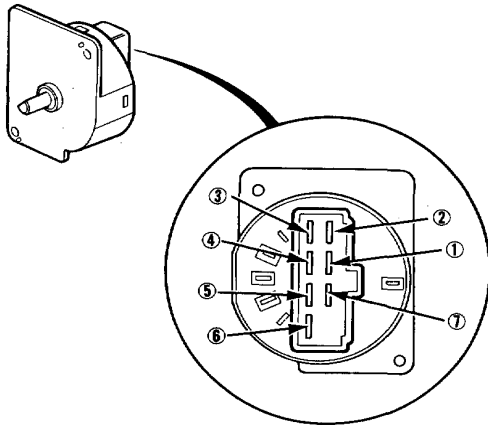

Relay

1. Remove the relay from the dash fuse box.
2. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals.
There should be no continuity when the battery is disconnected.

