



## Troubleshooting Flowchart — A/C System

NOTE: A/C compressor clutch will not come on without the engine running.

A/C System does not come on.

Turn ignition OFF.

Disconnect the 2-P connector from the pressure switch.

Turn the heater fan, A/C switch ON and start the engine.

Connect a jumper wire between the BLU/BLK terminal and body ground.

Do both fans and the compressor run ?

NO

Repair open in BLU/BLK wire between pressure switch and diodes.

YES


Connect a jumper wire between the BLU/BLK and BLU/YEL terminals.

Do both fans and the compressor run ?

YES

Check refrigerant pressure. If pressure good, replace A/C pressure switch.

NO

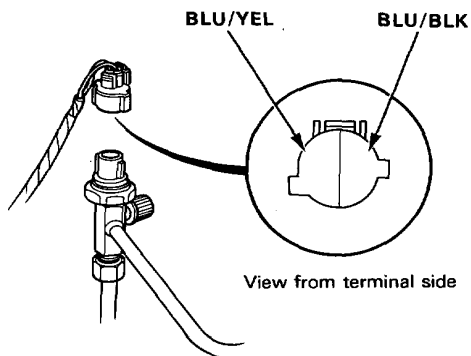

To page 15-54

(cont'd)