


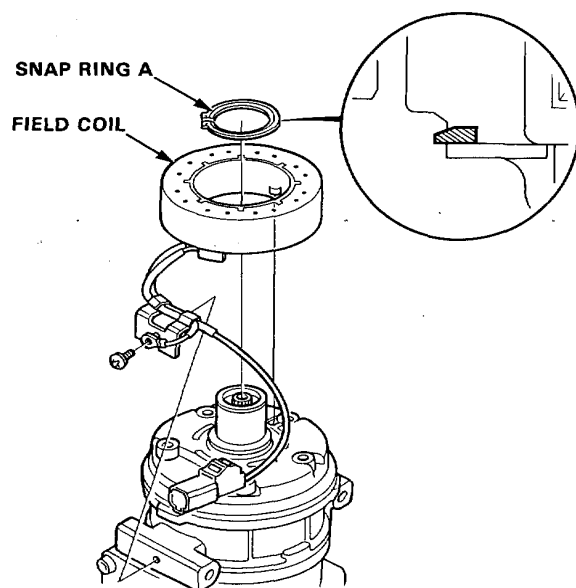

4. Remove the snap ring A and the field coil.



5. Install in the reverse order of removal and:
- Install the field coil with the wire side facing up (see above).
  - Clean the pulley and compressor sliding surfaces with non-petroleum solvent.
  - Check the pulley bearings for excessive play.
  - Make sure the circlip is fitted to the groove properly.
  - Apply locking agent to the thread of the center bolt and tighten it securely.
  - Make sure that the pulley turns smoothly.

# Test


## A/C Thermostat

Dip the evaporator sensor into a pan filled with ice water, and check for continuity between the terminals.

Cut off 1.5—0.5 °C (35—33 °F)

Cut in 2.5—5 °C (36—41 °F)

If cut off or cut in temperature is too low or too high, replace the A/C thermostat.

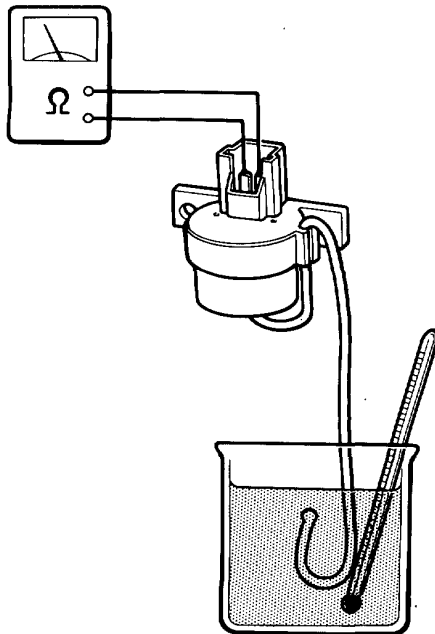

## Relay

There should be continuity between the A and B terminals when the battery is connected to the C and D terminals.

There should be no continuity when the battery is disconnected.

