

Seat Belt Reminder System (KY model only)




Description

NOTE: Refer to page 16-112 for wiring description of the seat belt reminder circuit.

With the ignition switch in "Run" or "Start", voltage is applied to the reminder of the integrated control unit. When you unbuckle the driver's seat belt, the reminder circuit senses ground at the "A14" terminal. With voltage at the "B9" terminal and ground at the "B1" terminal, the seat belt reminder chime sounds and the timer contacts close and open. This causes the seat belt reminder light to flash on and off. After 5 seconds the chime stops and the contacts remain open.

Seat Belt Switch Test

1. Slide the driver's seat forward until the seat belt center anchor bolt is accessible, to disconnect the 2-P connector from the seat belt switch.
2. There should be continuity between the A and B terminals when the driver's seat belt is not buckled. There should be no continuity when the driver's seat belt is buckled.

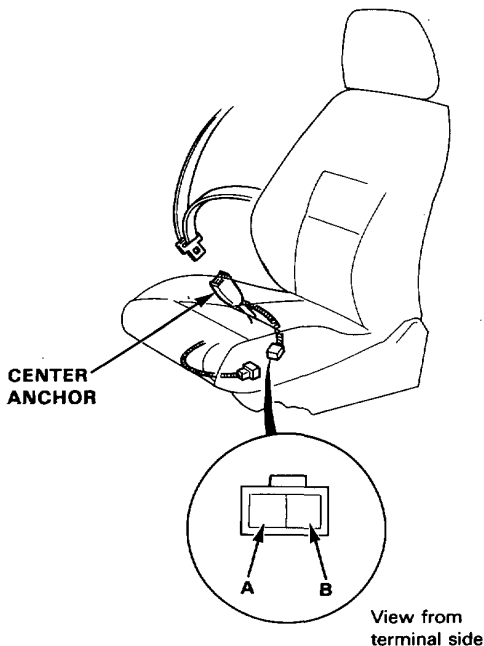

Chime Test

1. Remove the left side kick panel and disconnect the 2-P connector from the main wire harness.
2. Test chime operation by connecting battery positive to the ORN terminal, and negative to the BLK terminal, and cycling the power on-off repeatedly.
3. If the chime fails to sound every time power is cycled, replace it.

