

Lighting System

Component Location Index

● CIRCUIT DIAGRAM

- KF, KG, KB and KX models, page 16-157
- KY, KQ, KP and KT models, page 16-158
- With DAYTIME LIGHT, page 16-159
- With DIM-DIP LIGHT, page 16-160
- Headlight adjuster, page 16-161

INTEGRATED CONTROL UNIT

- DAYTIME RUNNING LIGHT RELAY (KS and KW models)
Input Test, page 16-152
- DIM-DIP RELAY (KE model)
Input Test, page 16-153

HIGH BEAM INDICATOR LIGHT
(in the gauge assembly)
Gauge Assembly, page 16-112

LIGHTING SWITCH
Test, page 16-162
Replacement, page 16-164

DIM-DIP RESISTOR
Test, page 16-167

HEADLIGHT ADJUSTER SWITCH
Test, page 16-166
Removal, page 16-166

HEADLIGHT ADJUSTER UNIT (KG model)
Input Test, page 16-165

REAR FOG LIGHT SWITCH
Test, page 16-165
Removal, page 16-164

HEADLIGHTS
Adjustment, page 16-169
Replacement, page 16-170

DIMMER RELAY
Test, page 16-168

LIGHTING RELAY
Test, page 16-168

UNDER-HOOD RELAY BOX
(Located in the engine room, right side)