

# Headlights

## Adjustment



### Outside Headlight Adjustment:

Adjust the points A and B.


### KG model only:

1. Adjust the outside headlight with "O" position of headlight adjuster switch.
2. Check the dip of beam in each position of the headlight adjuster switch, after outside headlight adjustment.

### Inside Headlight Adjustment:


Adjust the points C and D.

NOTE: Adjust the headlights to local requirements.

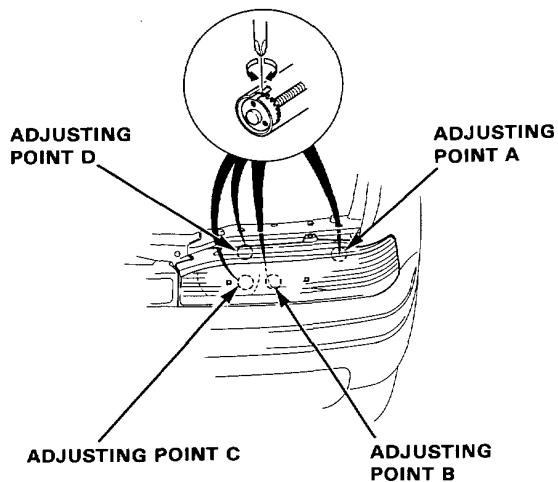


### Outside headlight:


(Except KG model)

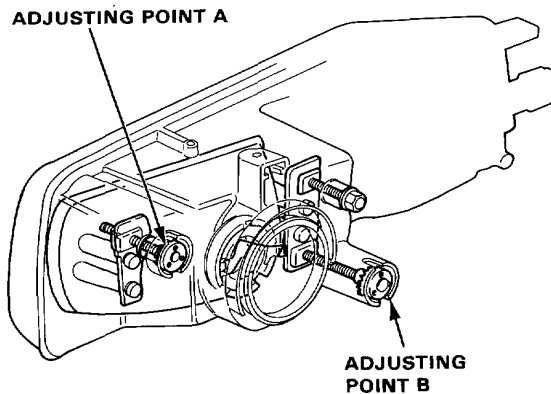

(KG model only)

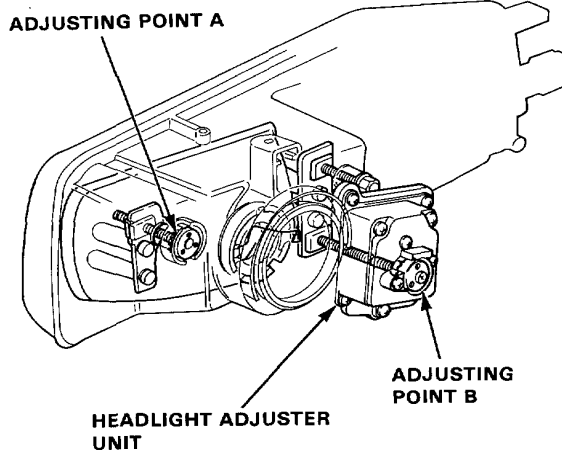

### Inside headlight:

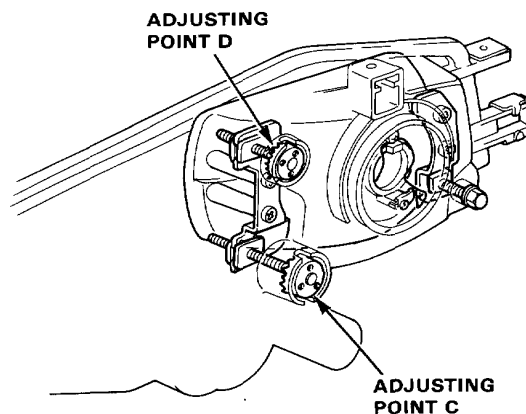

# Headlights

## Replacement

### CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.

- Do not try to replace or clean the headlights with the lights on.

1. Disconnect the 3-P connectors from behind the unit. Before disconnecting right side connector, remove the battery and coolant reservoir.
2. Remove the rubber boot from behind the light by pulling the tab.
3. Unhook the retaining spring and remove the bulb.
4. Remove the screw and front position light, then disconnect the 2-P connector.
5. Remove the front grille and front bumper.
6. Remove the 5 mount bolts, then remove the unit.
7. After installing the unit, adjust the headlights to local requirements.

