


Front Turn Signal Lights

Replacement

1. Remove the screw and the front turn signal light, then disconnect the 2-P connector.

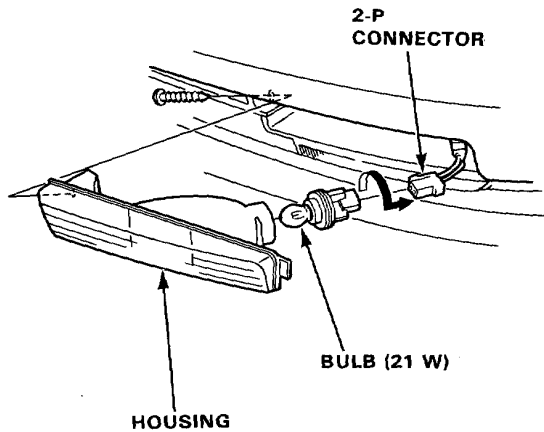


2. Turn the bulb 45° counterclockwise to remove it from the housing.

Front Position Lights

Replacement

1. Remove the screw and pull out the front position light from the stay, then disconnect the 2-P connector.

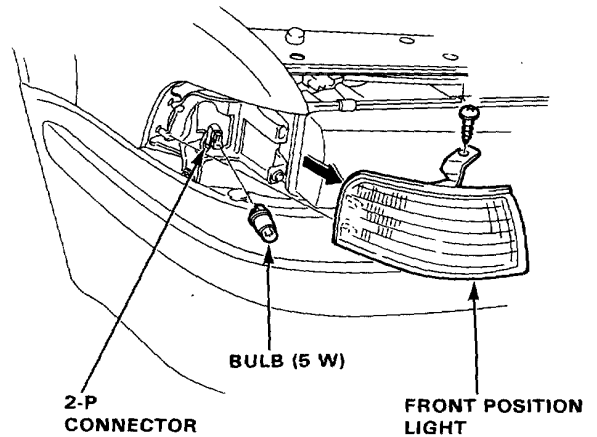

2. Turn the bulb 45° counterclockwise to remove it from the front position light.