


Courtesy Lights and Door Switches




Courtesy Light Replacement

NOTE: The bulb or lens alone can be replaced without having to remove the door trim panel.

1. Remove the door trim panel.
2. Remove the 2 screws and the retainer plate to remove the light from the door trim panel.

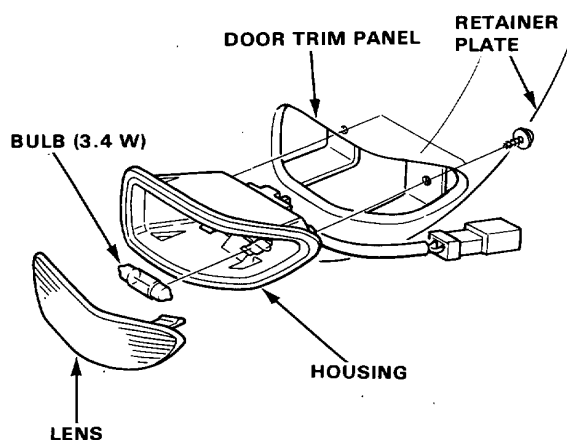


From No.22 (15 A) FUSE

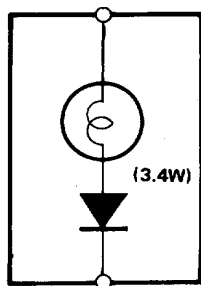

To DOOR SWITCH

Door Switch Test

1. Open the door.
2. Remove the screw and pull out the door switch.
3. Disconnect the 1-P CONNECTOR from the switch.

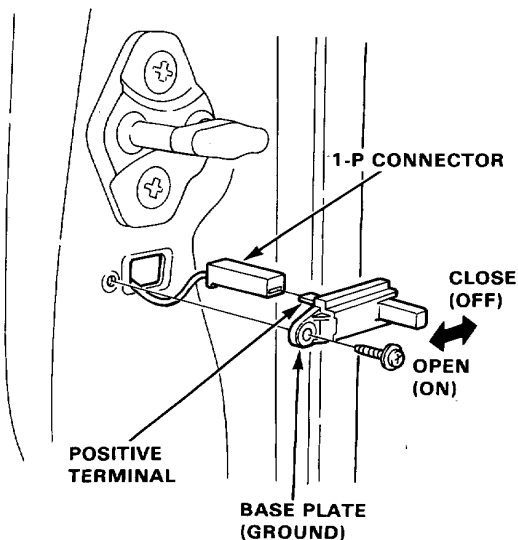

4. There should be continuity between the positive terminal and base plate (ground) with the switch released (door opened). There should be no continuity with the switch pushed (door closed).