


Trunk Light and Latch Switch



Trunk Light Replacement/Test

1. Pry off the trunk light lens from the housing.
2. Pry off the light assembly.
3. Disconnect the 3-P connector from the housing.

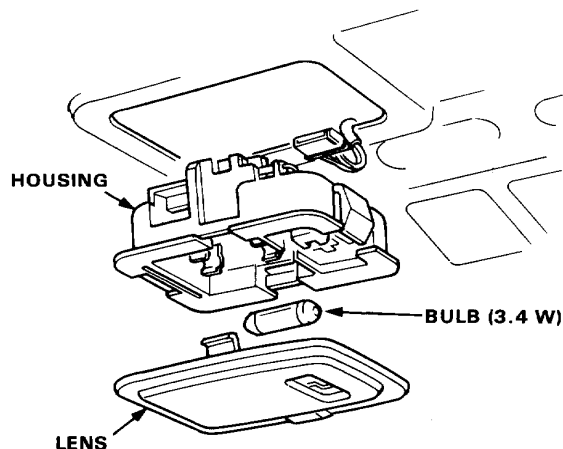


4. Make sure that the bulb is in good condition. Check for continuity between the A(+) and B(-) terminals.

NOTE: Do not connect the tester probes in the wrong polarity because there is a diode inside the trunk light.

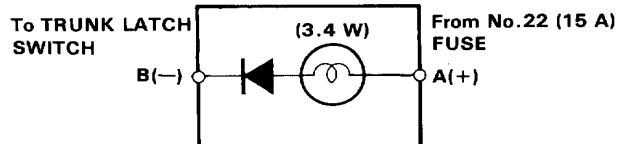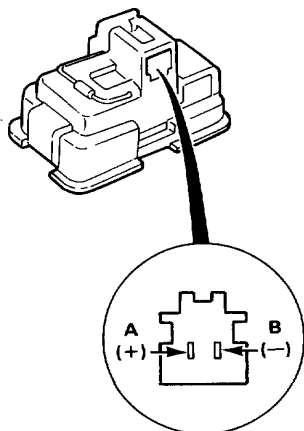

Latch Switch Test/Replacement

1. Open the trunk lid and disconnect the 2-P connector from the trunk latch.
2. There should be continuity between the A and B terminals.

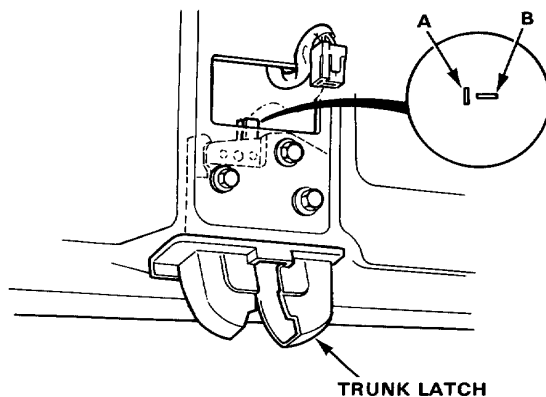

3. If necessary, remove the 3 bolts to pull out the latch from the trunk lid, then disconnect the lock rod from the latch.
4. Disconnect the trunk opener cable from the latch.

