




# Clock


## Removal

1. Pry out the clock from the dashboard, then disconnect the 4-P connector.

NOTE: Be careful not to damage the clock or the dashboard when prying out the clock.

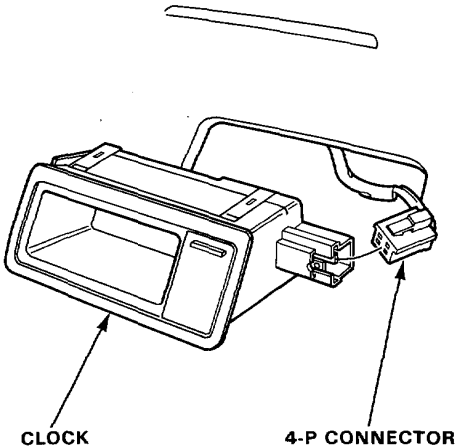

### Terminals:

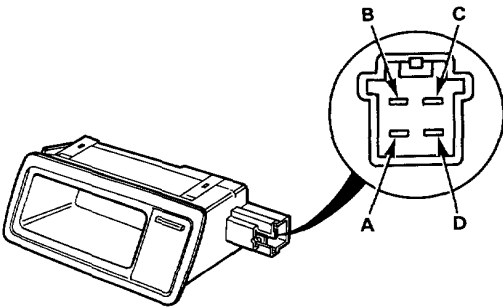

Terminal	Wire	Destination
A	RED/BLK	Light-on signal
B	BLK	Ground
C	YEL	IG1 (Main clock power supply)
D	WHT/YEL	Constant power (Time memory)