


Radiator

Replacement

1. Drain the coolant from the radiator.
 - Remove the radiator cap to speed draining.

⚠ WARNING Use care when removing radiator to avoid scalding by hot coolant or steam.
 2. Remove the connectors from the cooling fan motor and thermostatic switch.
 3. Disconnect the upper and lower radiator hoses from cylinder head.
 4. Disconnect the ATF cooler hose (A/T).
- NOTE: Plug the hoses and pipes.
5. Remove the radiator bracket and radiator.

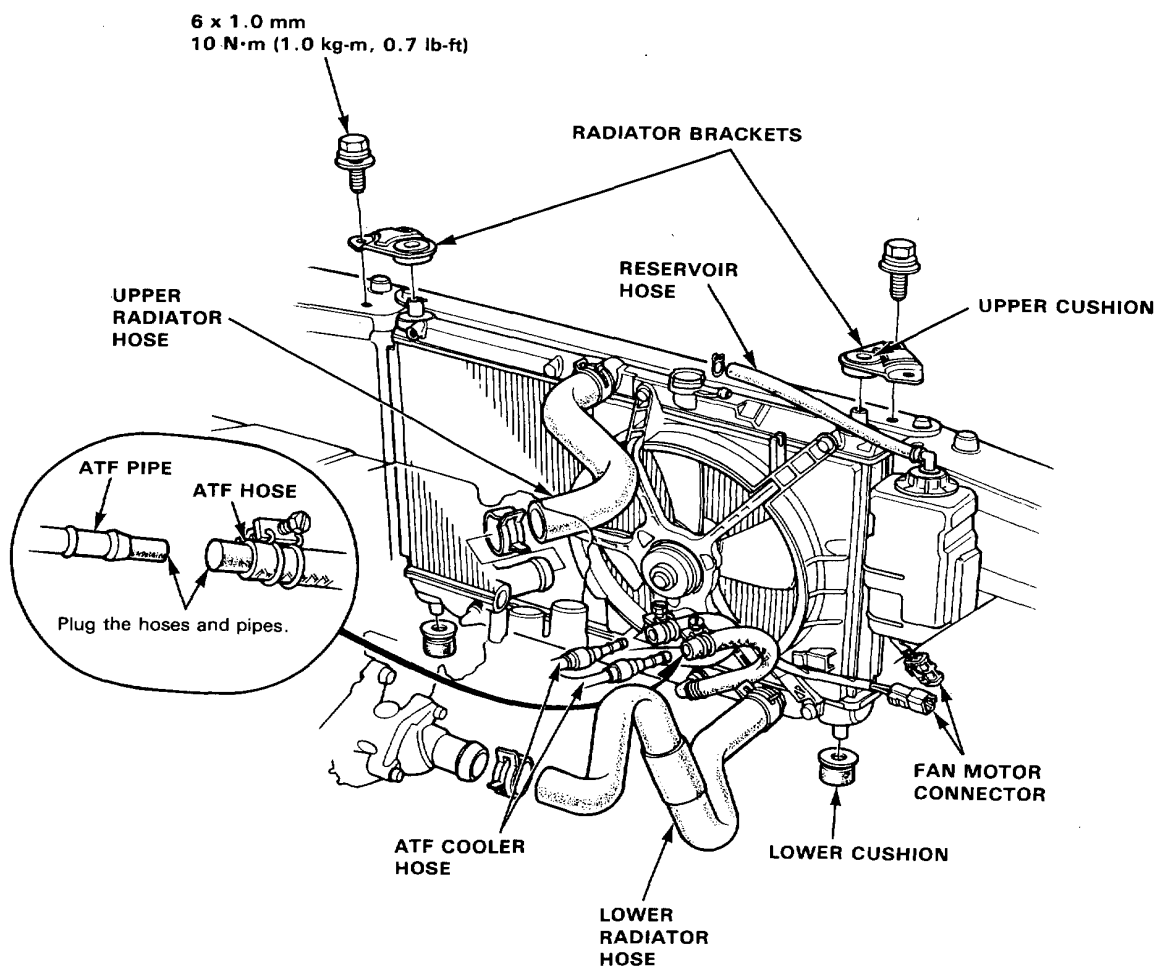

NOTE:

- Install the radiator in the reverse order of removal.
- Before installing the radiator, set the radiator lower cushion securely under it.