


Water Pump


Inspection

1. Remove the timing belt (page 5-36).
2. Check the water pump pulley turns freely.
NOTE: Small amount of "weeping" from the bleed hole is normal.

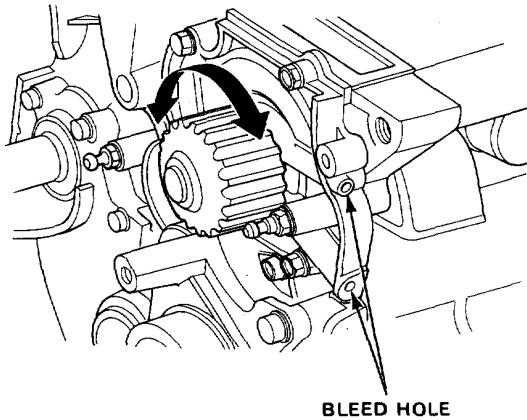

Replacement

1. Remove the timing belt (page 5-36).
2. On screw the bolt, then remove the water pump.

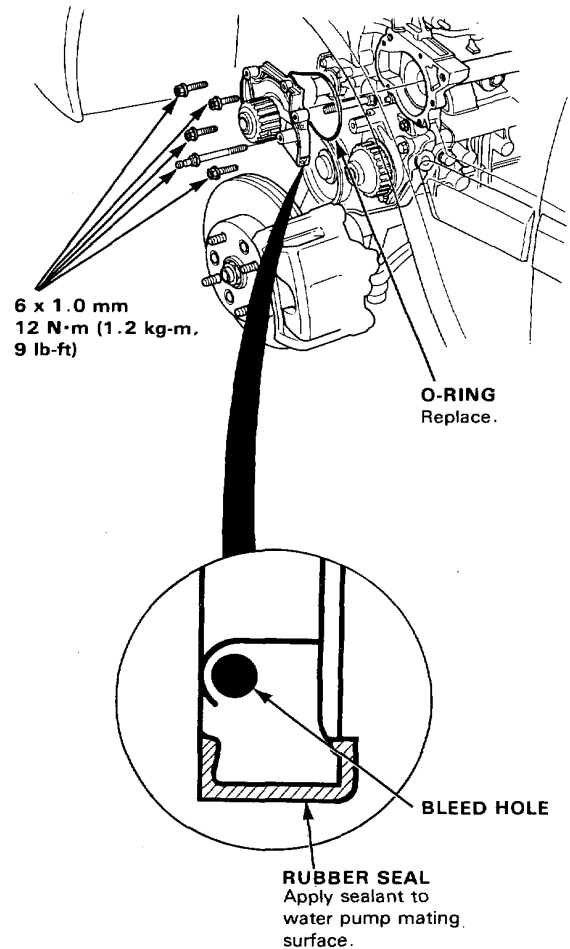

3. Install the water pump in the reverse order of removal.