


Component Locations




Index

2.0 l with CATA:

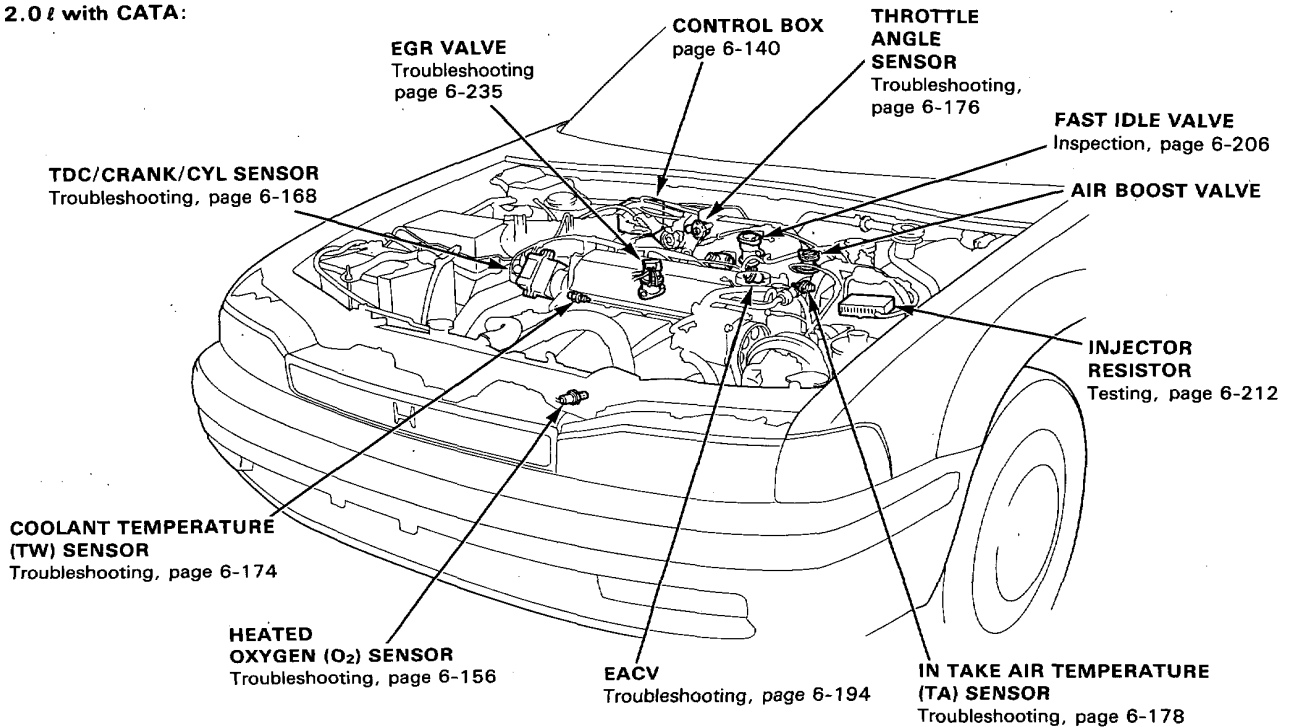


2.0 l without CATA:

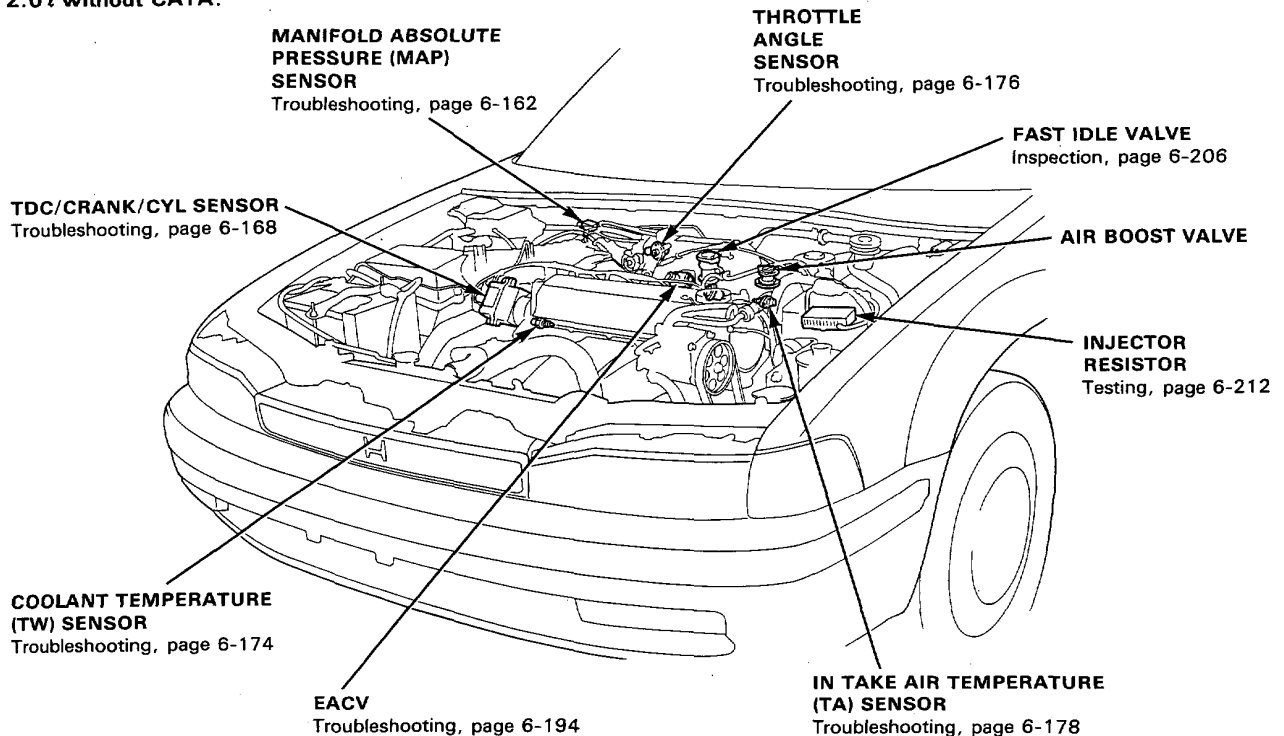


Component Locations

Index

2.2 l except KQ, KY:

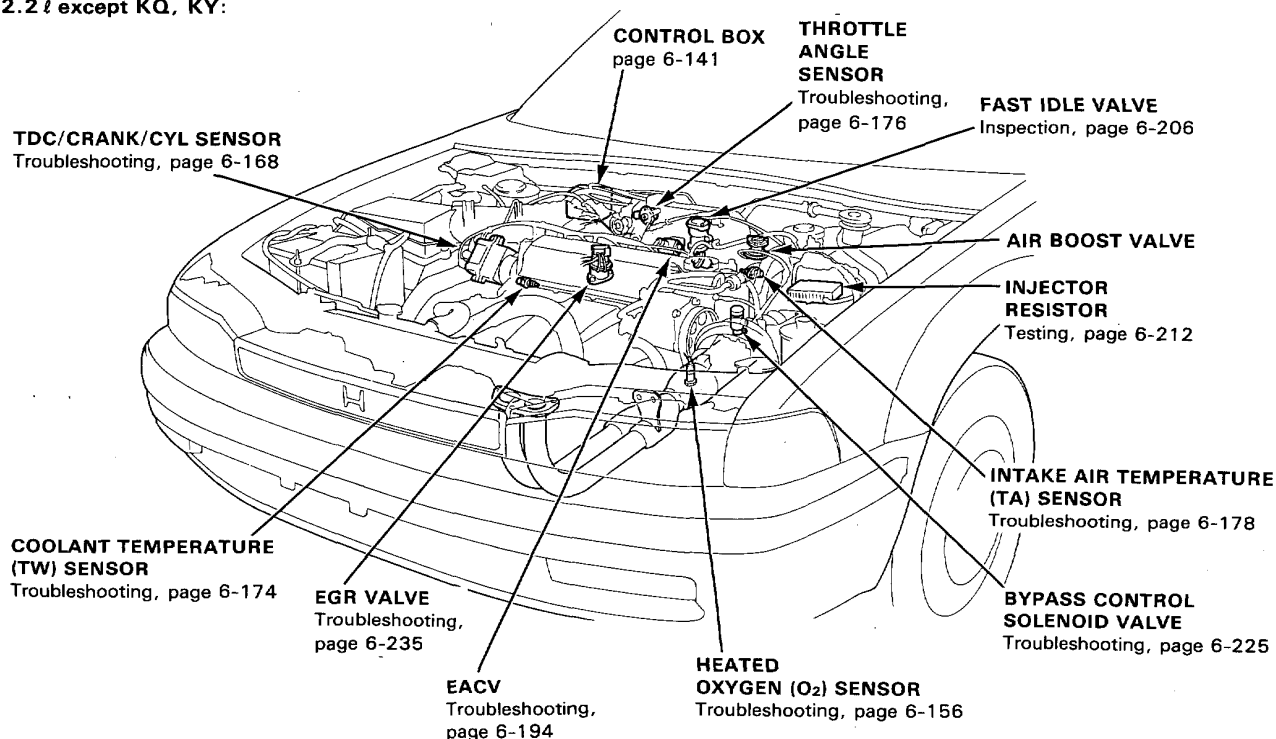


2.2 l KQ, KY:

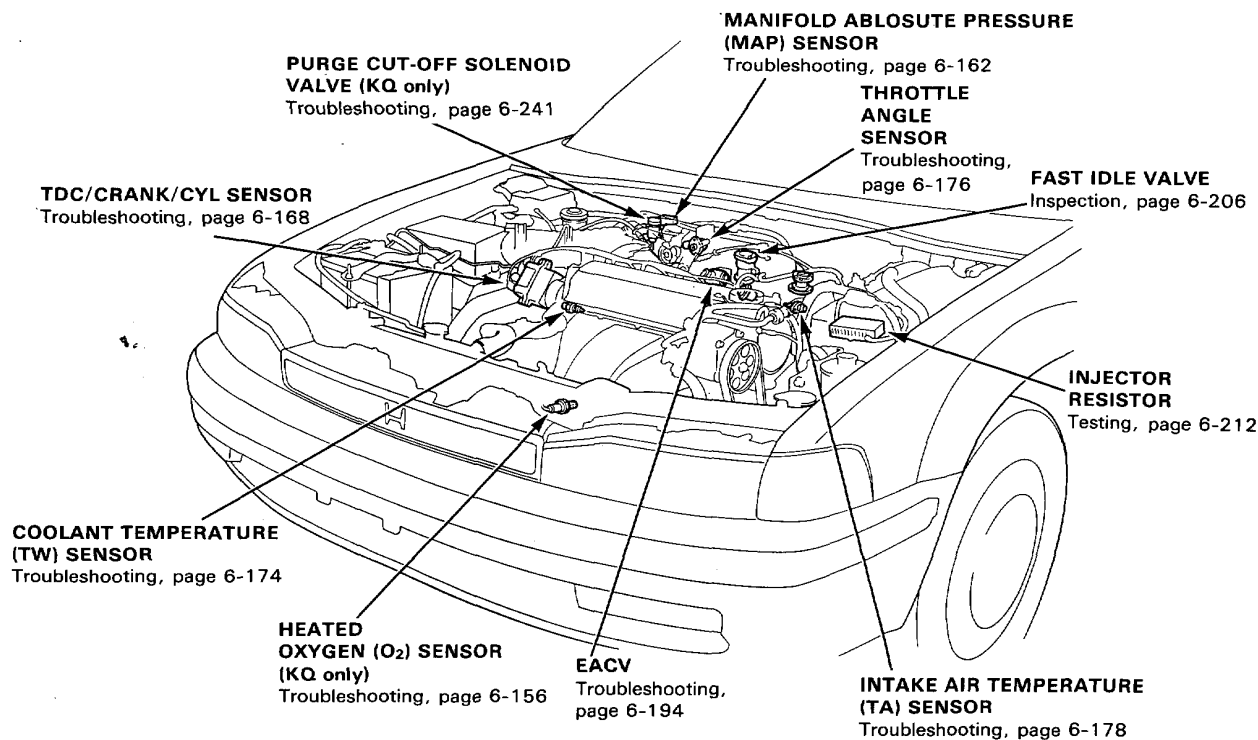




LH:

IMA SENSOR
Troubleshooting
page 6-180

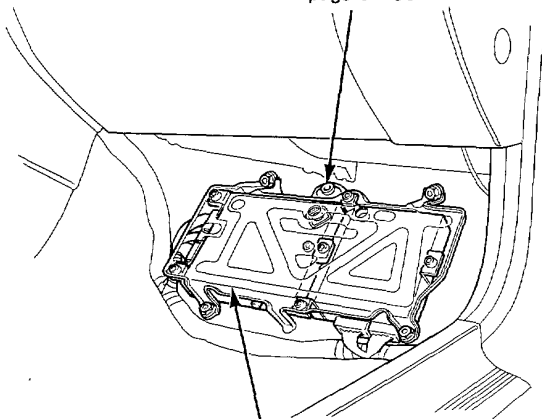


ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-152

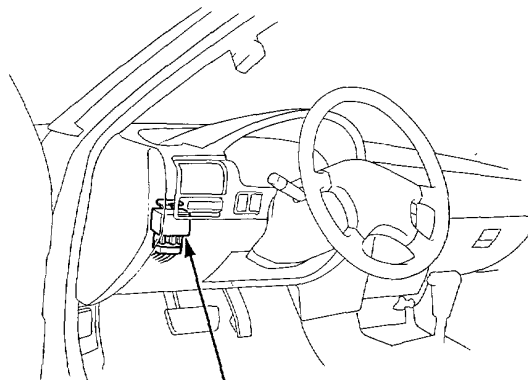


MAIN RELAY
Relay Testing, page 6-216
Harness Testing, page 6-216

RH:

IMA SENSOR
Troubleshooting
page 6-180

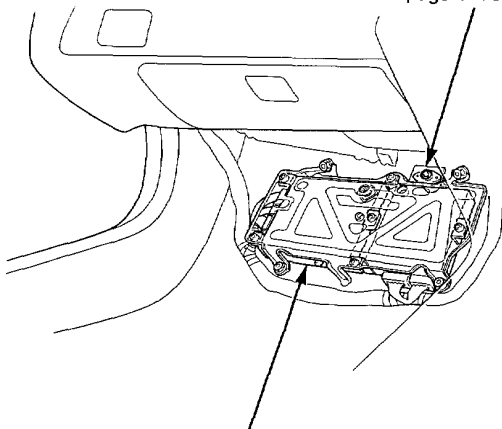

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-152

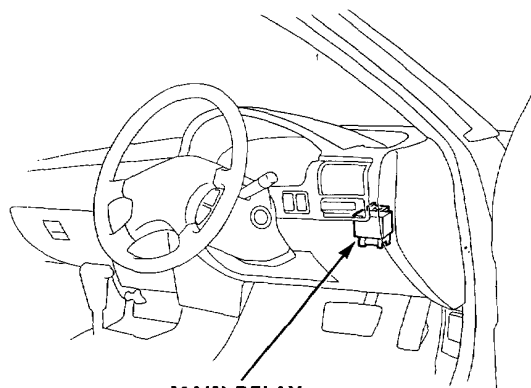

MAIN RELAY
Relay Testing, page 6-216
Harness Testing, page 6-216

Component Locations

Index

AIR CLEANER ELEMENT

- EC: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.
- Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-223
Disassembly, page 6-224


THROTTLE CABLE

Inspection/Adjustment, page 6-222
Installation, page 6-222

INTAKE CONTROL SOLENOID VALVE


Troubleshooting
page 6-229

AIR IN TAKE TUBE

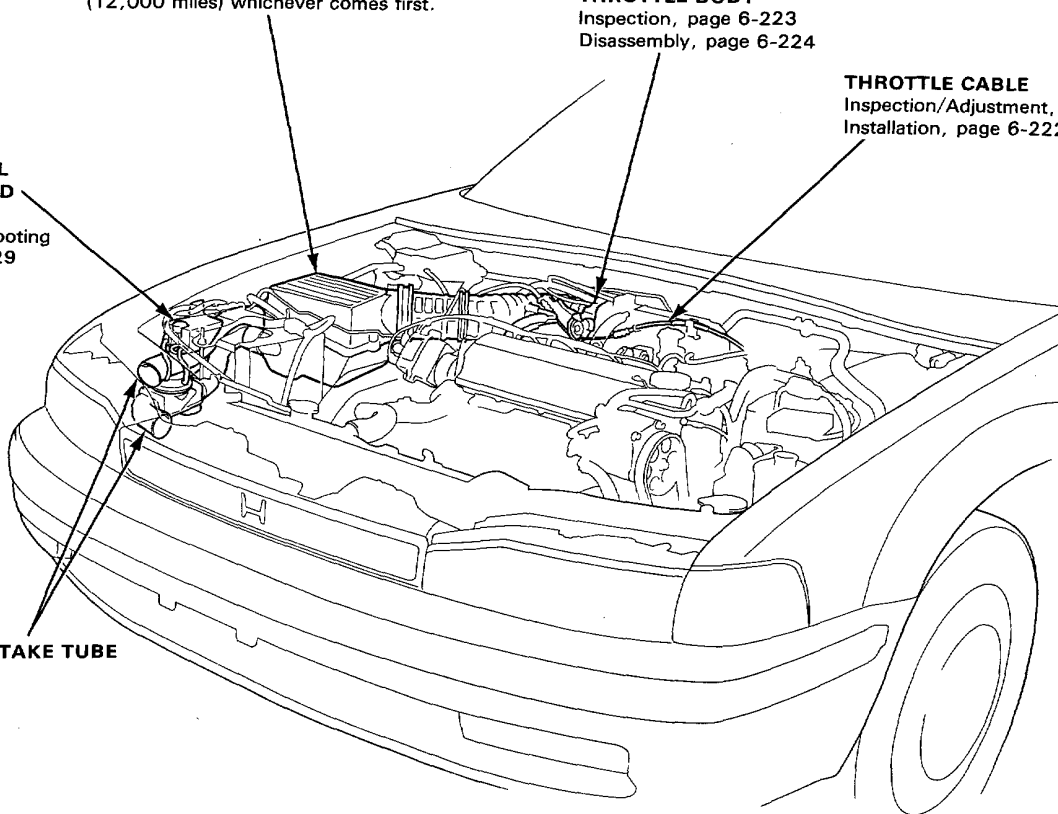



LH

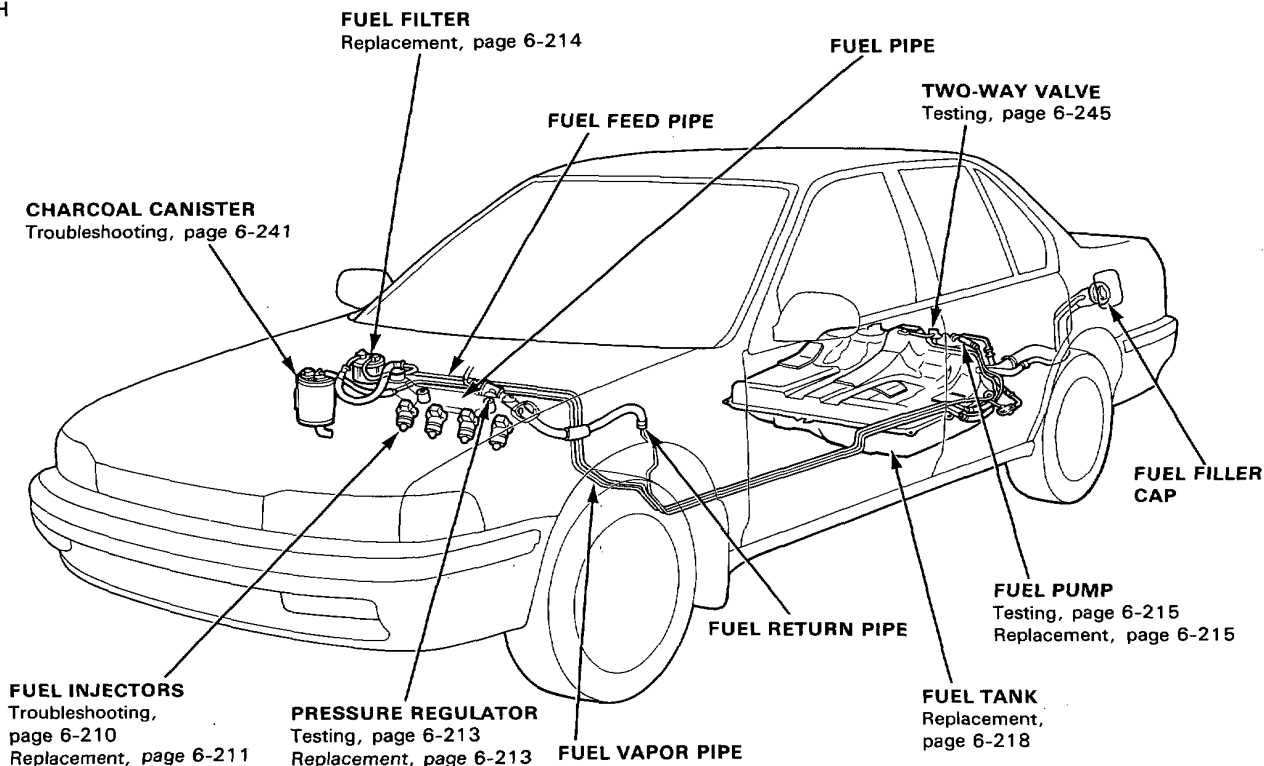

RH

