 




PGM-FI Control System

Troubleshooting Flowchart — Ignition Output Signal



Self-diagnosis LED indicates code 15: A problem in the Ignition Output Signal circuit.

- Check Engine warning light has been reported.
- LED indicates CODE 15.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 15 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at the distributor connector.

YES

Turn the ignition switch OFF.

Disconnect the 2P connector from the distributor.

Turn the ignition switch ON.

Measure voltage between BLK/YEL (+) terminal and body ground.

Is there battery voltage ?

NO

Repair open in BLK/YEL wire between the 2P connector and ignition switch.

YES

Turn the ignition switch OFF.

Reconnect the 2P connector.

(To page 6-185)

