 




(From page 6-188)

Check for Continuity WHT/RED wire between B3 and 22P connector of the A/T control unit.



Does continuity exist ?

NO

Repair open in WHT/RED wire between ECU (B3) and the A/T control unit.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

PGM-FI Control System

Troubleshooting Flowchart — A/T FI Signal B

