




Front Bumper

Replacement

NOTE: An assistant is helpful when removing the front bumper.

1. Open the hood, then remove the bumper mounting nuts.
 2. Remove the right and left front turn signal lights.
 3. Remove the 2 bumper mounting screws on each side at the corner edge of the bumper.
 4. Remove the 2 lower clips, the lower mounting bolts on each side and the 4 bumper mounting bolts.
NOTE: When removing the clips, loosen the screw, then remove the clips with a clip remover.
 5. Remove the bumper by sliding it forward.
- NOTE: Take care not to scratch the bumper.

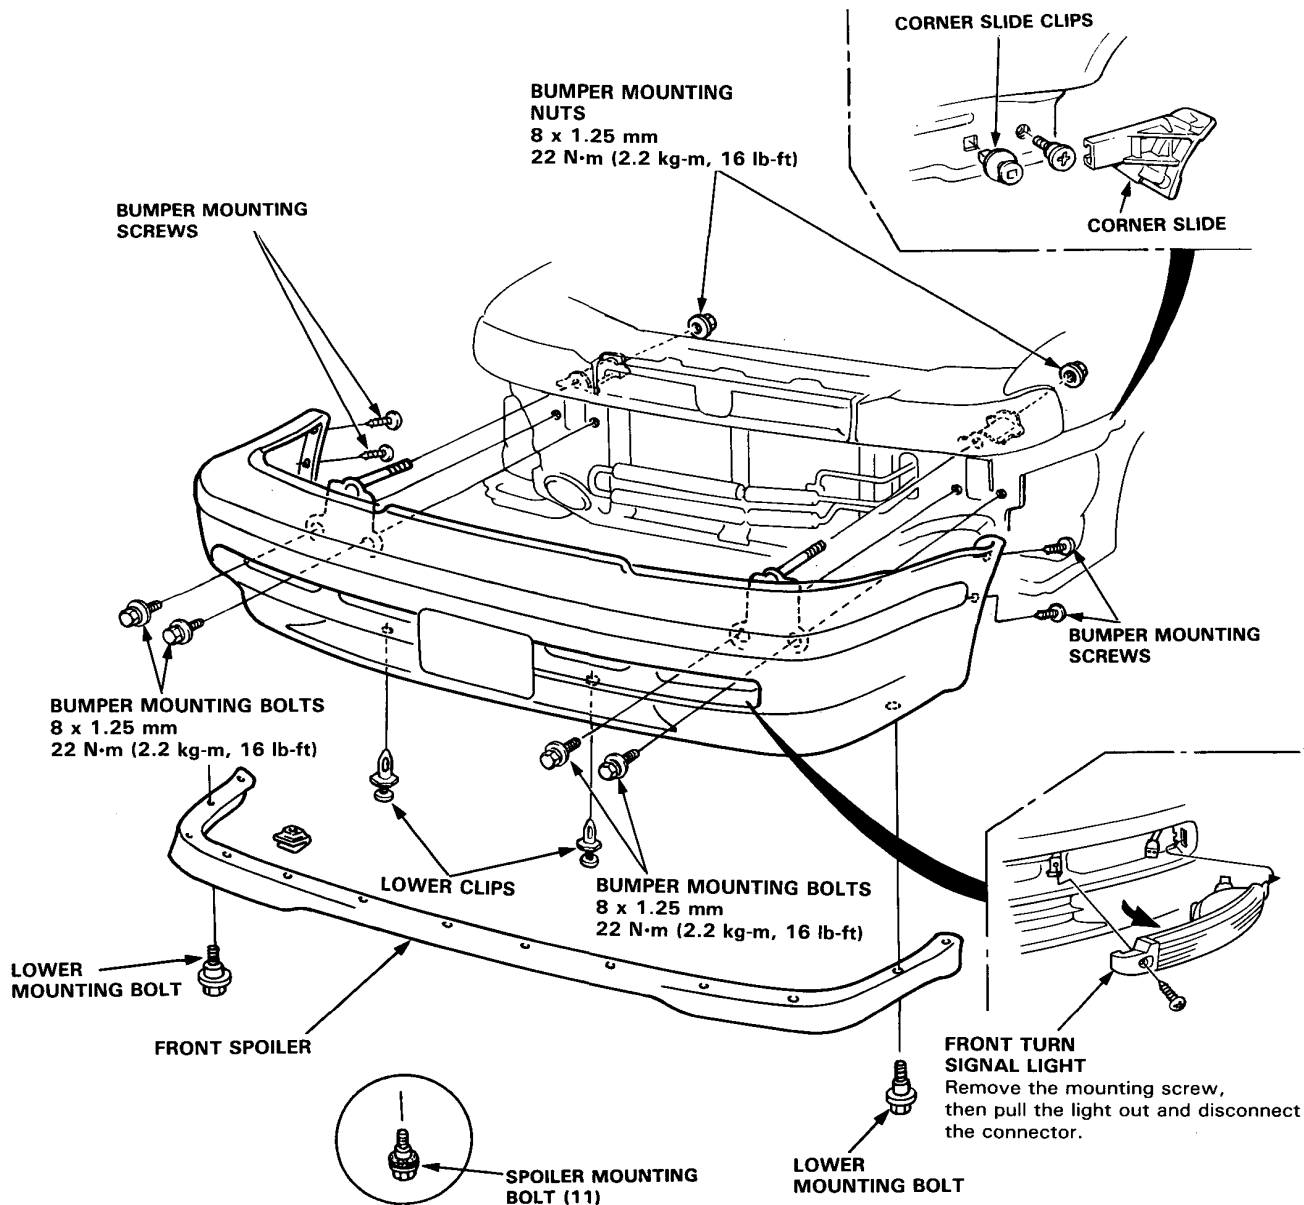

6. Installation is the reverse of the removal procedure.