

# Supplemental Restraint System (Type II)

## Troubleshooting

### Self-diagnosis system

When the ignition switch is turned ON, the SRS indicator light comes on and goes off after about 6 seconds, and the self-diagnosis indicator (LED) blinks one time, if the system is operating normally. If there is an abnormality in the SRS, the SRS indicator light will stay on while the LED in the SRS unit will indicate the system problem by blinking a failure code (see the table on next page).

- If the SRS indicator light does not come on, or does not go off after 6 seconds, or if it comes on while driving, the system must be inspected and repaired as soon as possible.
- To see the indicated failure code, remove the access panel at the left side of the steering wheel.
- If there is a failure in the system, the LED will first blink one time (OK signal), then it will indicate the failure code.
- If simultaneous system problems occur, the LED will indicate only the problem with the higher priority. The problem with the highest priority is that on top of the failure code table, the problem with the lowest priority is that at the bottom of the table (see page 16-143).

