


# Fuses

## Under-Dash Fuse Box

NOTE: Under-dash fuse box is located behind left kick panel (LHD) or right kick panel (RHD).

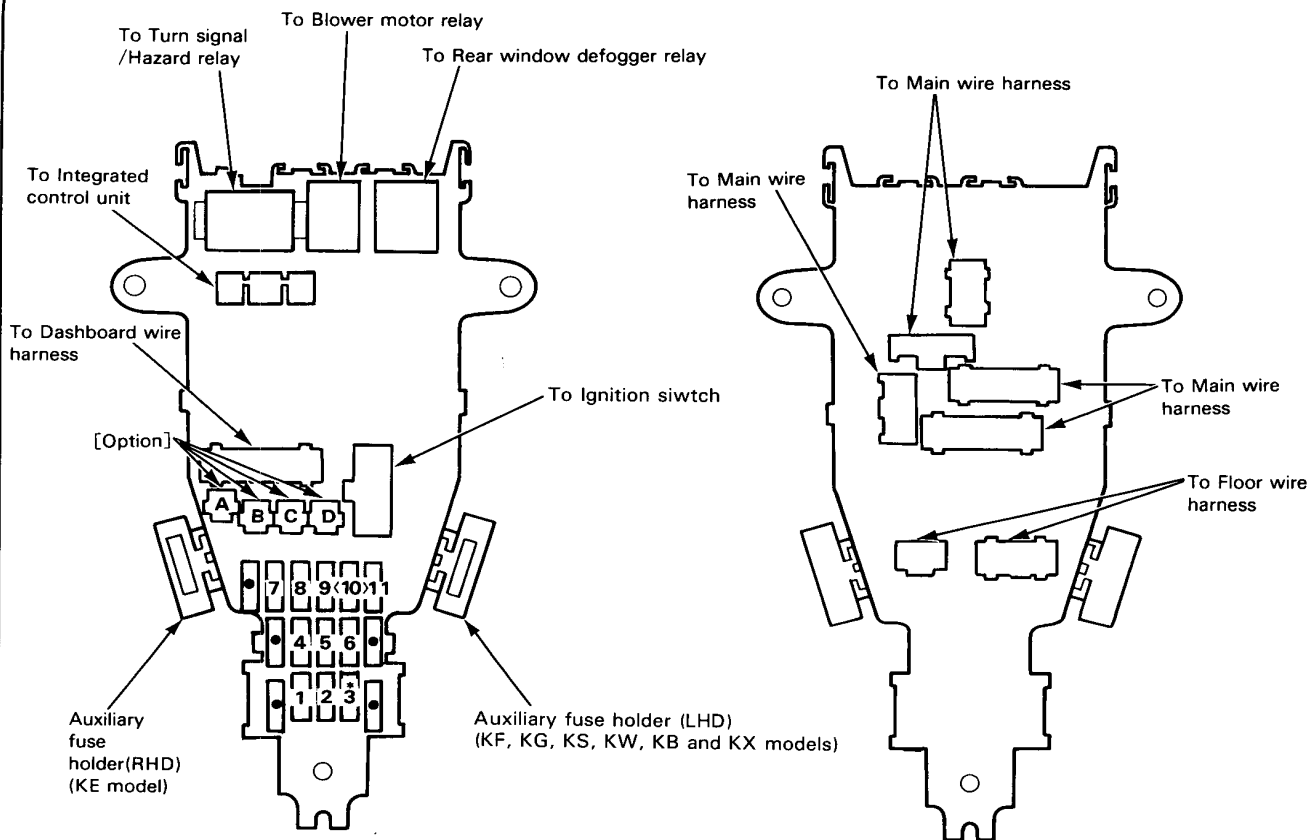

● : Spare fuse