


Horns

Component Location Index (With SRS)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

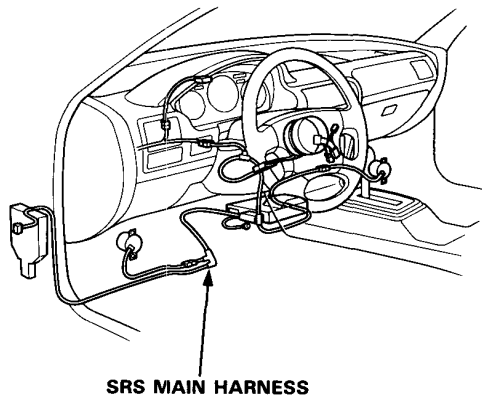

SRS Type II

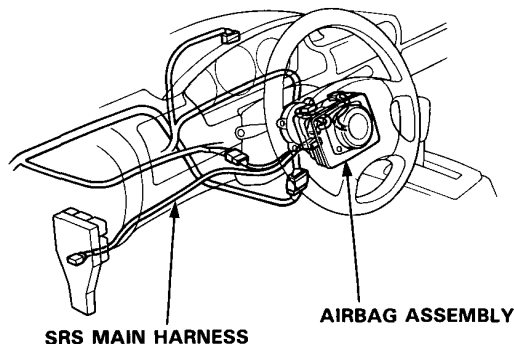

NOTE: RHD type is symmetrical to LHD type.

HORN SWITCHES

Test, page 16-84 and 86

