

Supplemental Restraint System (Type I)

Component Location Index

NOTE: RHD type is symmetrical to LHD type.

SRS INDICATOR LIGHT

(In the gauge assembly)

Troubleshooting, page 16-106

Gauge assembly, page 16-62

CABLE REEL

Removal, page 16-126

Installation, page 16-128

TO HORN

TO CRUISE CONTROL
SET/RESUME SWITCH

TO AIRBAG
ASSEMBLY

AIRBAG ASSEMBLY

Removal/Installation,

page 16-122

Disposal, page 16-124

RIGHT DASH SENSOR

Removal/Installation,
page 16-130

SRS UNIT

(Including cowl sensor)

Removal/installation,
page 16-132

SRS MAIN
HARNESS

LEFT DASH SENSOR

Removal/Installation,
page 16-130

UNDER - DASH
FUSE BOX

