

Maintenance Schedule

| | | | | | | |
|--|---|---|-----|-----|-----|-----|
| Service at the interval listed x 1,000 km (or miles) or af- ter that number of months, whichever comes first. | R—Replace C—Clean I—Inspect After inspection, clean, adjust, repair or replace if necessary. *1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first. *2 For Engine type F20A2, F20A6, F20A7, F20A8, F20Z3, F22A3, F22A7 and F22A8. | *3 For Engine type F20A2 and F20 A6 *4 For European and Australian model *5 Except the European and Australian model *6 For KS model, recommended by manufacturer only *7 For cars with auto choke *8 For cars with catalytic converter and KY models. *9 For KS model, replace every 2 years or 40,000 km (24,000 miles) whichever comes first after 30,000 km (18,000 miles). | | | | |
| | x 1,000 km | 20 | 40 | 60 | 80 | 100 |
| | x 1,000 miles | 12 | 24 | 36 | 48 | 60 |
| | months | 12 | 24 | 36 | 48 | 60 |
| Idle speed and idle CO | Except for KS and KX models | I | I | I | I | I |
| | KS and KX model | | | | | I |
| Valve clearance | | I | I | I | I | I |
| Alternator drive belt | | | I | | I | |
| Timing belt and timing balancer belt | | | | | | R |
| Water pump | | | | | | I |
| <input checked="" type="checkbox"/> Engine oil and oil filter | | Replace every 10,000 km (6,000 miles) or 6 months | | | | |
| <input type="checkbox"/> Transmission oil | | | R | | R | |
| • Radiator coolant (Engine coolant) | | | | | R*1 | |
| Cooling system hoses and connections | | | I | | I | |
| E.G.R. system*2 | | | | | | I |
| Secondary air supply system (For carburetor type)*3 | | | | | | I |
| <input type="checkbox"/> Air cleaner element*4 | | | R | | R | |
| <input type="checkbox"/> Air cleaner element*5 | | R | R | R | R | R |
| Fuel filter (Including aux. filter for carburetor type) | | | R | | R | |
| Tank, fuel line and connections | | | I | | I | |
| Intake air temperature control system (For carburetor type) | | | | | | I |
| Throttle control system (For carburetor type) | Except for KS and KX models KS and KX model | | I | | I | |
| Choke mechanism (For carburetor type) | Excpet for KS models KS model | | I | | I | |
| Choke opener operation (For carburetor type)*7 | | | | C*6 | | I |
| Evaporative emission control system*8 | | | | | | I |
| Ignition timing and control system | Except for KS and KX models KS and KX model | | I | | I | |
| Spark plugs (For cars using unleaded gasoline) | | | R*9 | | R*9 | |
| Spark plugs (For cars using leaded gasoline) | | R | R | R | R | R |
| Distributor cap and rotor | Except for KS and KX models KS and KX model | | I | | I | |
| Ignition wiring | Except for KS and KX models KS and KX model | | I | | I | |
| Positive crankcase ventilation valve | Except for KS and KX models KS and KX model | | I | | I | |
| Blow-by filter (For carburetor type) | | | I | | I | |

*: Day to day care (such as oil, coolant check and replenishment) should be done practically according to the owner's manual by the customer.

☐: Under severe driving conditions, service these items more often.



| | | | | | | |
|--|--|---|----|----|----|-----|
| Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first. | R—Replace I—Inspect After inspection, clean, adjust, repair or replace if necessary. | | | | | |
| | x 1,000 km | 20 | 40 | 60 | 80 | 100 |
| | x 1,000 miles | 12 | 24 | 36 | 48 | 60 |
| | months | 12 | 24 | 36 | 48 | 60 |
| Brake hoses and lines (Including ABS hoses and pipes for ABS type) | | I | I | I | I | I |
| Brake fluid (Including ABS fluid for ABS type) | | | R | | R | |
| <input type="checkbox"/> Front brake discs and calipers | | I | I | I | I | I |
| Front brake pads | | Inspect every 10,000 km (6,000 miles) or 6 months | | | | |
| <input type="checkbox"/> Rear brake discs, calipers and pads (For disc type brakes) | | | I | | I | |
| Rear brake drums, wheel cylinders and linings (For drum type brakes) | | | I | | I | |
| Parking brake | | I | I | | I | |
| Exhaust pipe and muffler | | I | I | I | I | I |
| Suspension mounting bolts | | I | I | I | I | I |
| Front wheel alignment (Except for 4WS type) | | I | I | I | I | I |
| Front and rear wheel alignment (4WS type) | | I | I | I | I | I |
| Steering operation, tie rod ends, steering gear box and boots (Including centre shaft for 4WS type) | Except for 4WS type | I | I | | I | |
| | 4WS type | I | I | I | I | I |
| ABS high pressure hose (For cars equipped with ABS) | | | | | R | |
| ABS operation (For cars equipped with ABS) | | I | I | | I | |
| <input type="checkbox"/> Power steering system | | I | I | I | I | I |
| Power steering pump belt | | | I | | I | |
| Catalytic converter heat shield (For cars equipped with catalytic converter) | | | | | | I |
| Supplemental Restraint System | For cars equipped with SRS type I *1 | Inspect system 10 years after first registration. | | | | |
| | For cars equipped with SRS type II *2 | Inspect system and replace slip ring 10 years after first registration. | | | | |

*1: 5D 2.2i type

*2: 4D 2.2i type except KS, KW models.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Maintenance Schedule

(cont'd)

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

- A: Repeated short distance driving
- B: Driving in dusty conditions
- C: Driving in severe cold weather
- D: Driving in areas with road salt or other corrosive materials
- E: Driving on rough or muddy roads
- F: Towing a trailer

| Condition | Maintenance item | Maintenance operation | Interval |
|-----------|-------------------------------------|-----------------------|---|
| •B••E• | Air cleaner element | R | Every 20,000 km (12,000 miles) or 12 months for European and Australian models Every 10,000 km (6,000 miles) or 6 months for other than European and Australian models |
| AB•••F | Engine oil and oil filter | R | Every 5,000 km (3,000 miles) or 3 months |
| •••••F | Transmission oil | R | Every 20,000 km (12,000 miles) or 12 months |
| AB•DEF | Front brake discs and calipers | I | Every 10,000 km (6,000 miles) or 6 months |
| AB•DEF | Rear brake discs, calipers and pads | I | Every 20,000 km (12,000 miles) or 12 months |
| •BC•E• | Power steering system | I | Every 10,000 km (6,000 miles) or 6 months |

R—Replace

I—Inspect

After inspection, clean, adjust, repair or replace if necessary.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.