


Doors


Index

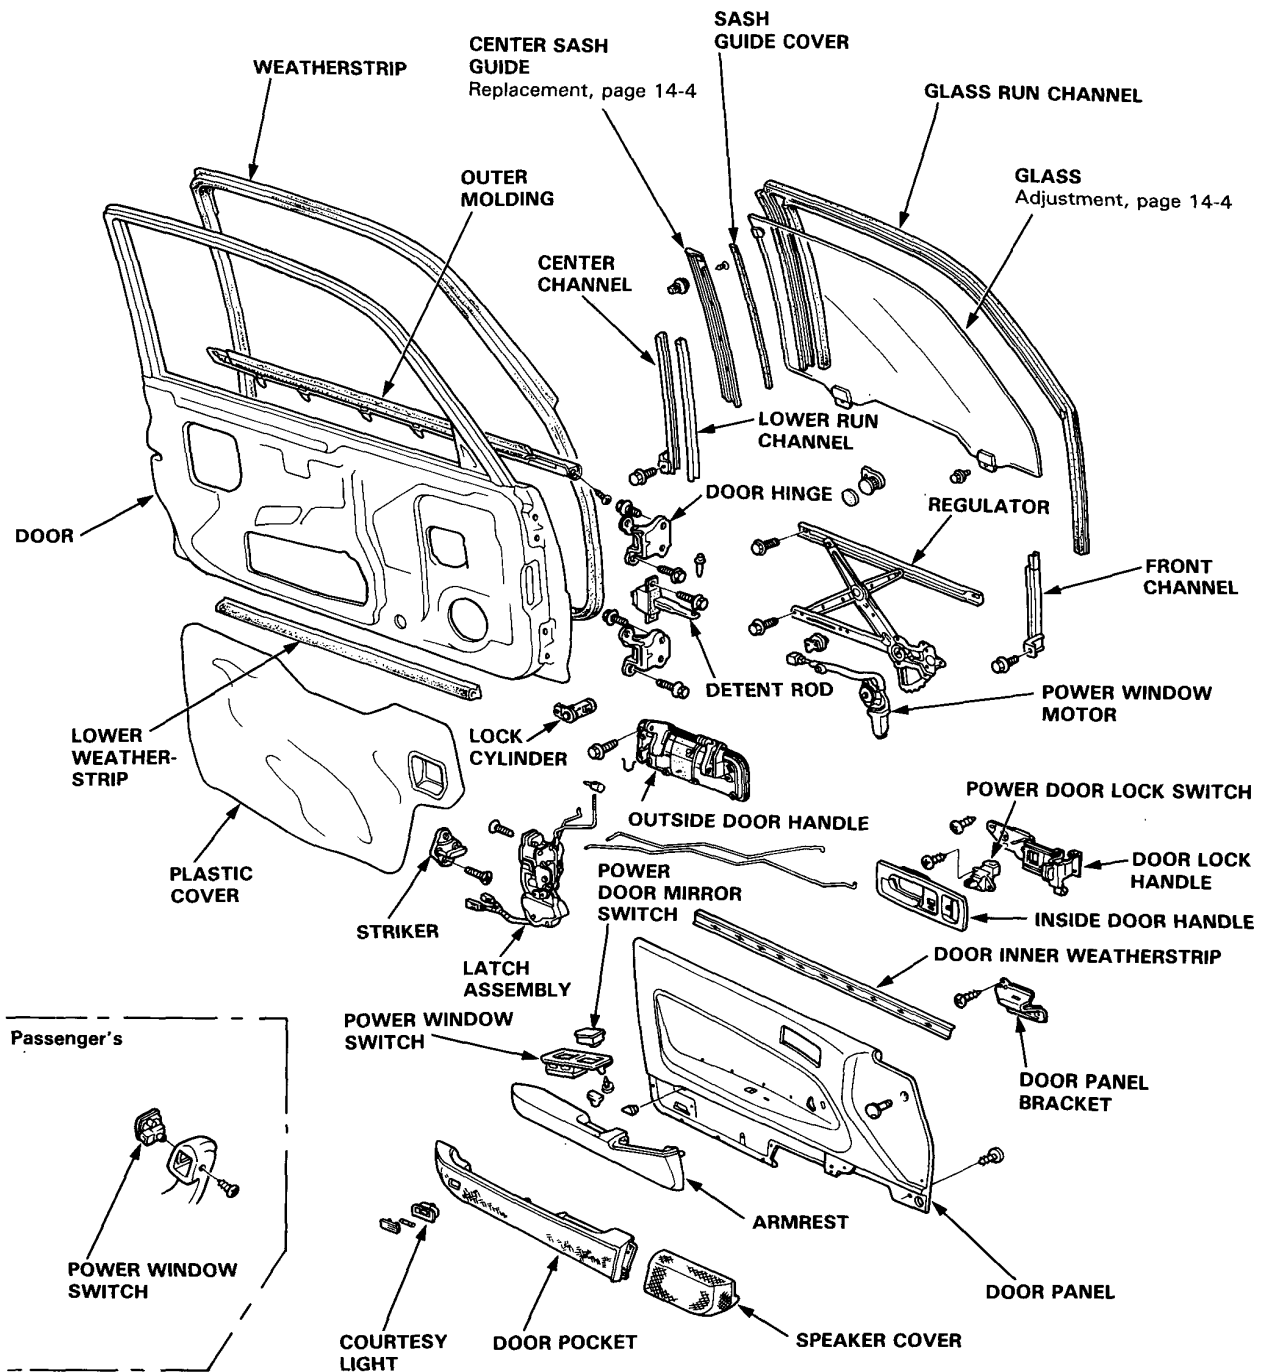




Inside Door Handle/Lock Handle Replacement


1. Remove the mounting screws, then pull the inside door handle out half-way and disconnect the latch rod.

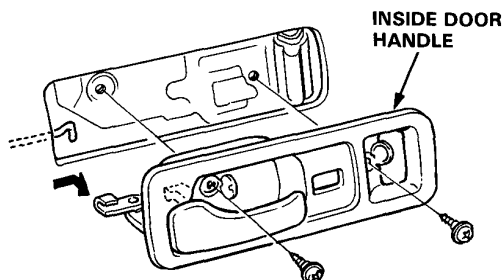


NOTE: Remove the panel with as little bending as possible to avoid creasing or breaking it.

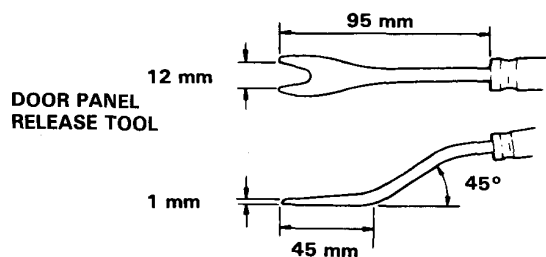


2. Remove the power door mirror switch and disconnect the connector.

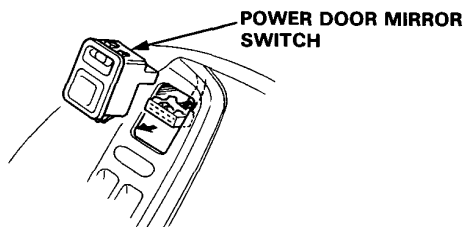

3. Remove the screws and clips (see door panel release tool) attaching the door panel. Remove the door panel by pulling it upward and disconnect the power window and courtesy light harnesses.

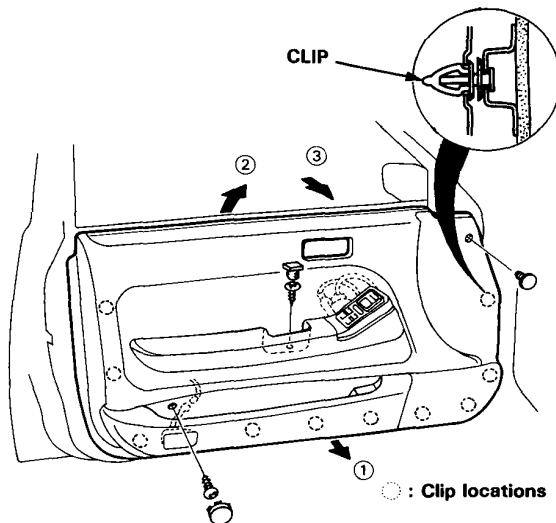

4. Disconnect the connector and latch rod. Remove the mounting screws, then remove the door lock handle.

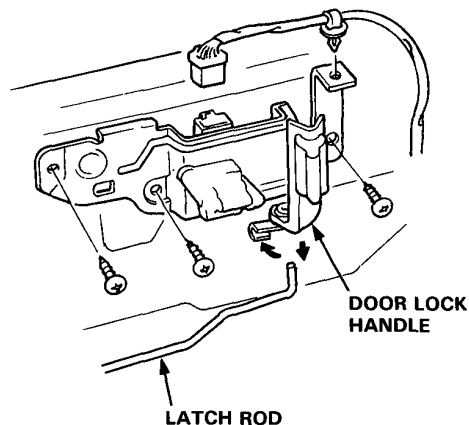


5. Installation is the reverse of the removal procedure.


Doors

Center Sash Guide/Glass Replacement

1. Remove:
 - Door panel (page 14-3)
 - Plastic cover
2. Lower the window fully.
3. Peel off the sash guide cover and remove the mounting screws, then remove the center sash guide from the door.

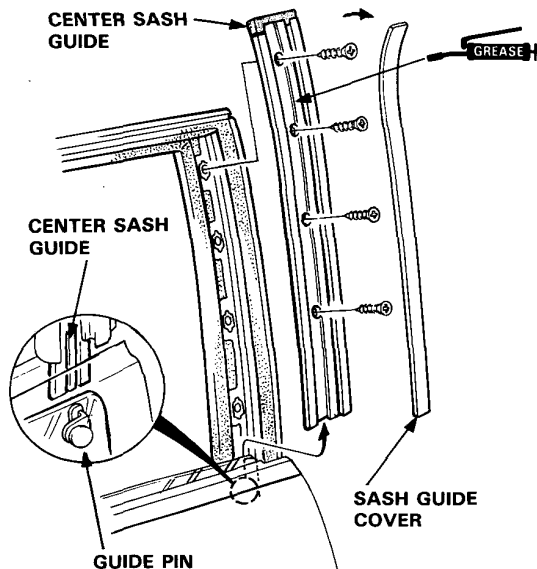

4. Carefully raise the window until you can see its mounting bolts, then remove the bolts.
5. Pull the glass out through the window slot.

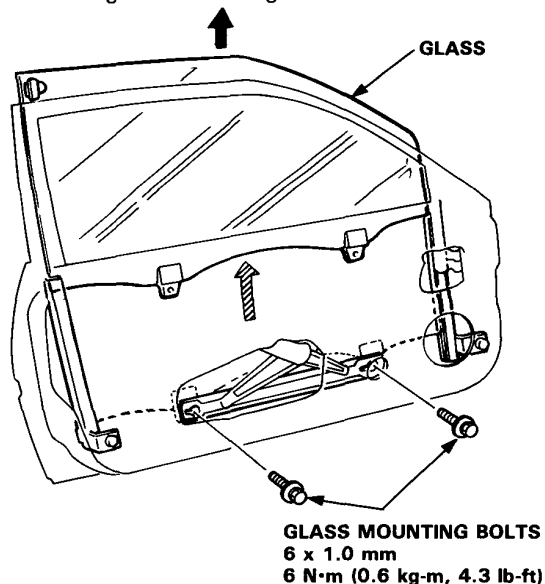

6. Installation is the reverse of the removal procedure.
7. Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed.

NOTE: If necessary, loosen the roller guide bolt and adjust the window glass so it is parallel with the glass run channel.

