


# Gauge Assembly

## Terminal Locations

### CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

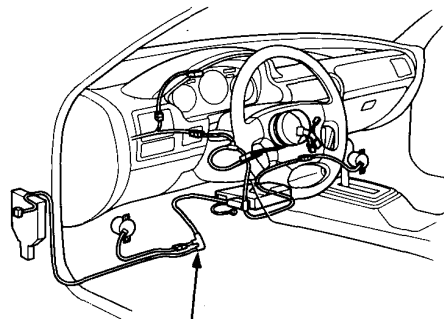

SRS MAIN HARNESS

