



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

| Symptom \ Item to be inspected | Blown No. 5 (10 A) fuse (In the under-dash fuse/relay box) | Power window relay | In the under-hood fuse/relay box | | Master switch | Passenger's door switch | Driver's motor | Pulser (In driver's motor) | Passenger's motor | Window regulator | Driver's switch input | Poor ground | Open circuit in wires, loose or disconnected terminals. |
|---|---|--------------------|----------------------------------|-------------------------------|---------------|-------------------------|----------------|----------------------------|-------------------|------------------|-----------------------|--------------|---|
| | | | Blown No. 30 [33] (20 A) fuse | Blown No. 33 [30] (20 A) fuse | | | | | | | | | |
| All windows do not operate. | 1 | 2 | | | | | | | | | | G251 G501 | BLK/YEL, YEL/GRN |
| Driver's window does not operate. | | | 1 | | | | 2 | | | 3 | 4 | | WHT/YEL |
| Driver's window does not operate in AUTO. | | | | | 1 | | | 2 | | | 3 | | BLU |
| Passenger's window does not operate. | | | | 1 | 2 | 3 | | | 4 | 5 | | | BLU/BLK |

[]: RHD