




Passenger's Door Switch Test

1. Remove the switch from the arm rest, then disconnect the 5-P connector.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A [C]	B	C [A]	D	E
UP					
OFF					
DOWN					

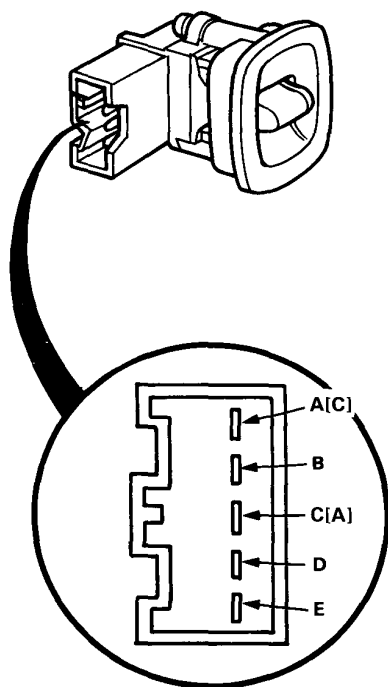

[]: RHD