



# System Description

## Vacuum Connections

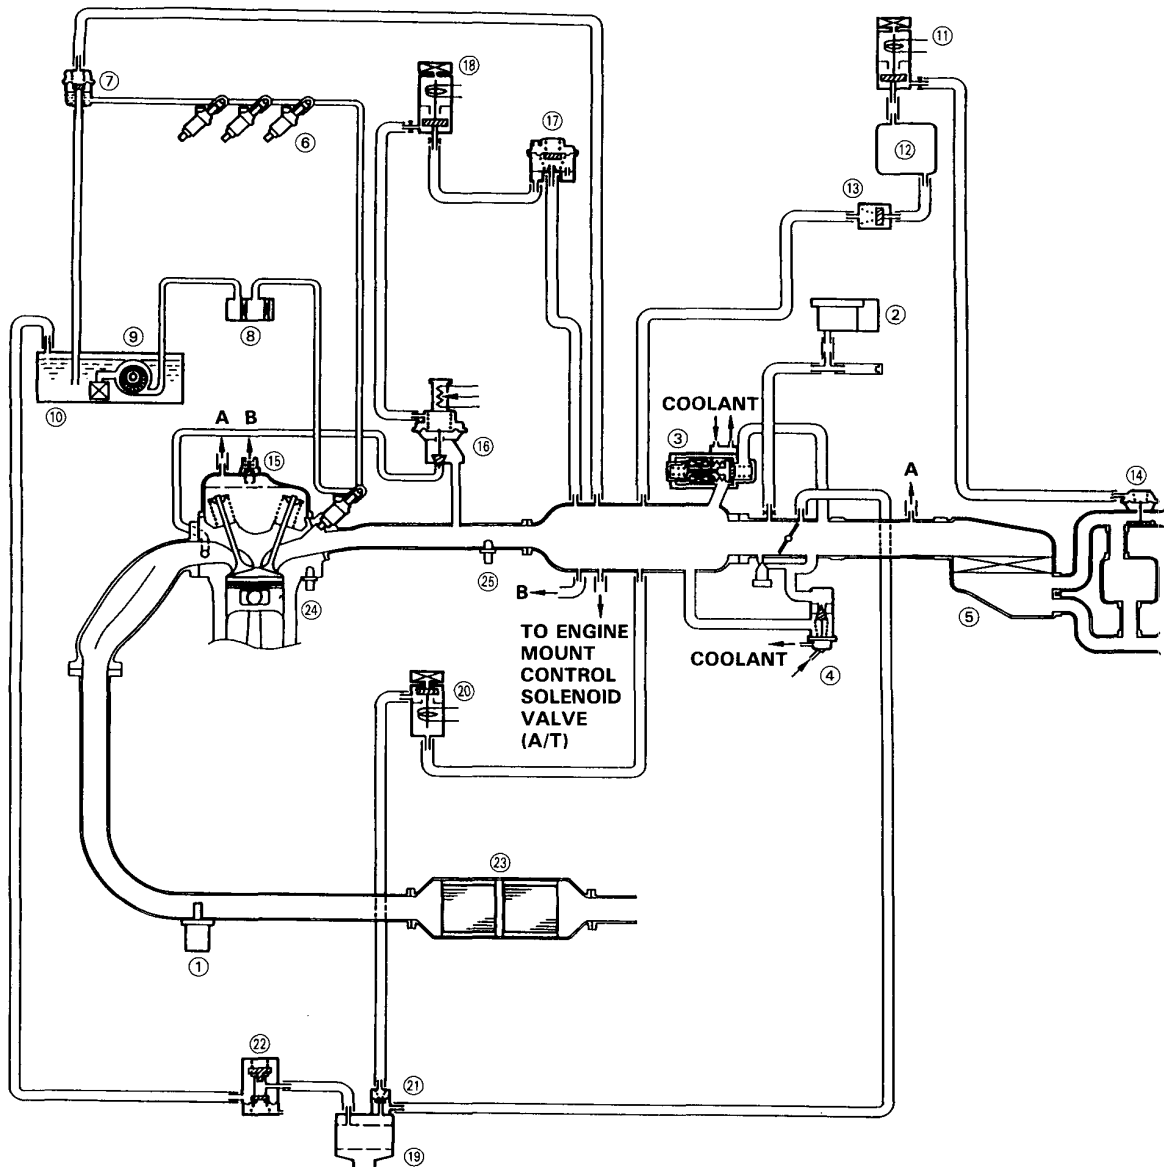

- ① HEATED OXYGEN (O<sub>2</sub>) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR CLEANER
- ⑥ FUEL INJECTOR
- ⑦ PRESSURE REGULATOR
- ⑧ FUEL FILTER
- ⑨ FUEL PUMP
- ⑩ FUEL TANK
- ⑪ INTAKE CONTROL SOLENOID VALVE
- ⑫ AIR CHAMBER


- ⑬ CHECK VALVE
- ⑭ INTAKE CONTROL DIAPHRAGM
- ⑮ PCV VALVE
- ⑯ EGR VALVE
- ⑰ CONSTANT VACUUM CONTROL (CVC) VALVE
- ⑱ EGR CONTROL SOLENOID VALVE
- ⑲ CHARCOAL CANISTER
- ⑳ PURGE CUT-OFF SOLENOID VALVE
- ㉑ PURGE CONTROL DIAPHRAGM VALVE
- ㉒ TWO-WAY VALVE
- ㉓ CATALYTIC CONVERTER
- ㉔ COOLANT TEMPERATURE (TW) SENSOR
- ㉕ INTAKE AIR TEMPERATURE (TA) SENSOR

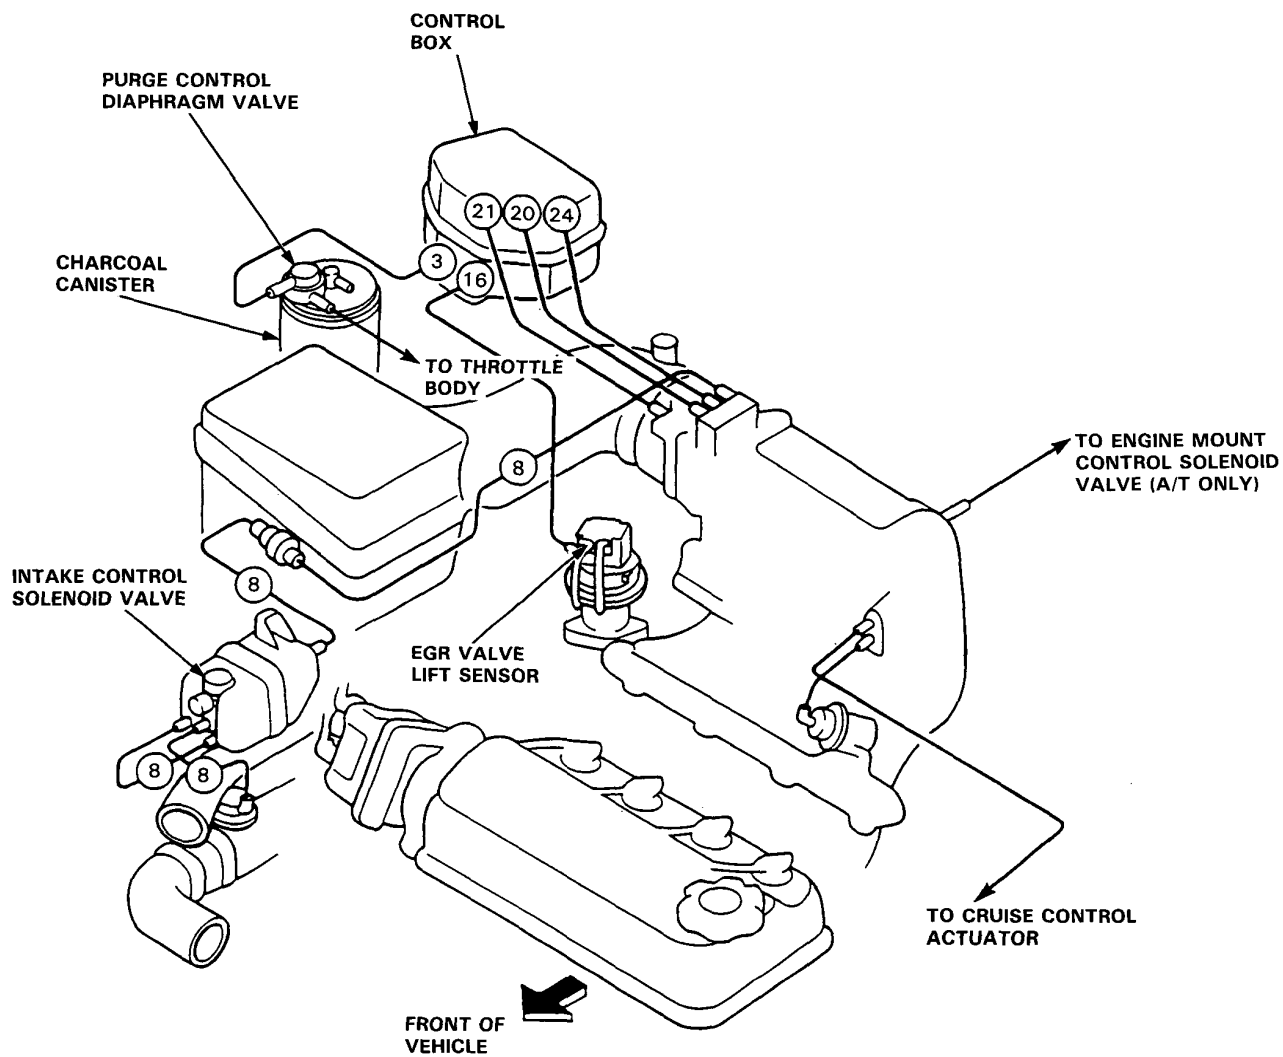

# System Description

## Vacuum Connections

Control Box (LHD):

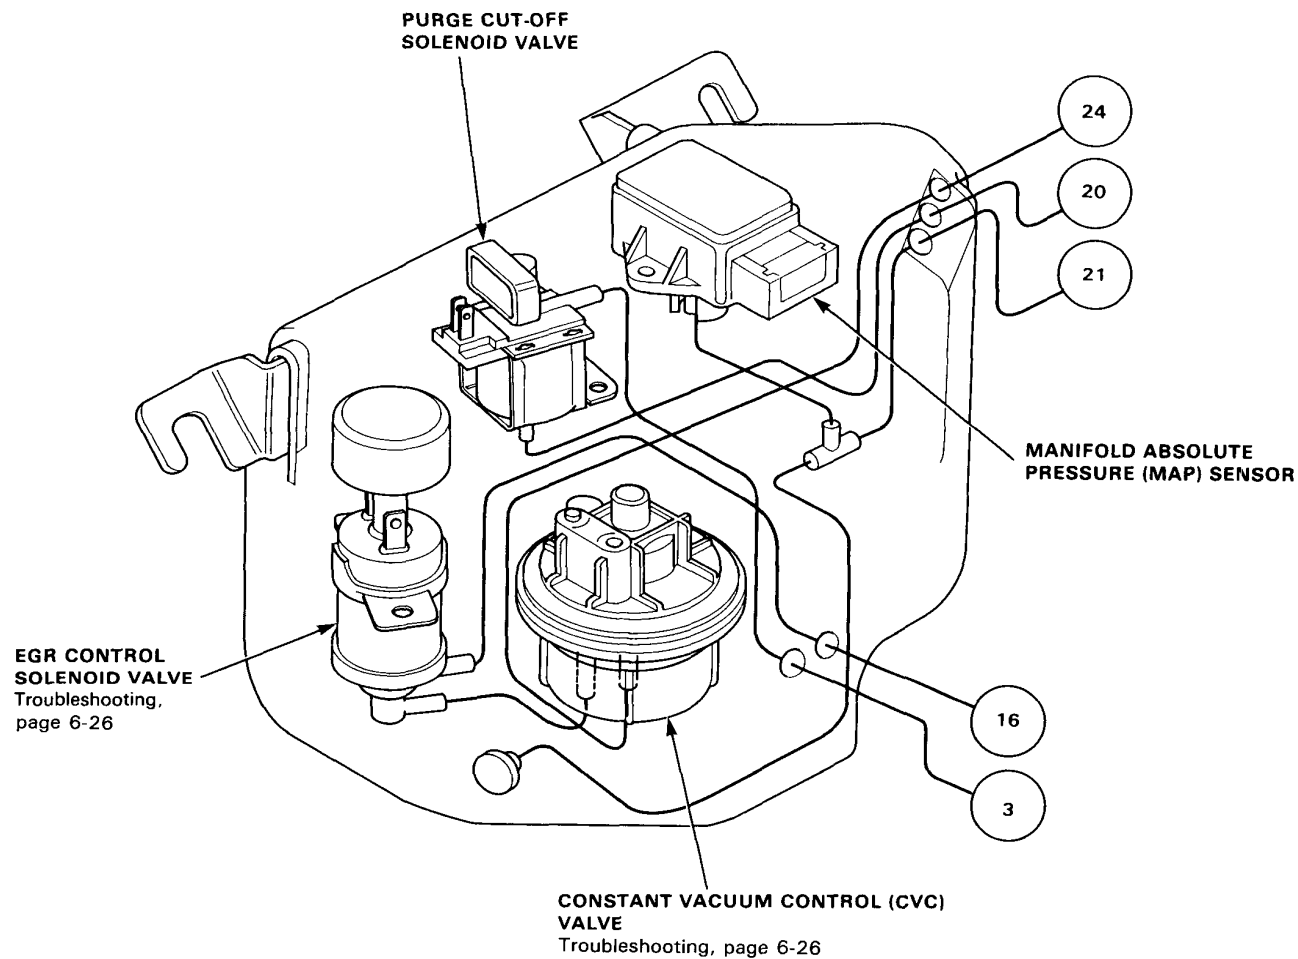




Control Box (RHD):

**MANIFOLD ABSOLUTE  
PRESSURE (MAP)  
SENSOR**

**CONSTANT VACUUM CONTROL (CVC)  
VALVE**

Troubleshooting,  
page 6-26

**PURGE CUT-OFF  
SOLENOID VALVE**

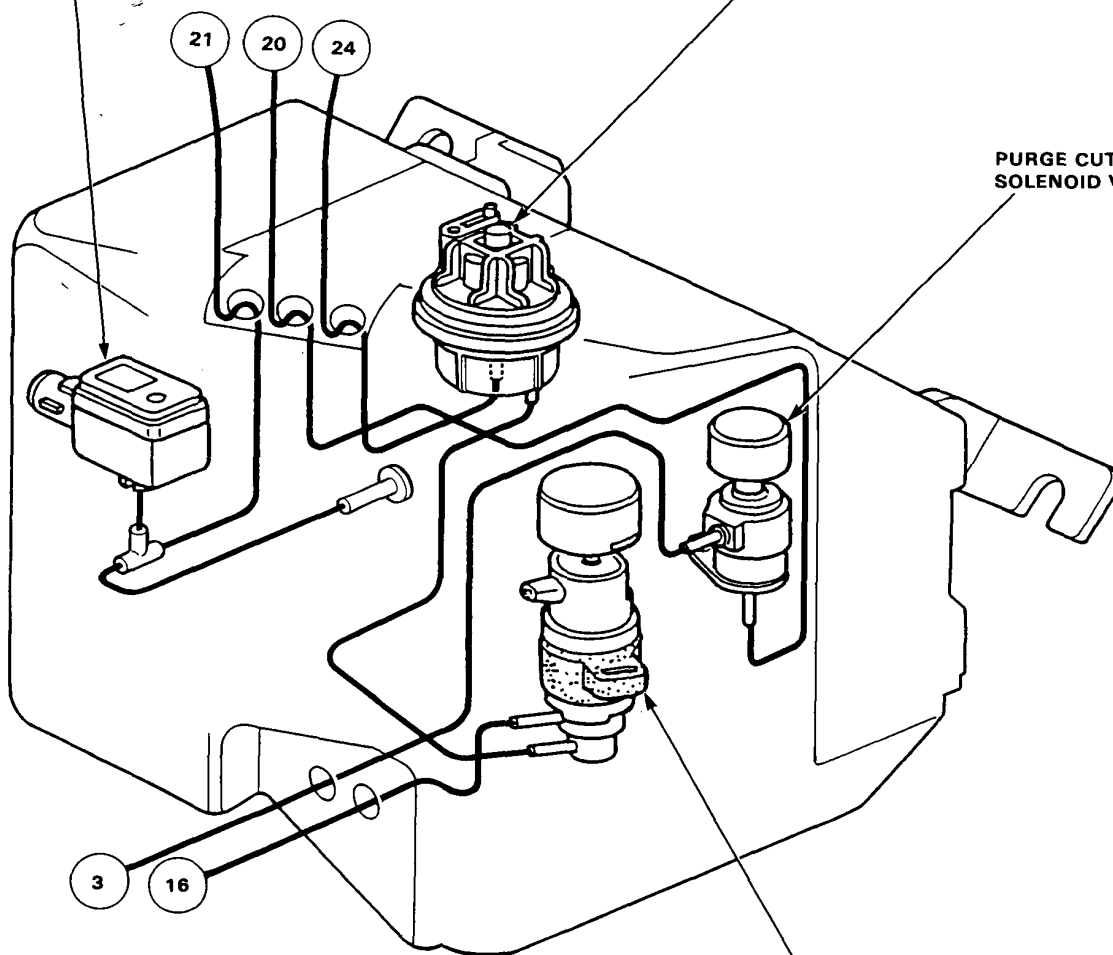

**EGR CONTROL  
SOLENOID  
VALVE**

Troubleshooting,  
page 6-26