


Clutch Disc, Pressure Plate



Installation (cont'd)

4. Install the pressure plate.

NOTE: Align the mark on the flywheel with the mark on the pressure plate.

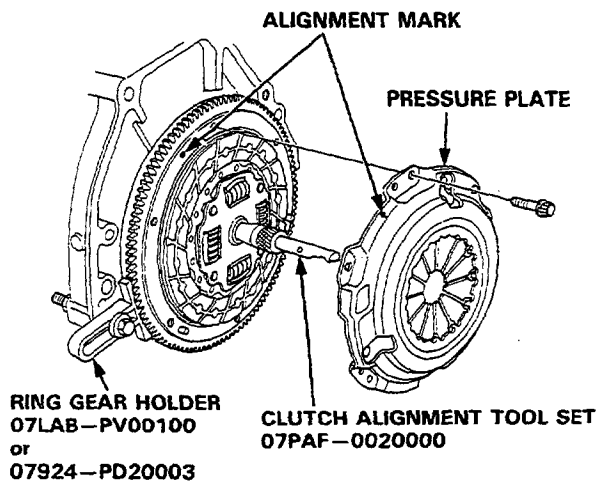

5. Torque the mounting bolts in a crisscross pattern as shown. Tighten the bolts in several steps to prevent warping the diaphragm spring.

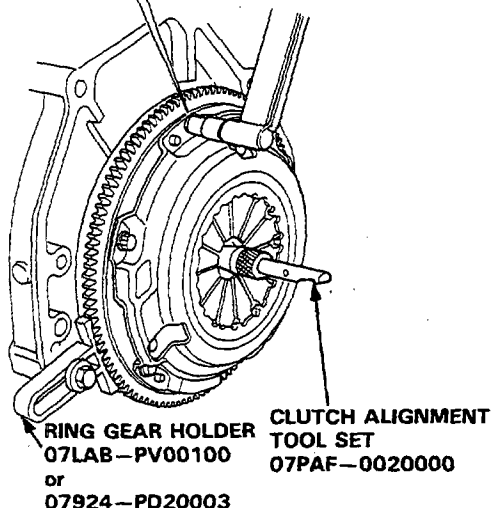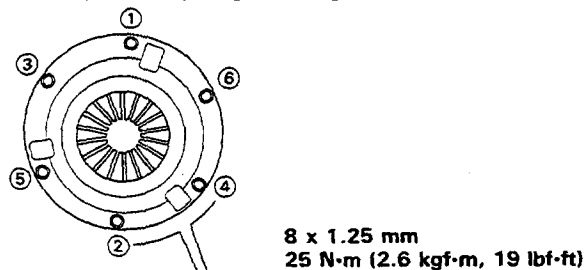


6. Remove the special tools.
7. Check the diaphragm spring fingers for height (see page 12-10).

Release Bearing


Removal/Inspection

1. Remove the release fork boot from the clutch housing.
2. Remove the release fork from the clutch housing by squeezing the release fork set spring with pliers. Remove the release bearing.

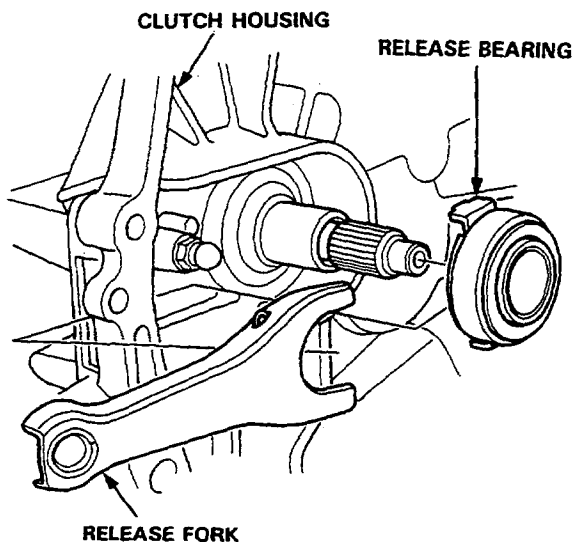

3. Check the release bearing for play by spinning it by hand.

CAUTION: The release bearing is packed with grease. Do not wash it in solvent

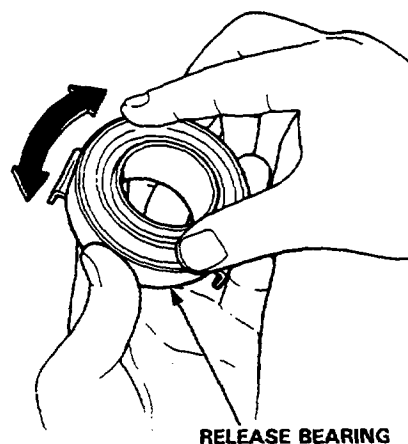

- If there is excessive play, replace the release bearing with a new one.