




Governor Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- Check that the governor works smoothly; replace it if it does not.
- Coat all parts with ATF before reassembly.

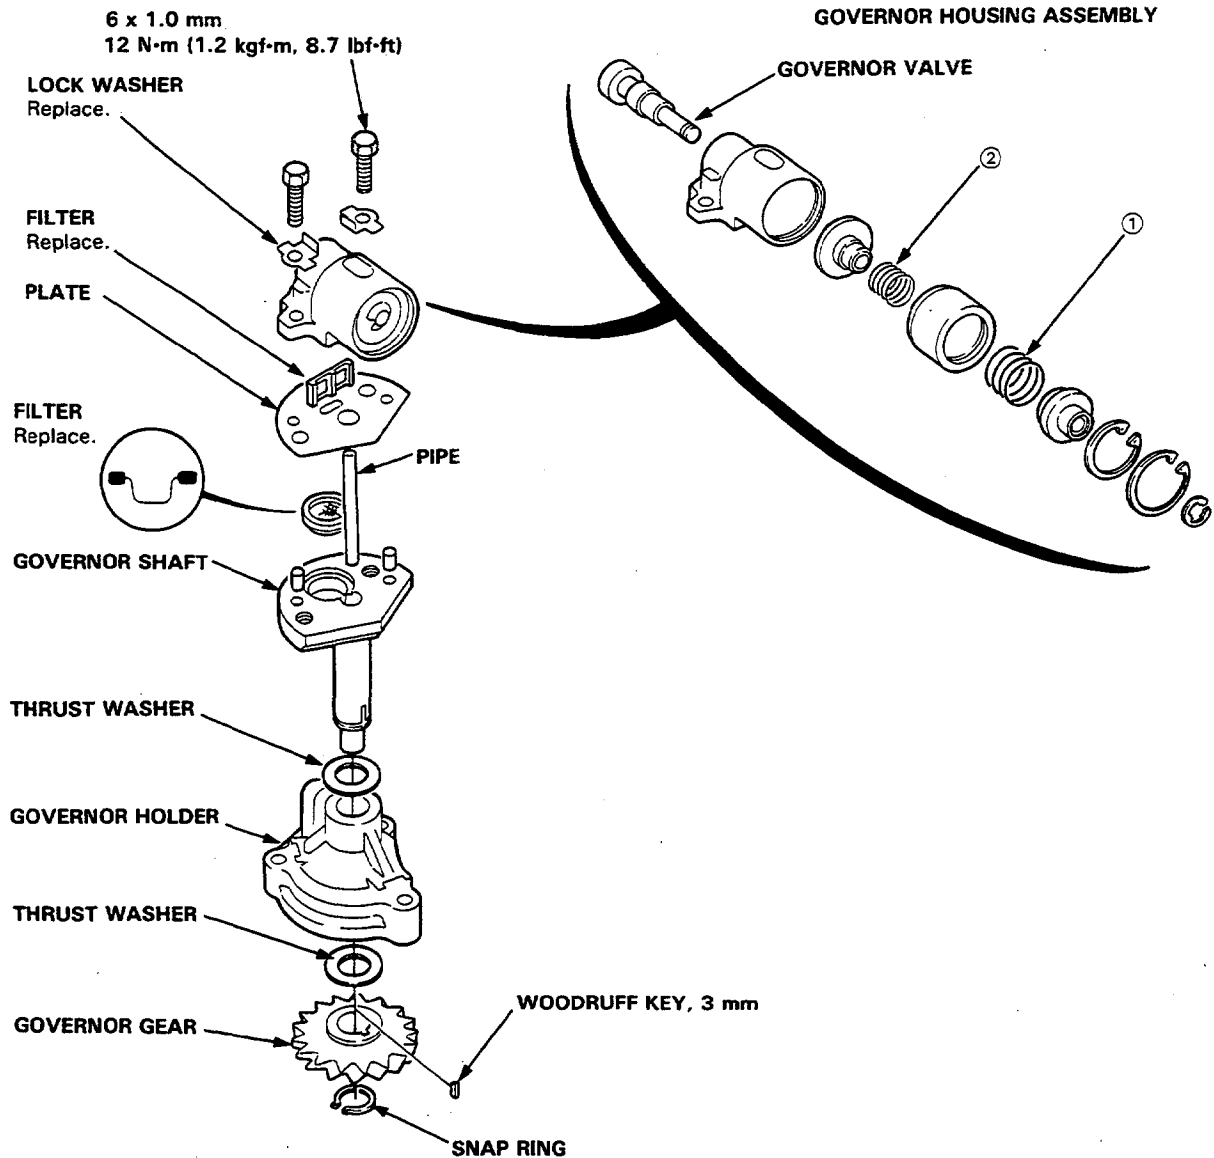

SPRING SPECIFICATIONS

Unit of length: mm (in)

No.	Spring	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Governor spring A	1.0 (0.039)	18.8 (0.740)	32.9 (1.295)	4.1
②	Governor spring B	0.9 (0.035)	11.8 (0.465)	27.8 (1.094)	6.0
		0.9 (0.035)	11.8 (0.465)	29.1 (1.146)	6.0