


Power Steering Pump

Installation

1. Connect the inlet and outlet hoses. Tighten the pump fittings securely.
2. Loosely install the pump in the pump bracket with mounting bolts.

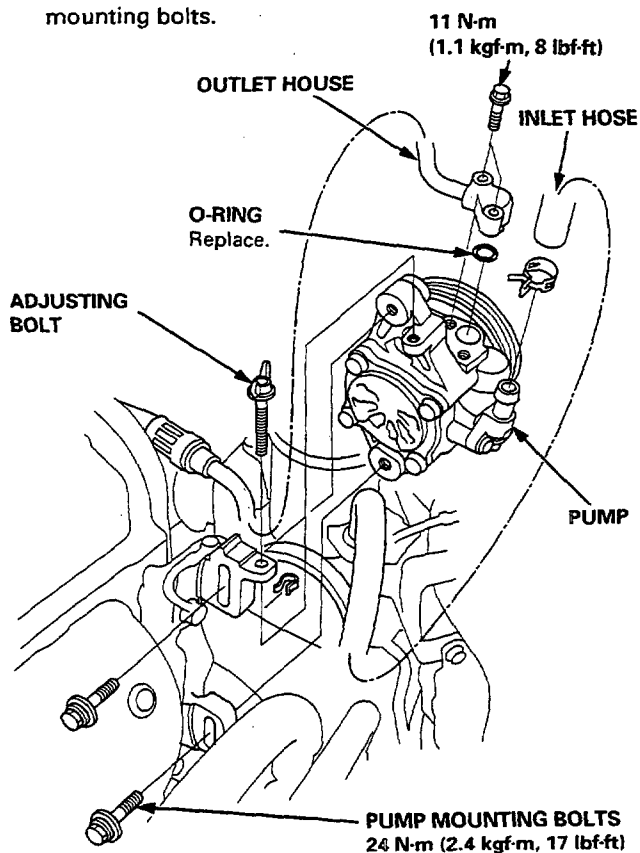


3. Install the pump belt.

CAUTION:

- Make sure that the power steering belt is securely on the grooves of the pulleys.
- Do not get power steering fluid or grease in the power steering belt or pulley faces. Clean off any fluid or grease before installation.

POWER STEERING BELT

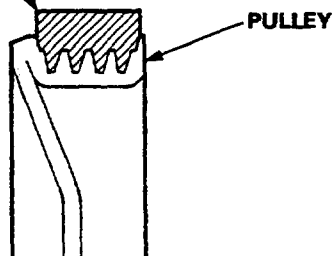

4. Adjust the pump belt (see page 17-20).
5. Fill the reservoir to the upper level line.


NOTE: Take care not to spill the fluid on the body and parts. Wipe off the spilled fluid at once.

CAUTION: Use only Genuine Honda Power Steering Fluid-V. Using other fluids such as ATF or other manufacturer's power steering fluid will damage the system.

SYSTEM CAPACITY:

LHD: 1.0 liter (1.06 US.qt, 0.88 Imp.qt)

RHD: 0.9 liter (0.95 US.qt, 0.85 Imp.qt)

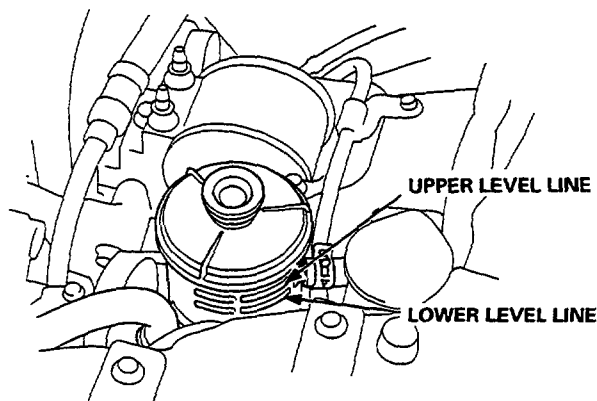

— Start the engine, let it run at idle, then turn the steering wheel lock-to-lock several times to bleed air from the system.

— Recheck the fluid level and add some if necessary.

CAUTION: Do not fill the reservoir beyond the upper level line.