




Mirror Holder Replacement


Power mirror (except heated type):

1. Insert a screwdriver in the mirror housing through the service hole, and loosen the actuator retaining screw.

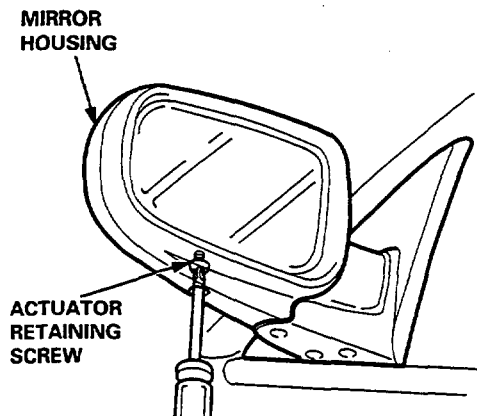

2. Pull out the mirror holder from the mirror housing.
3. Pull the lock cap stopper and remove the stopper pin, then separate the actuator and mirror holder.

NOTE: If the mirror is equipped with a defogger, you cannot separate the actuator and mirror holder.

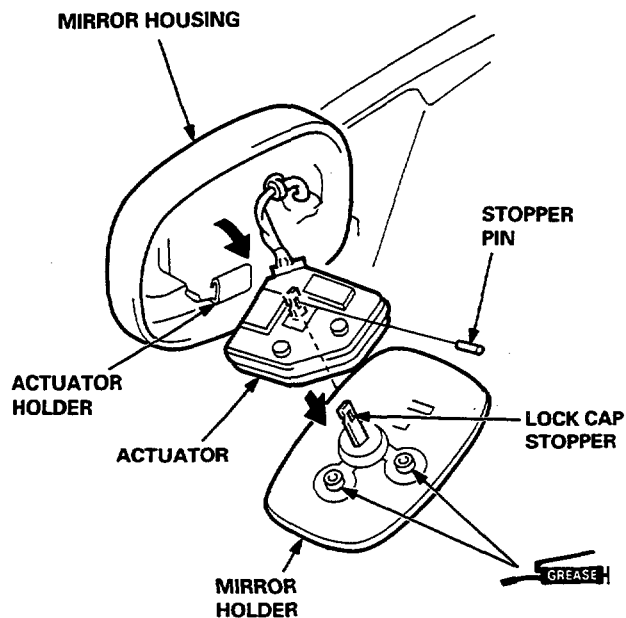


4. Installation is the reverse of the removal procedure.

NOTE: Apply grease to the locations indicated by the arrows.


Manual mirror:

1. Insert a screwdriver in the mirror housing through the service hole, and loosen the mirror holder retaining screw.

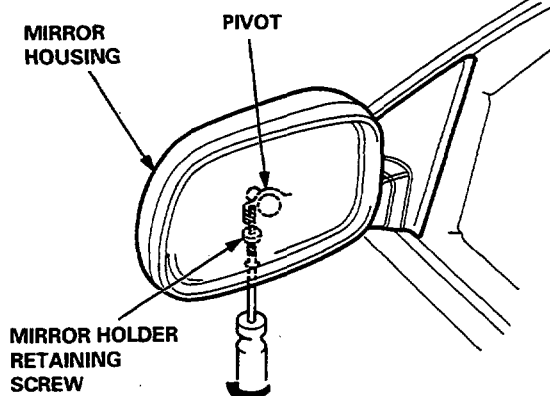

2. Carefully pry out the mirror holder with a flat tip screwdriver as shown.

CAUTION: To prevent damage to the mirror, wrap the end of the screwdriver with a shop towel.

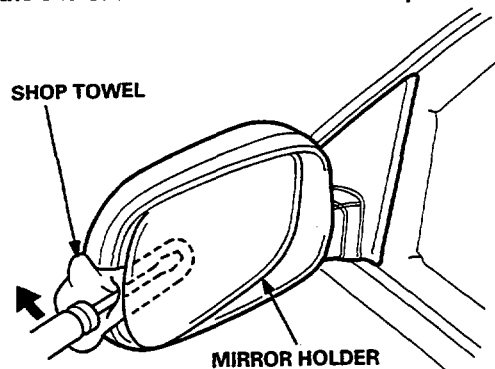

3. Installation is the reverse of the removal procedure.

NOTE: Apply grease to the location indicated by the arrows.

