

# Interior Trim

## Replacement

### CAUTION:

- Wear gloves to remove and install the trim and panels.
- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.


NOTE: Take care not to bend or scratch the trim and panels.

### Front door sill molding/Kick panel/Front pillar trim removal:

NOTE: LHD is shown, RHD is symmetrical.

1. Remove the front door sill molding.

▷: Clip locations, 3

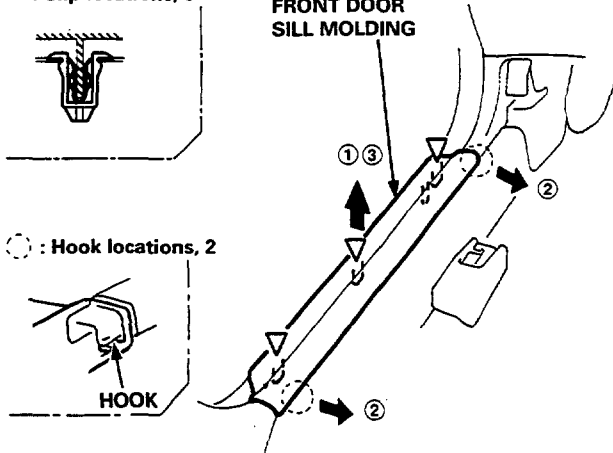


2. Remove the kick panel.

NOTE: Remove the driver's kick panel while pulling the hood release handle.


▷: Clip locations

A▷, 1


Driver's:

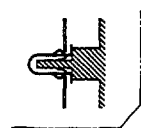

Passenger's:

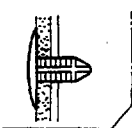


B▷, 1

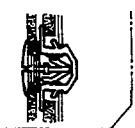

C▷, 1




HOOD RELEASE HANDLE

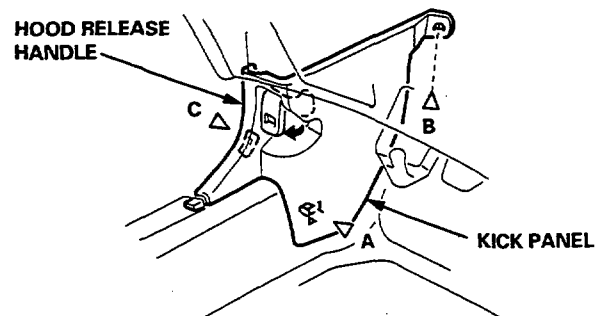

3. Pull the front door trim away, then remove the front pillar trim.


▷: Clip locations, 4

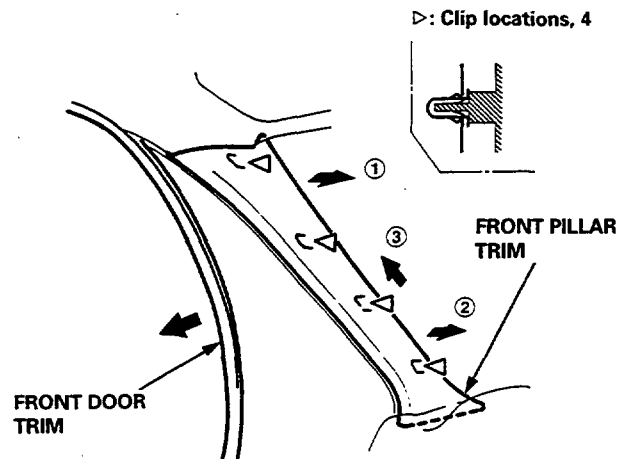

4. Installation is the reverse of the removal procedure.

### NOTE:

- If necessary, replace any damaged clips.
- Make sure the front door trim is installed securely.

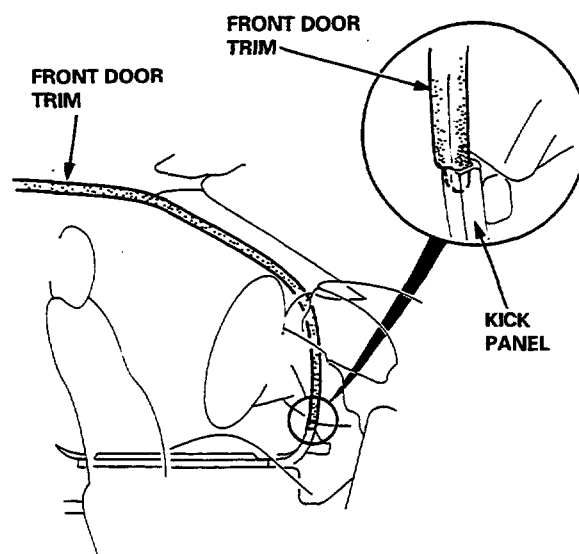


(cont'd)

# Interior Trim

## Replacement (cont'd)


### Center pillar lower trim/Center pillar upper trim removal:

1. Remove the front door sill molding (see page 20-55) and rear door sill molding (see page 20-57).
2. Remove the center pillar lower trim.

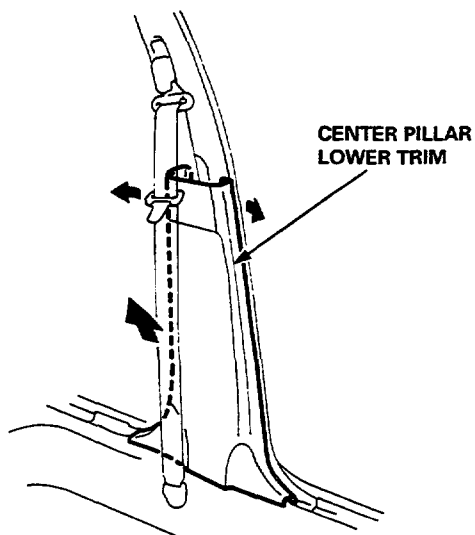

3. Remove the upper anchor bolt from the front seat belt (see page 20-70).
4. Pull the front and rear door trim back, then remove the center pillar upper trim.

▷: Clip locations

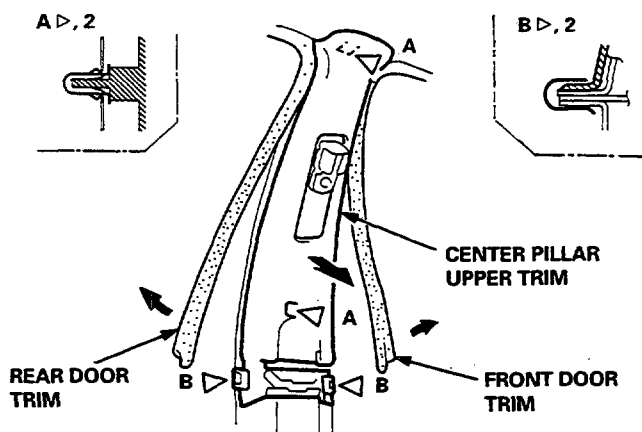


5. Installation is the reverse of the removal procedure.

#### NOTE:

- If necessary, replace any damaged clips.
- Before attaching the center pillar lower trim, make sure there are no twists or kinks in the front seat belt.
- Make sure the front and rear door trim is installed securely.

### Rear shelf/Rear side shelf/Rear door sill molding/Rear seat side trim/Rear pillar trim panel removal:



1. Remove the rear shelf.

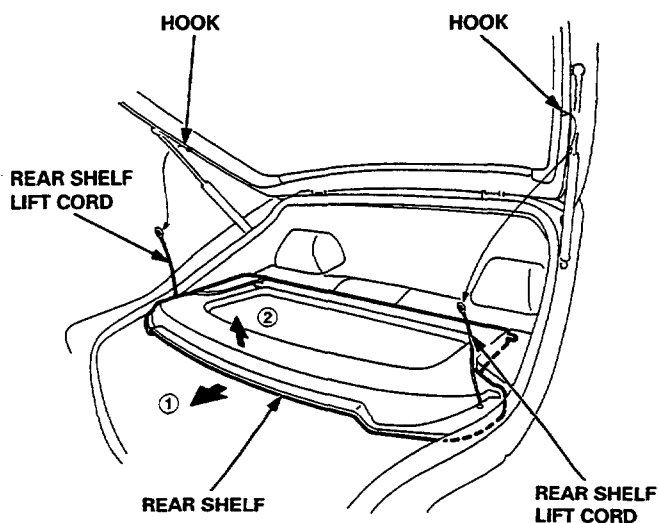

2. Remove the rear side shelf.


▷: Screw location, 1

 ▷: Clip locations, 3

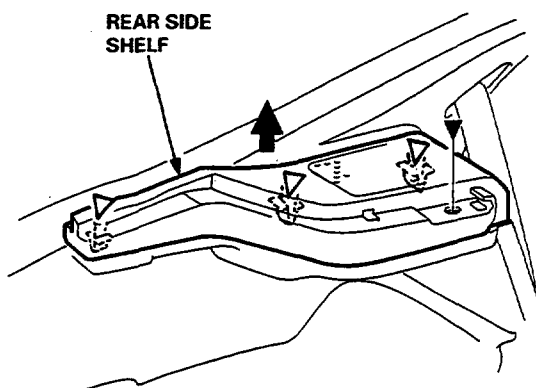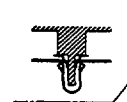





3. Remove the rear door sill molding.

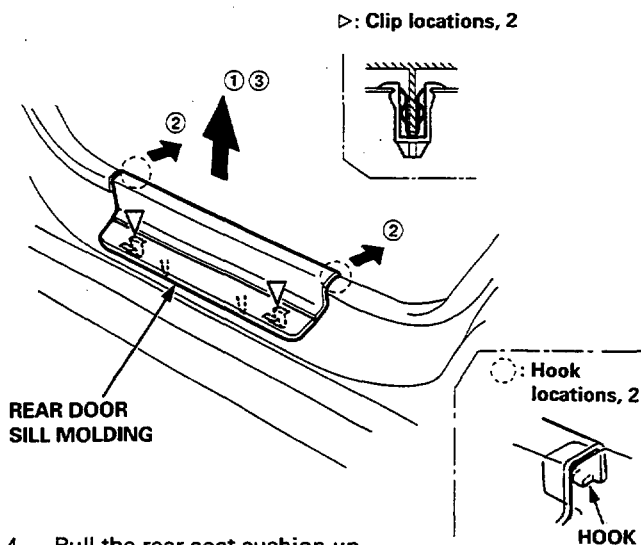


4. Pull the rear seat cushion up.

5. Remove the rear seat-back (see page 20-67).

6. Remove the rear seat side trim.

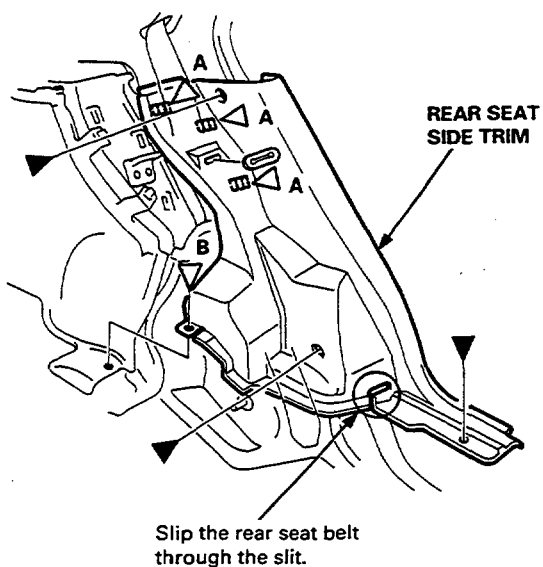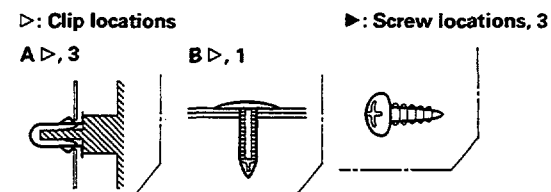

7. Pull the rear door trim away, then remove the rear pillar trim panel.

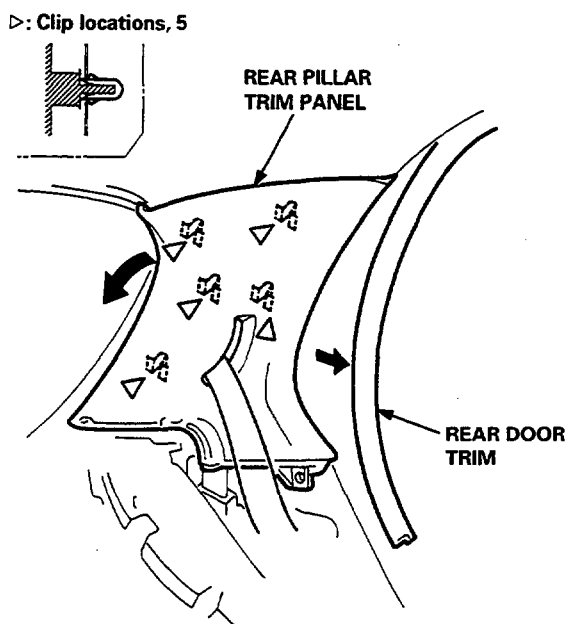

8. Remove the lower anchor bolt from the rear seat belt, then slip the rear seat belt through the slit in the rear pillar trim panel (see page 20-72).

9. Installation is the reverse of the removal procedure.

**NOTE:**

- If necessary, replace any damaged clips.
- When installing the rear pillar trim panel and rear seat side trim, make sure there are no twists or kinks in the rear seat belt.
- Make sure the rear door trim is installed securely.

