



# Headliner

## Replacement


**CAUTION:** When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

**NOTE:**

- Take care not to bend and scratch the headliner.
- Be careful not to damage the dashboard and other interior trim.
- Fold the front seat-back backward.


1. Remove:
  - Front and rear door trim (see pages 20-55, 56, 57)
  - Front pillar trim (see page 20-55)
  - Front ceiling light (see section 23)

2. Remove the sunvisor and holder from each side.


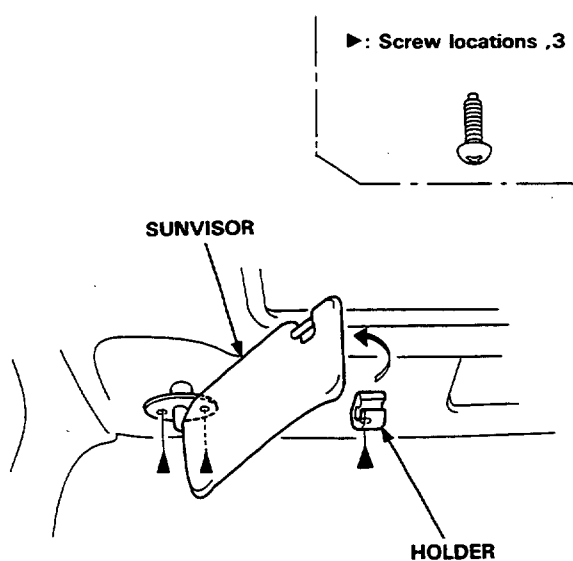


**NOTE:**


- If necessary, remove the sunvisor bracket as shown.
- When installing the sunvisor bracket, apply grease and make sure it's installed properly.

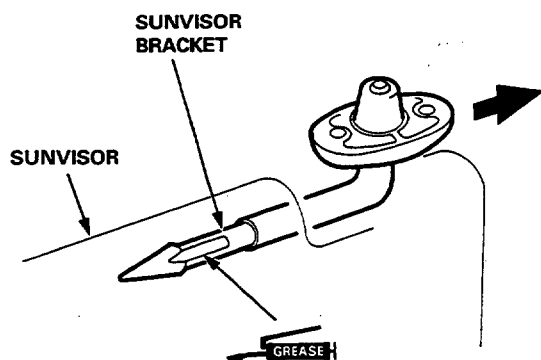

3. Remove the grab handles (front and rear passenger's) and grab hole caps (driver's).

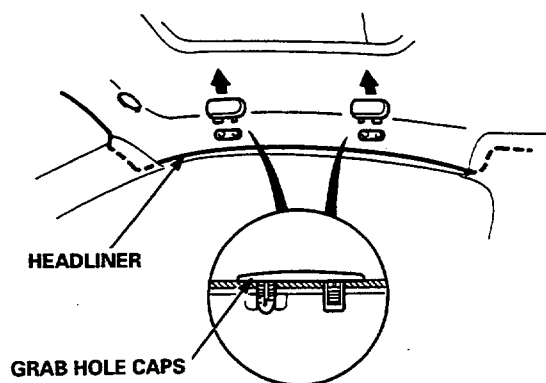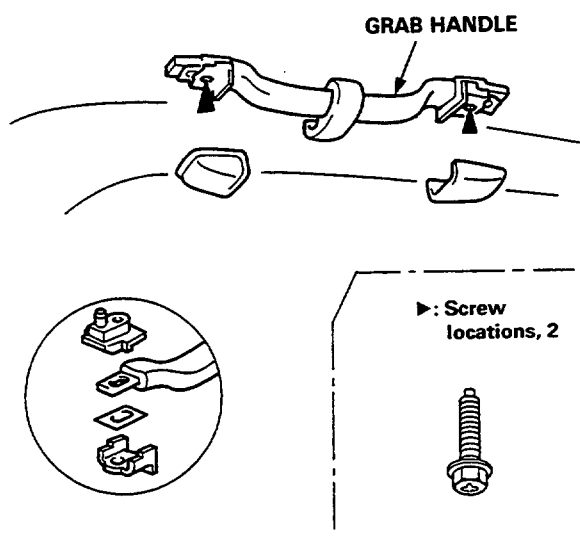

4. Open the tailgate, then remove the rear roof trim.

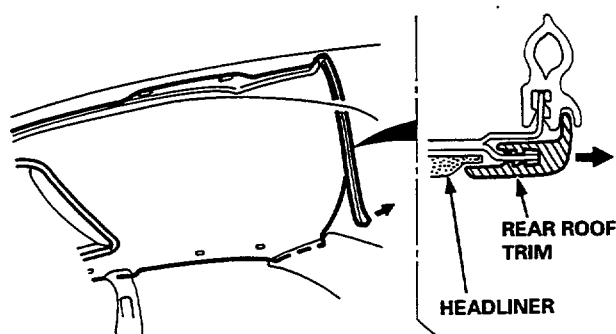



(cont'd)

# Headliner

## Replacement (cont'd)


5. Remove the upper portion of the center pillar upper trim and rear pillar trim panel on each side (see pages 20-56, 57).
6. Remove the roof trim and socket plug (sunroof model). Remove the headliner.

▷: Clip locations, 2

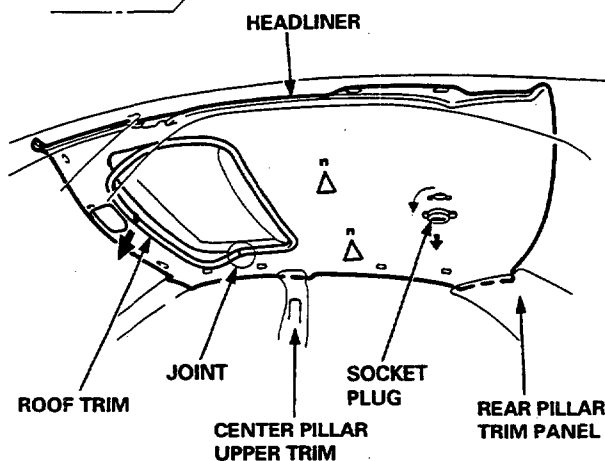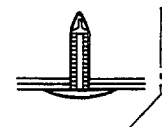


7. Lower the headliner as shown.

NOTE: Take care not to bend and scratch the headliner.

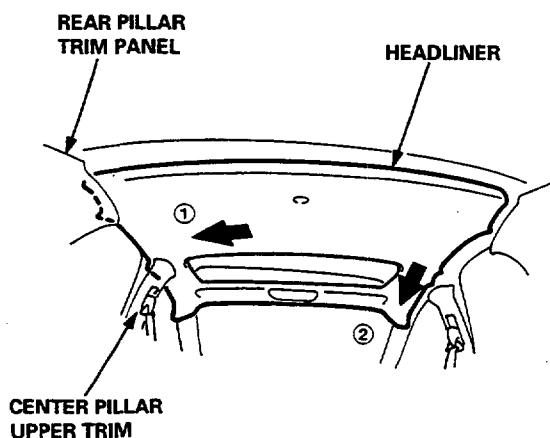

8. Remove the headliner through the tailgate opening.

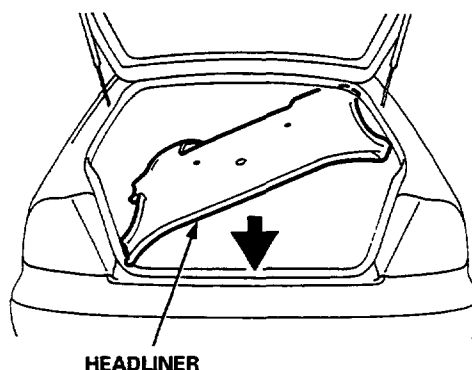

9. Installation is the reverse of the removal procedure.

### NOTE:

- When inserting the headliner through the tailgate opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that both sides of the headliner are securely attached to the trim and panels.
- When installing the roof trim, install the joint toward the right side center.