



Seats

Rear Seat Cover Replacement (cont'd)


4. Remove the headrest and headrest guides.

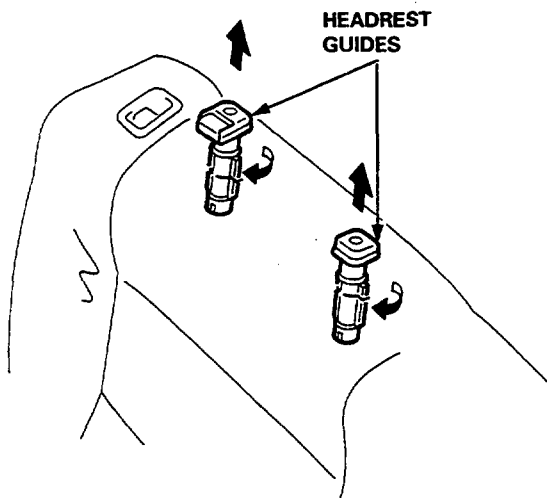


5. Remove the back cover, then pull back the seat-back cover all the way around.

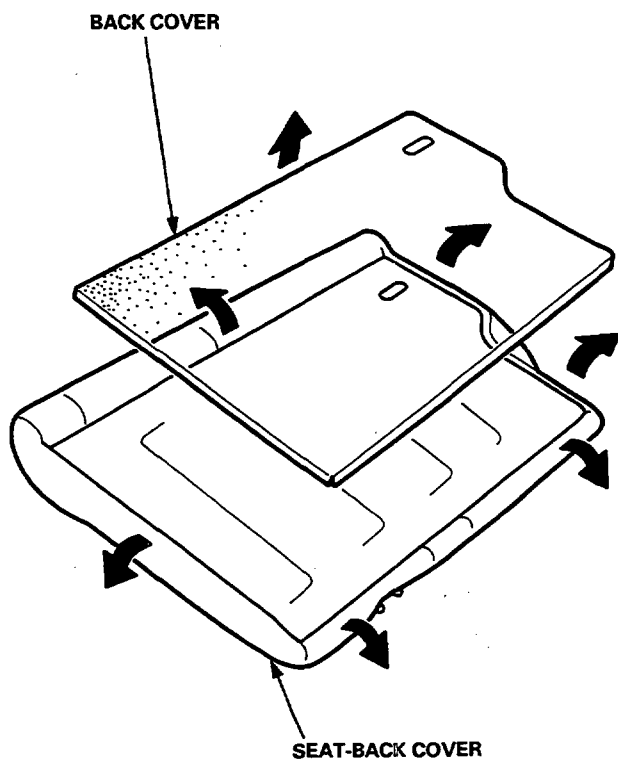

6. Remove the release button escutcheon and seat belt tongue locator, then remove the seat-back frame.

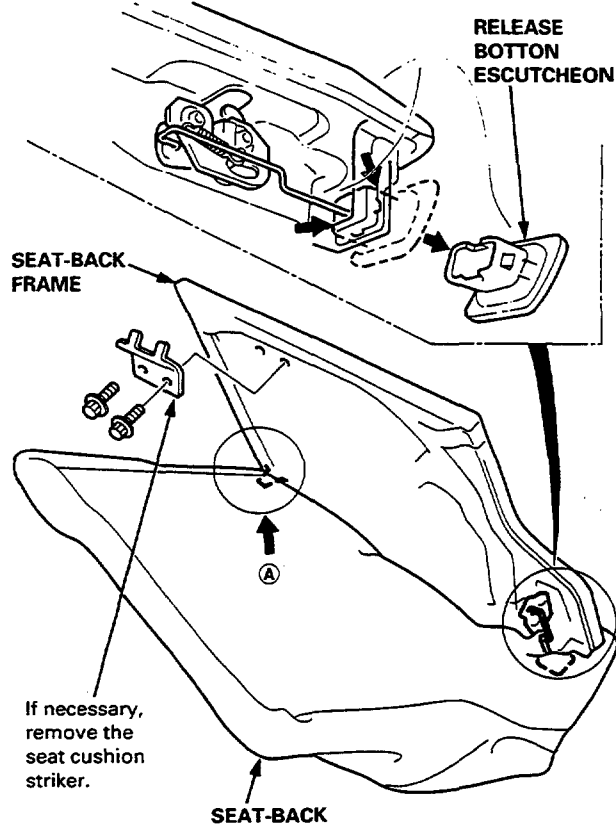


Location A:

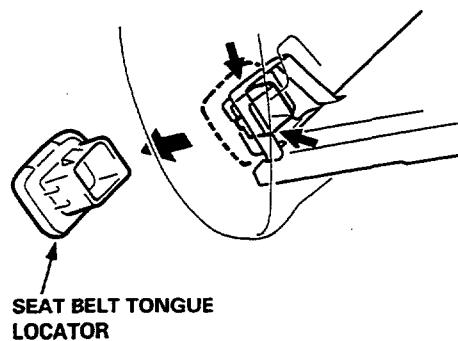




7. If necessary, remove the seat-back latch from the seat-back frame.

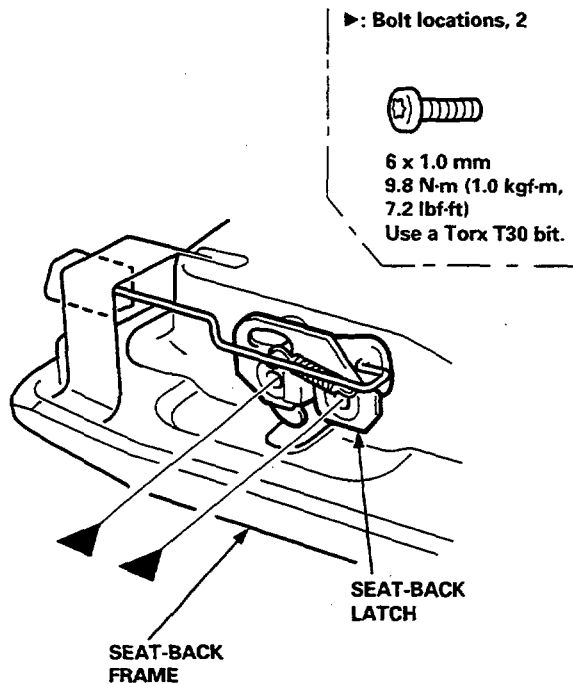

8. Pull back the seat-back cover all the way around, then release the clips.

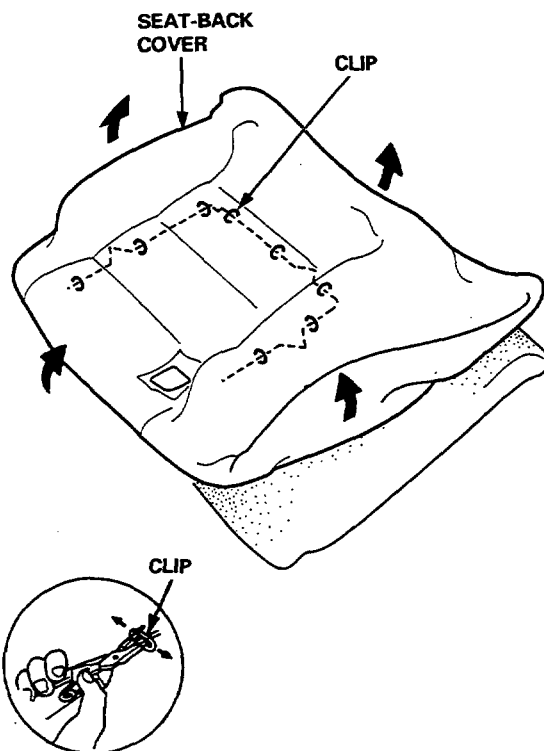

9. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles when installing a seat covers, make sure the material is stretched evenly over the pad before securing all the clips.
- Replace the released clips with new ones.

