



Consoles, Front and Rear


Replacement

SRS wire harnesses are routed near the front console.

CAUTION:

- All SRS wire harnesses are covered with yellow insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, turn the ignition switch OFF, disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
- Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.
- Before you disconnect any part of an SRS wire harness, connect the short connectors (RED) to the airbags.
- For additional precautions, refer to page 23-B6 in the SRS sub-section.

NOTE: The illustration shows the KG model. The KE model is symmetrical to the KG model.

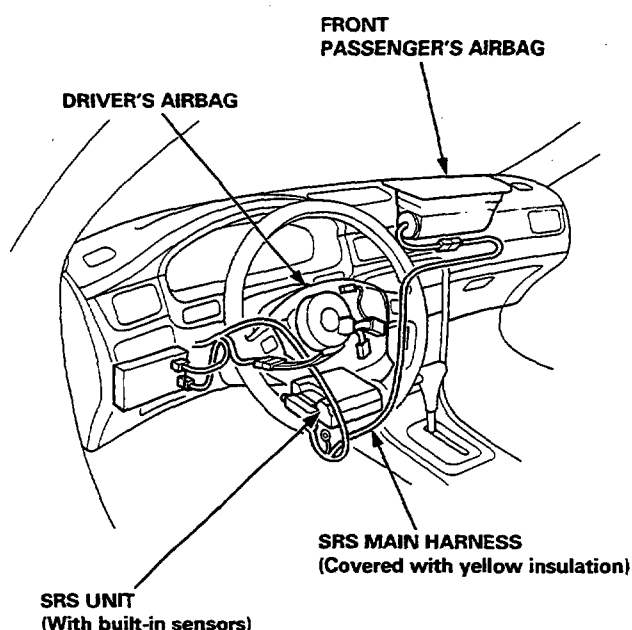


NOTE:

- Take care not to scratch the front and rear consoles, front seats and dashboard.
- LHD is shown, RHD is symmetrical.

CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

1. Remove the access lid.

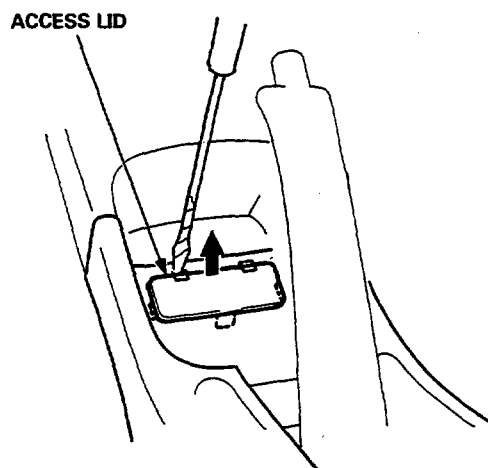


2. Remove the screws.

►: Screw locations

A ►, 2



B ►, 2

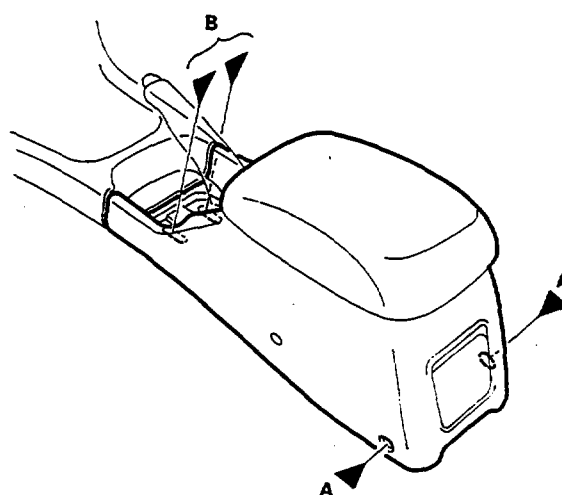

(cont'd)


Consoles, Front and Rear

Replacement (cont'd)


3. Remove the rear console.

NOTE:

- Lift up the parking brake lever.
- Detach the hooks, lift the rear of the rear console, and disconnect the power window switch connectors.

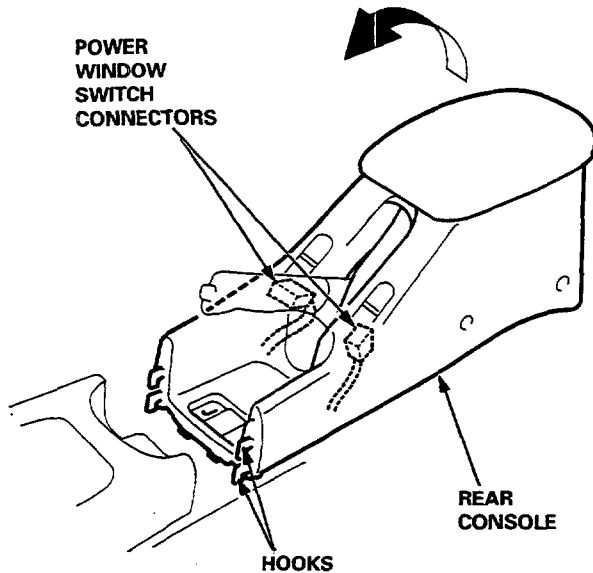


4. Remove the switches and stereo radio/cassette (see section 23) or radio panel.

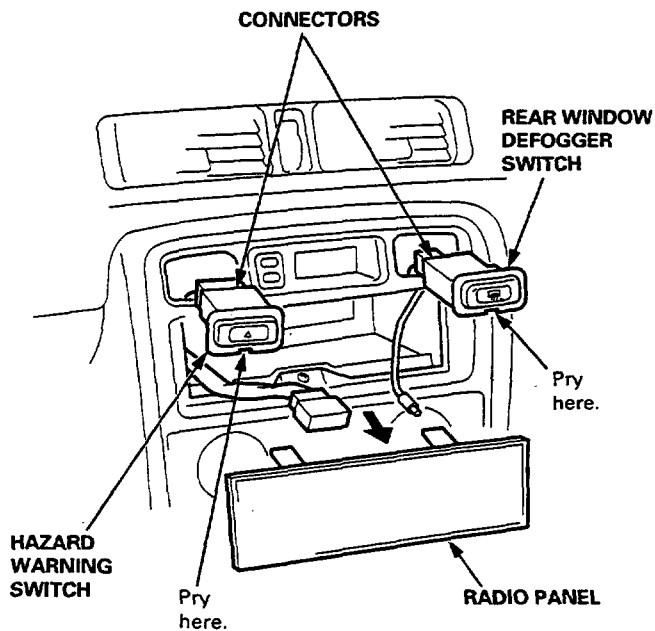


5. Remove the screws.

6. M/T model: Remove the shift lever knob.

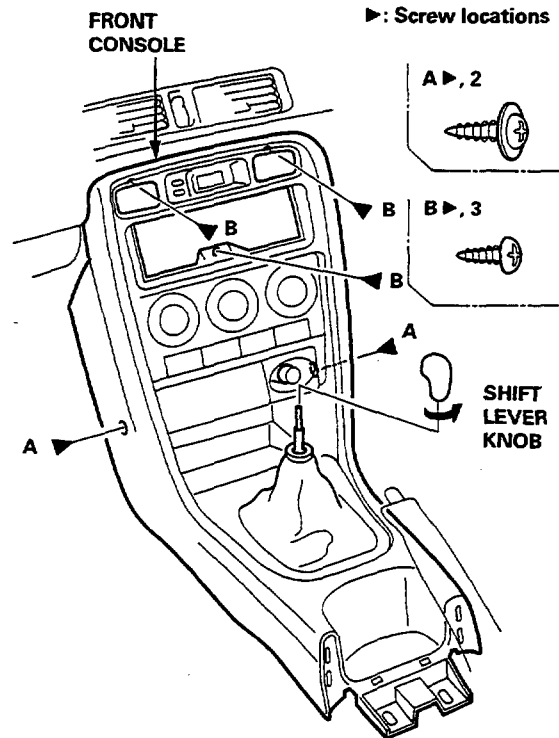

7. A/T model: Remove the front console lower panel.


Clip locations, 2

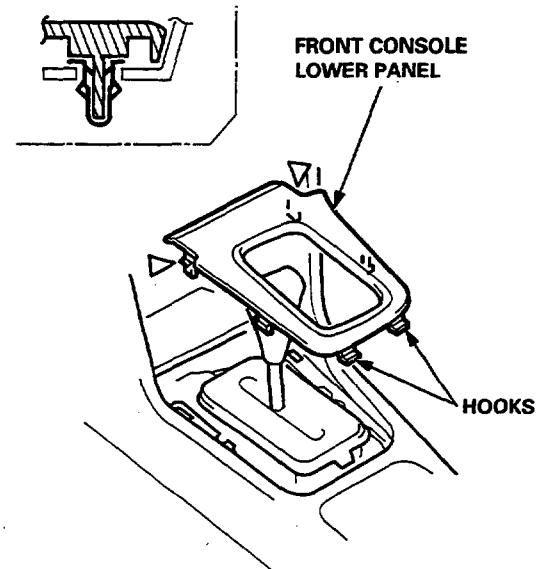



8. Remove the front console and disconnect the connector.

NOTE: Wrap the shift lever and A/T gear position indicator panel with a shop towel to prevent damage.

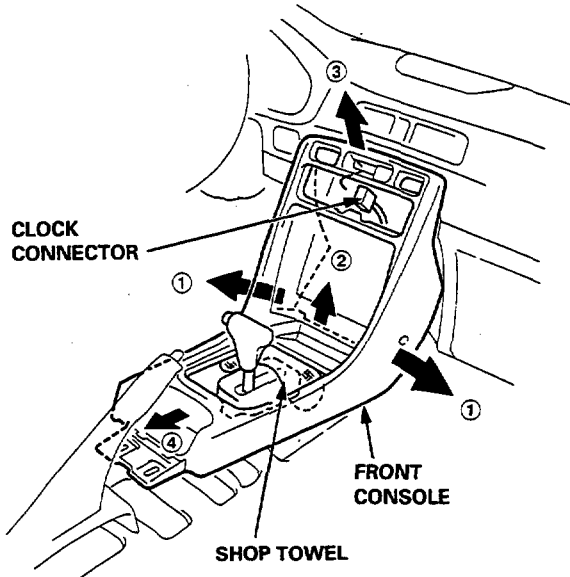

9. If necessary, disassemble the front console.


►: Screw locations, 12



A►: Clip locations, 2




B►: Push nut locations, 3

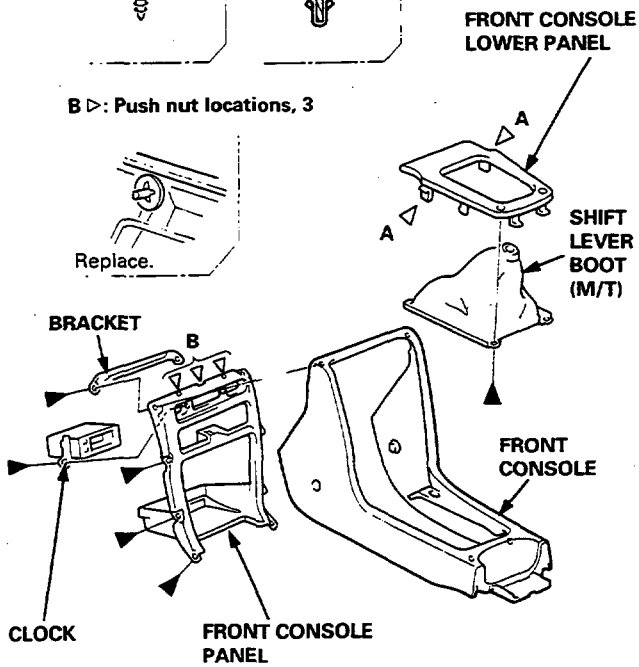

10. If necessary, disassemble the rear console.

►: Screw locations, 16

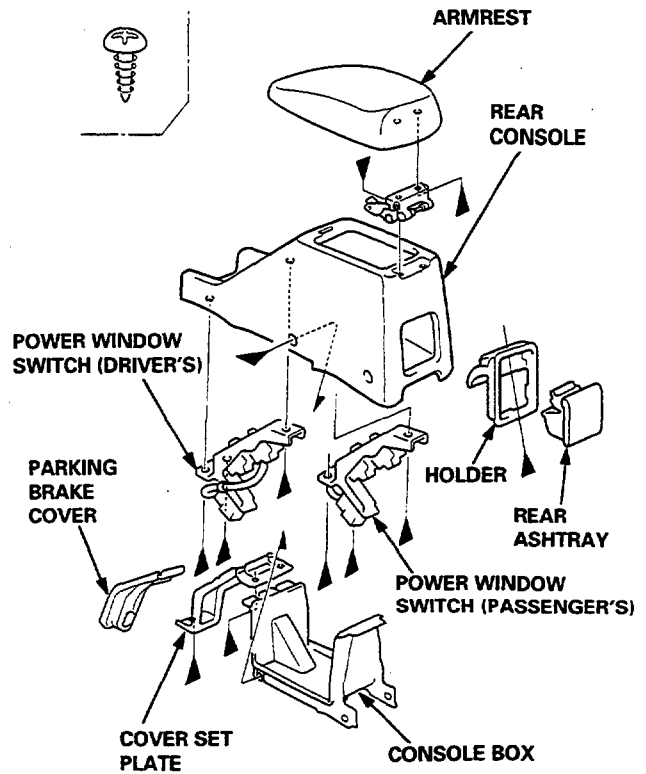

11. Installation is the reverse of the removal procedure.