

# Troubleshooting

## Symptom Chart

NOTE: Check the engine coolant level and allow the engine to warm up before troubleshooting.

SYMPTOM		REMEDY
Hot air flow is low.	Blower motor runs, but one or more speeds are inoperative.	Follow the flowchart (see page 21-5).
	Blower runs properly.	Check for the following: <ul style="list-style-type: none"> <li>• Clogged heater duct</li> <li>• Clogged heater outlet</li> <li>• Incorrect door position</li> </ul>
No hot air flow	Blower motor does not run at all.	Follow the flowchart (see page 21-7).
	Blower motor runs.	Check for the following: <ul style="list-style-type: none"> <li>• Clogged heater duct</li> <li>• Clogged blower outlet</li> <li>• Clogged heater valve</li> <li>• Faulty air mix door</li> <li>• Heater valve cable adjustment (see page 21-20)</li> <li>• Air mix control cable adjustment (see page 21-20)</li> <li>• Faulty thermostat (see section 10)</li> <li>• Clogged evaporator (with air conditioning)</li> <li>• Frozen evaporator (with air conditioning)</li> </ul>
Recirculation control door does not change between FRESH and RECIRCULATE.		Follow the flowchart (see page 21-10).