


Front Turn Signal Lights

Bulb Replacement

1. Remove the inner fender.
2. To replace the bulb, turn the bulb socket 45° counterclockwise, and remove it from the front turn signal light.

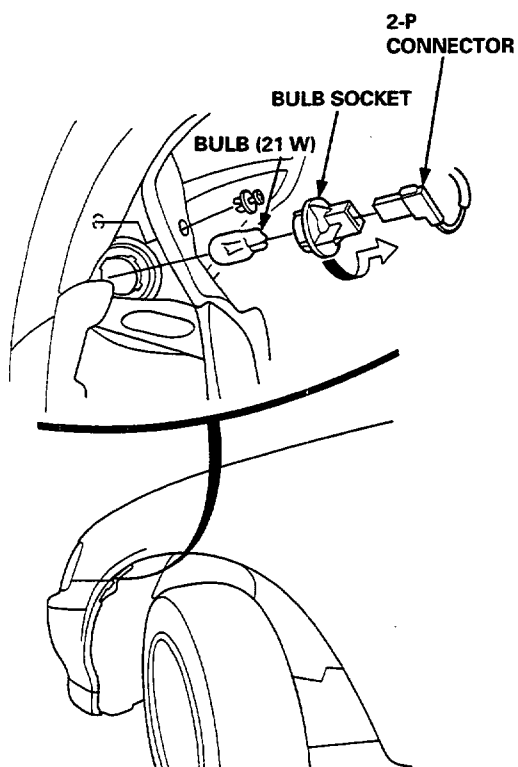

Side Turn Signal Lights

Replacement

1. Push the retaining spring, and remove the side turn signal light.
2. Remove the bulb socket from the light housing, then replace the bulb.

