




Brake Lights


Circuit Diagram

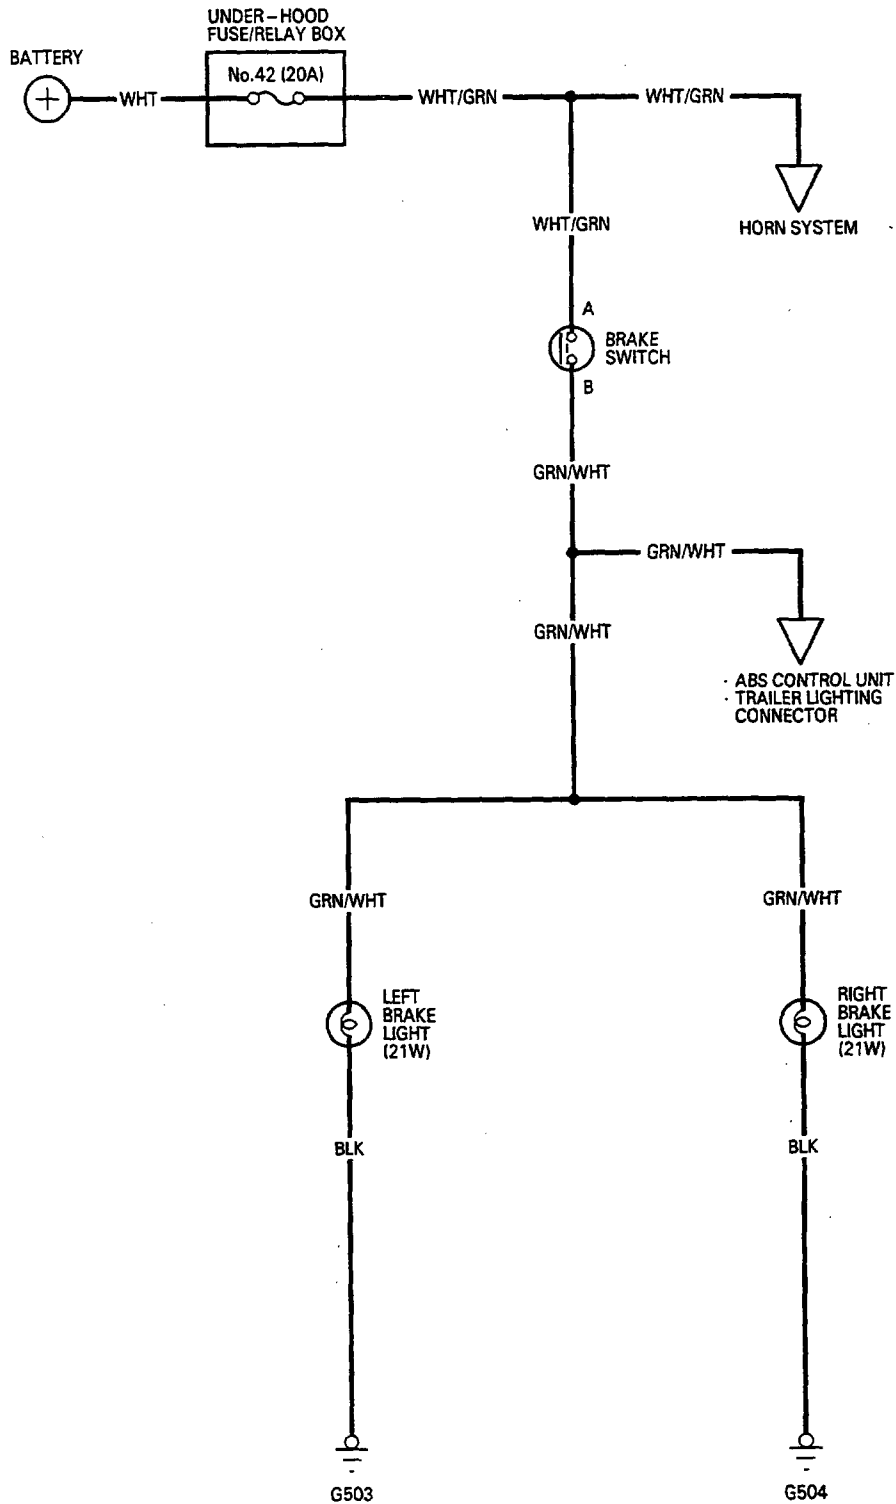

Brake Lights

Brake Switch Test

1. If one of the brake lights does not go on, check the bulb in the taillight.
2. If none of the brake lights go on, check the No. 42 (20 A) fuse in the under-hood fuse/relay box.
3. If the fuse and bulbs are OK, disconnect the 2-P connector from the brake switch.

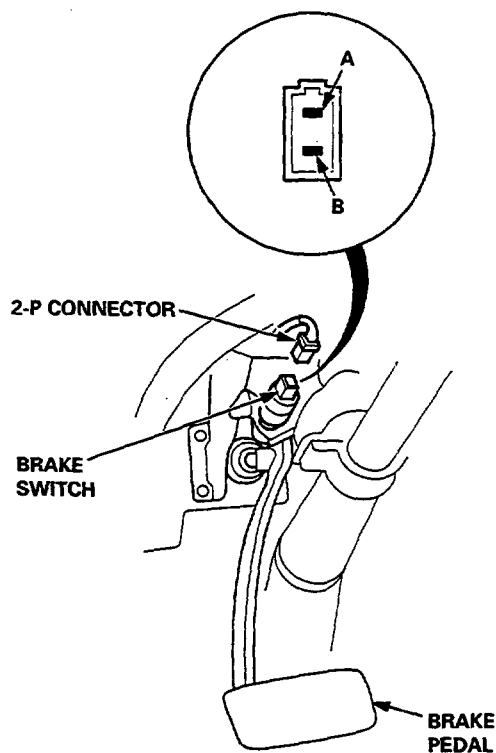

4. Check for continuity between the terminals in each switch position according to the table.

Terminal	A	B
Position		
RELEASED		
PUSHED	○	○

- If there is no continuity, adjust the pedal height (see section 19), and recheck.
- If there is still no continuity, replace the switch.
- If there is continuity, but the brake lights do not go on, check for:
 - poor ground (G503, G504).
 - an open in the WHT/GRN or GRN/WHT wire.